
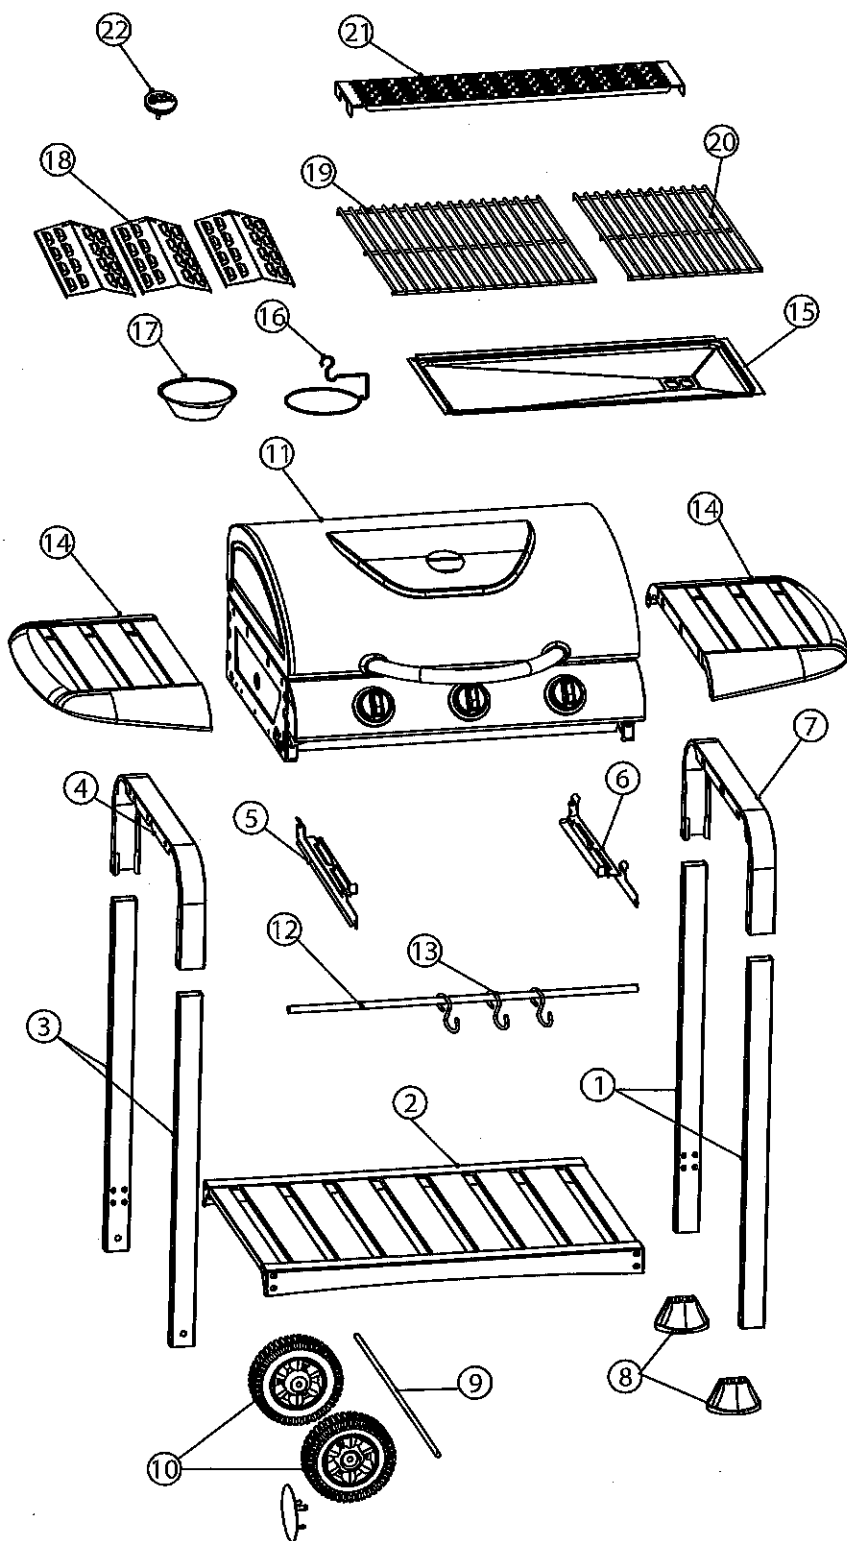
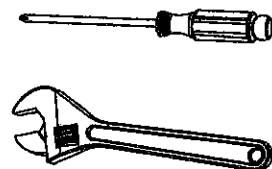






# 02079





## ISTRUZIONI MONTAGGIO

09 21/24

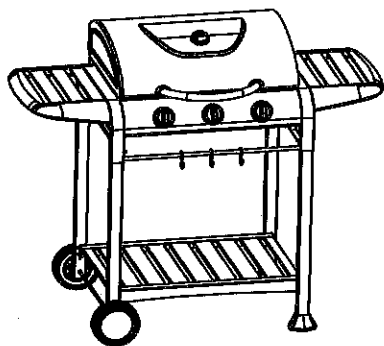


① *2(R)	② *1	③ *2(L)
④ *1(L)	⑤ *1(L)	⑥ *1(R)
⑦ *1(R)	⑧ *2	⑨ *1
⑩ *2	⑪ *1	⑫ *1
⑬ *3	⑭ *2	⑮ *1
⑯ *1	⑰ *1	⑱ *3
⑲ *1	⑳ *1	㉑ *1
㉒ *1		
A M5-10*32	BM5-50*8	CM5*6
D*2	E*2	

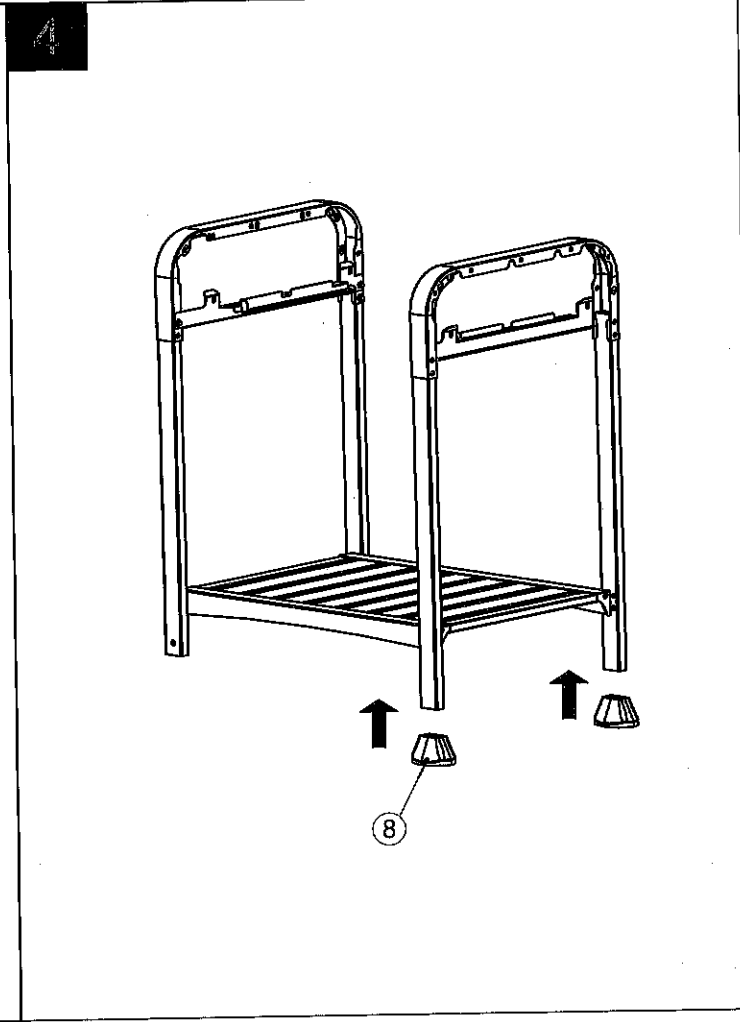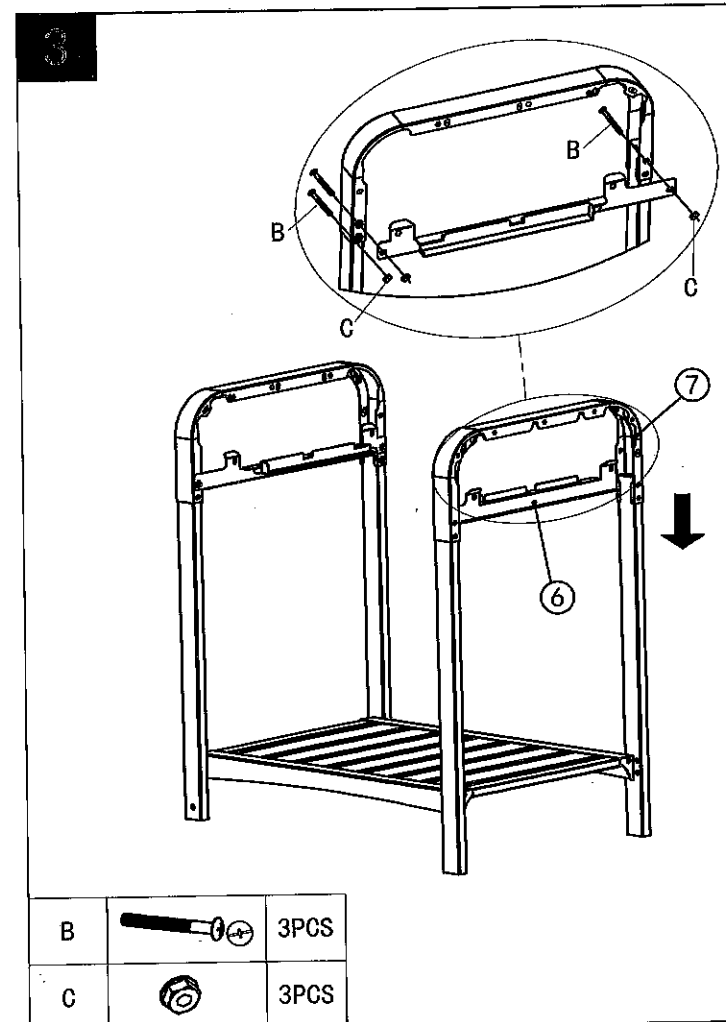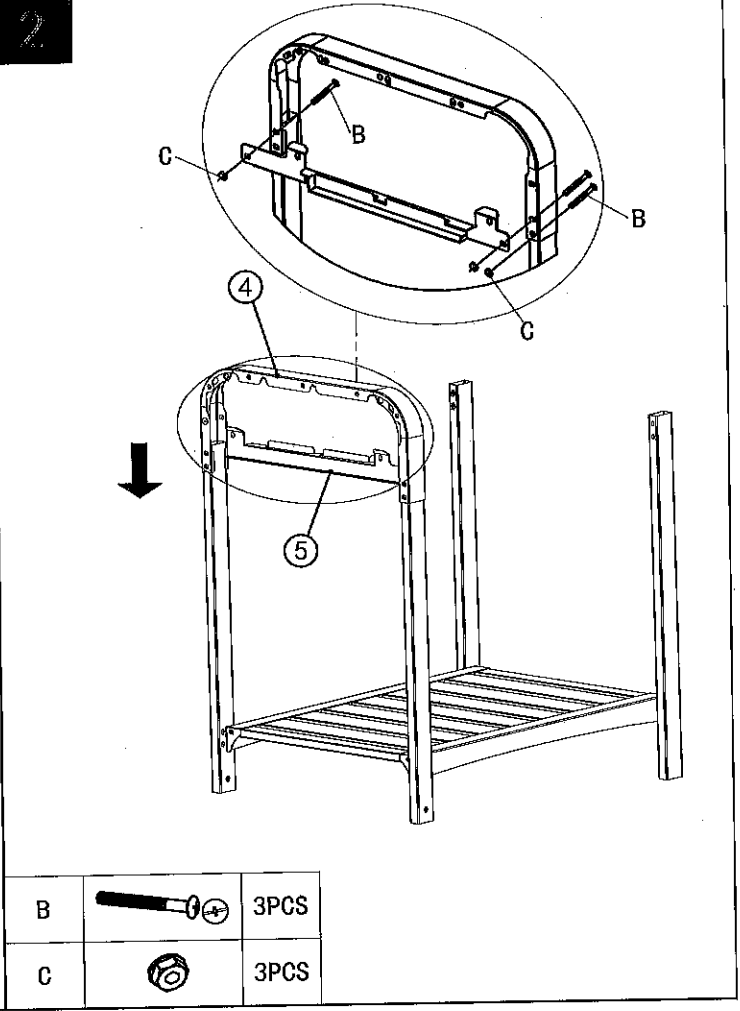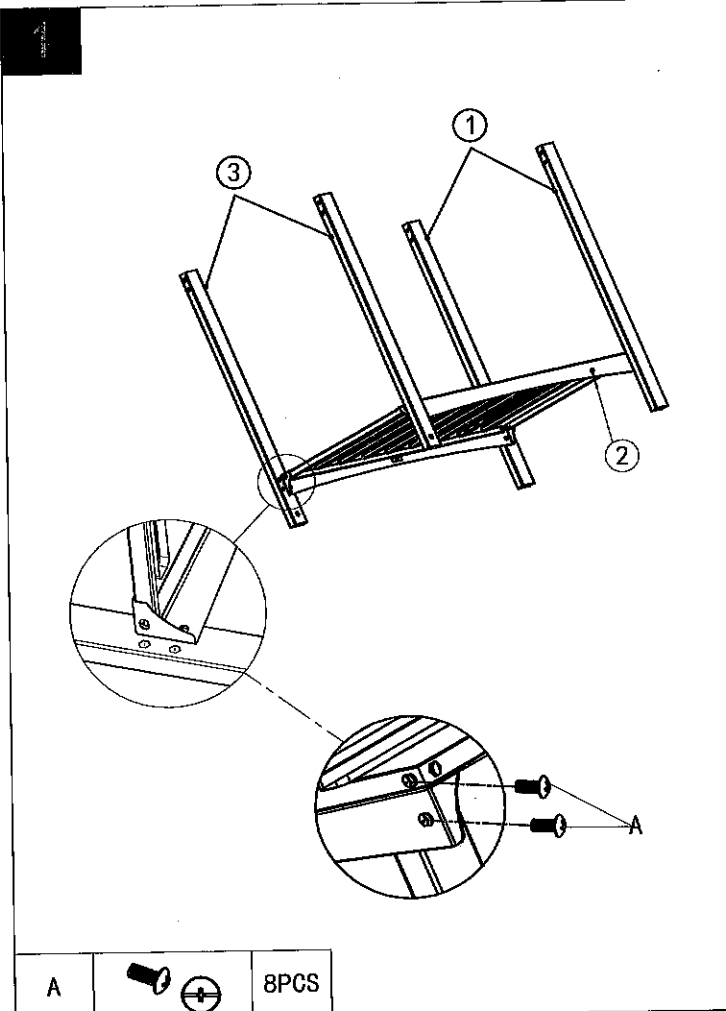


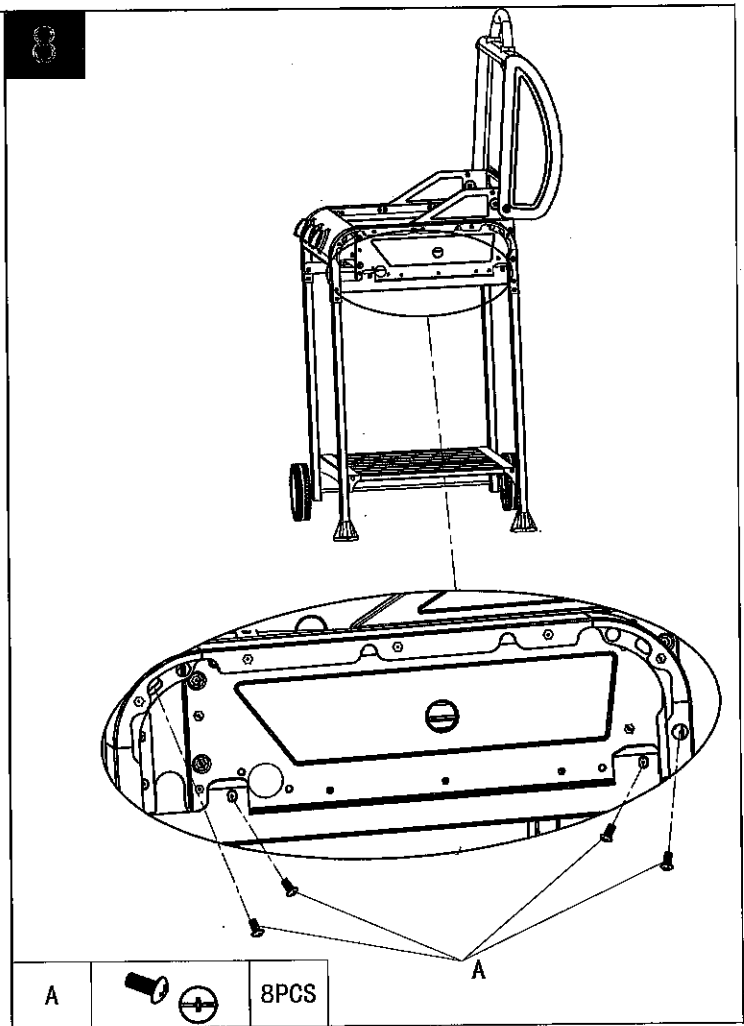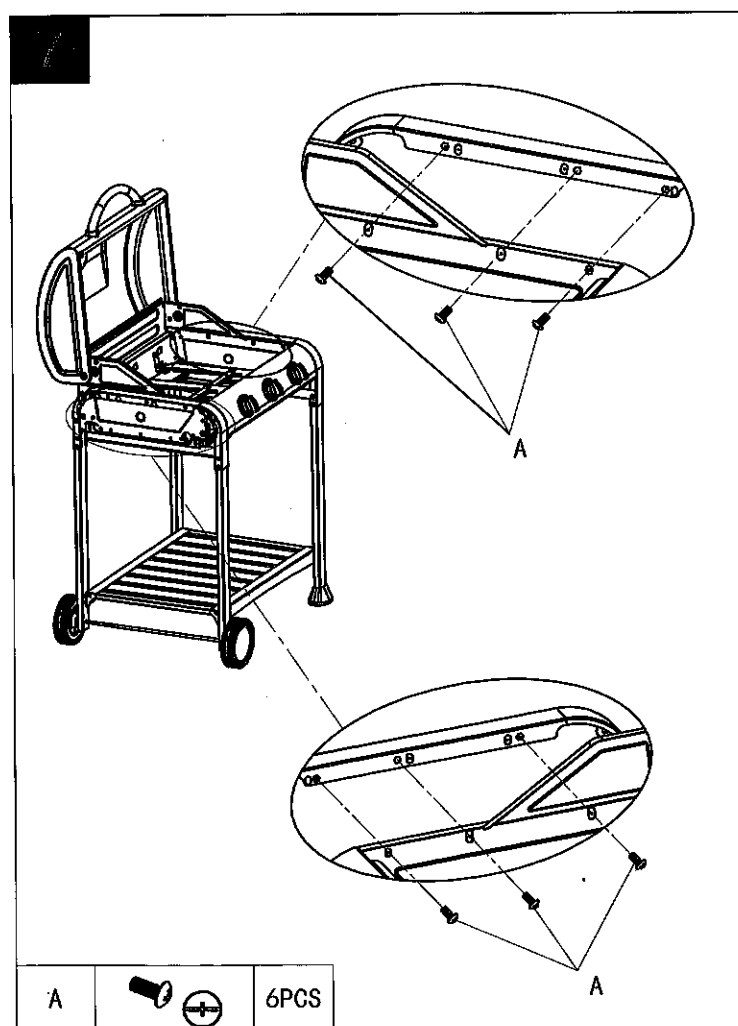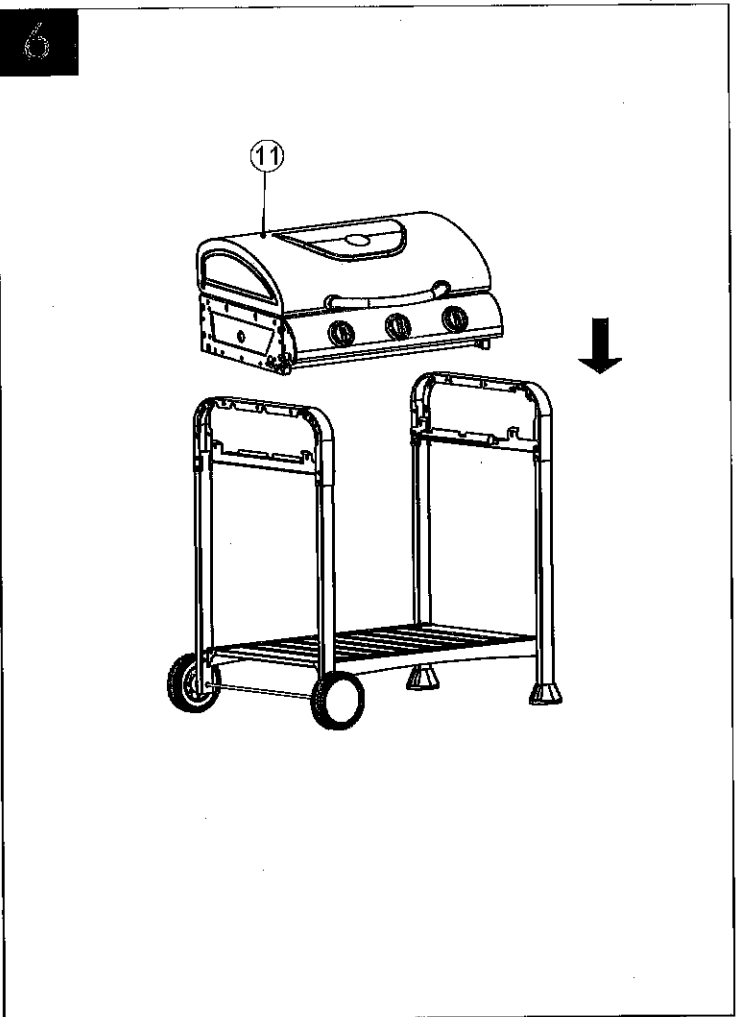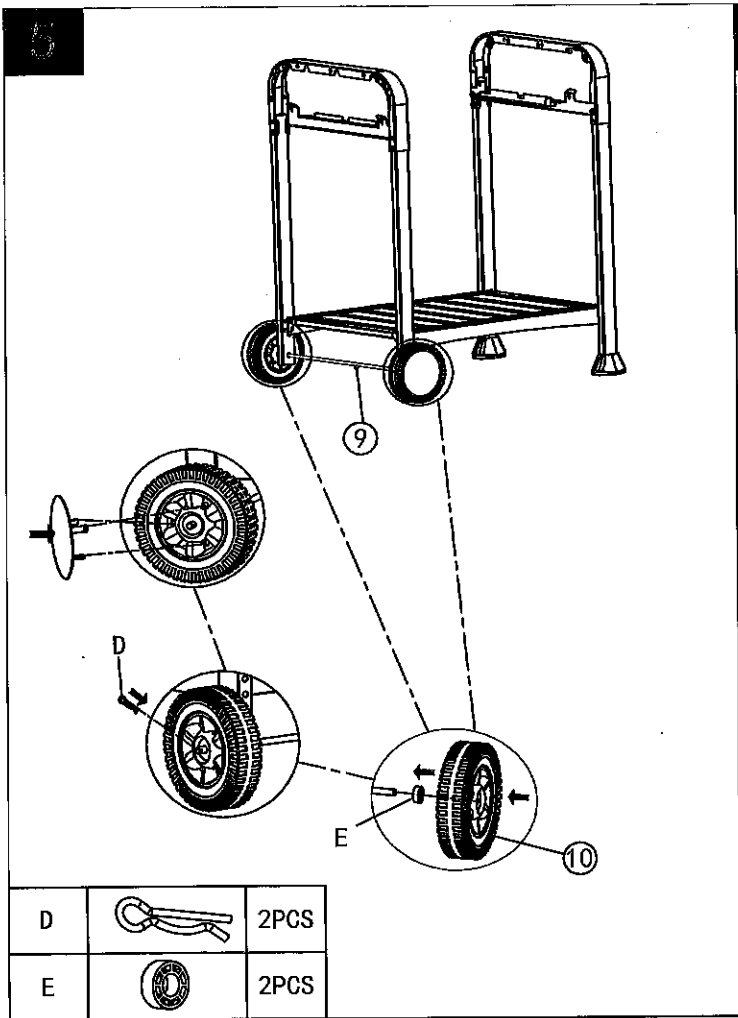

9

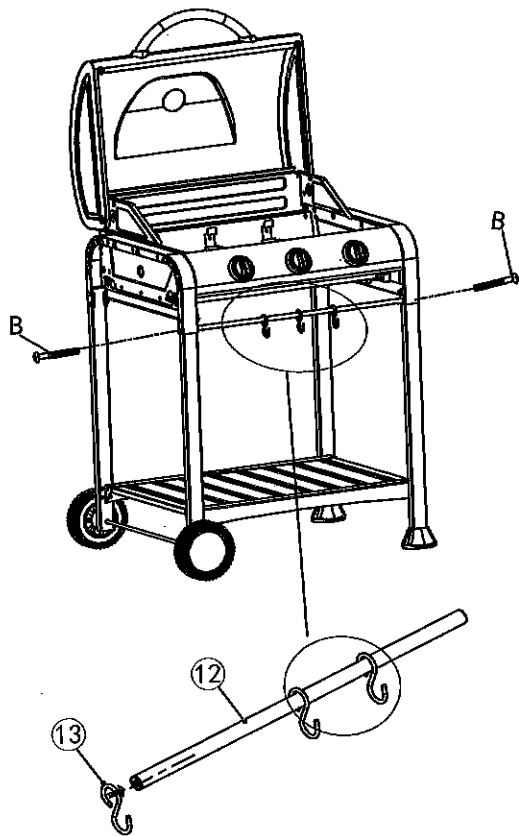


B



2PCS

10

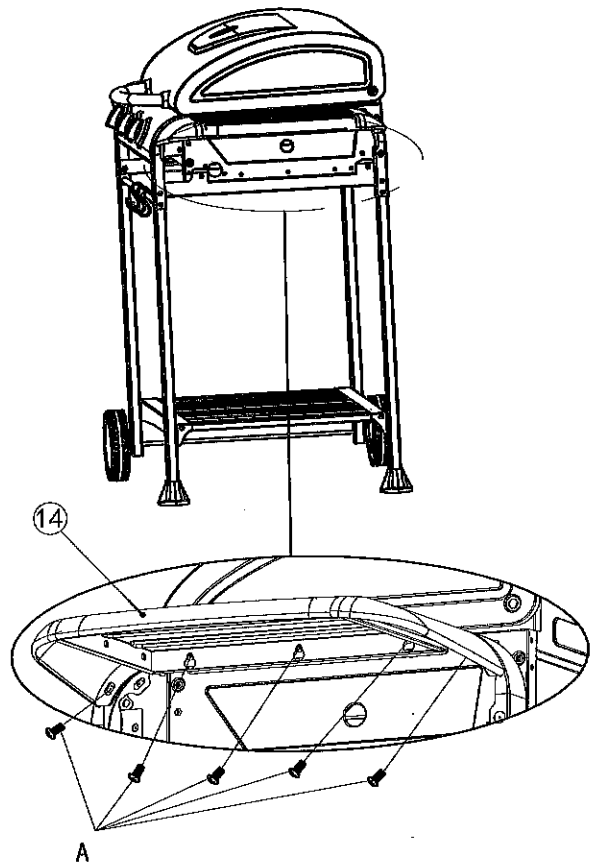


A




10PCS


11

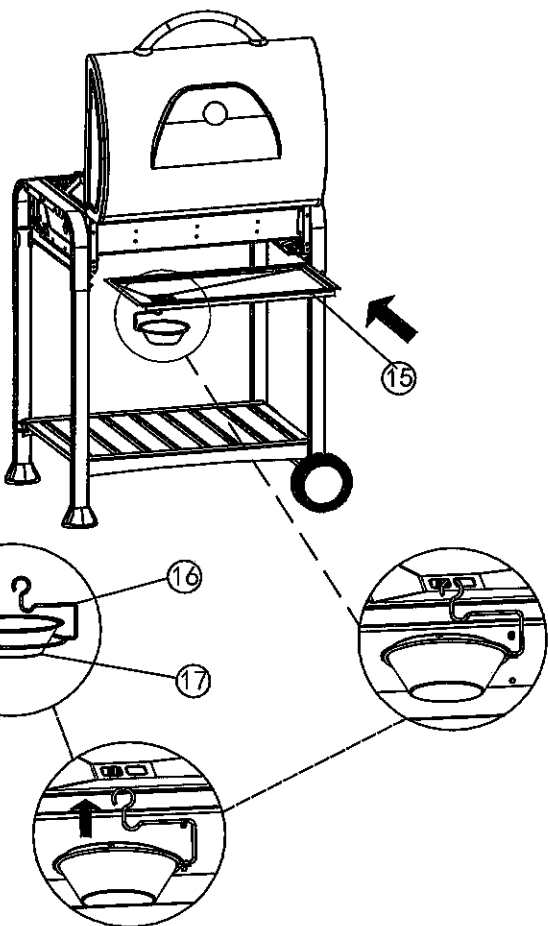


12

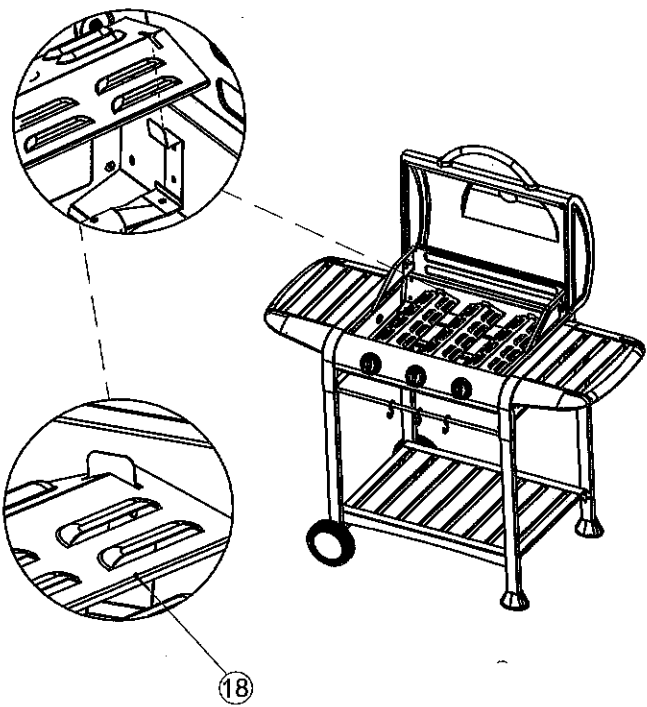


13

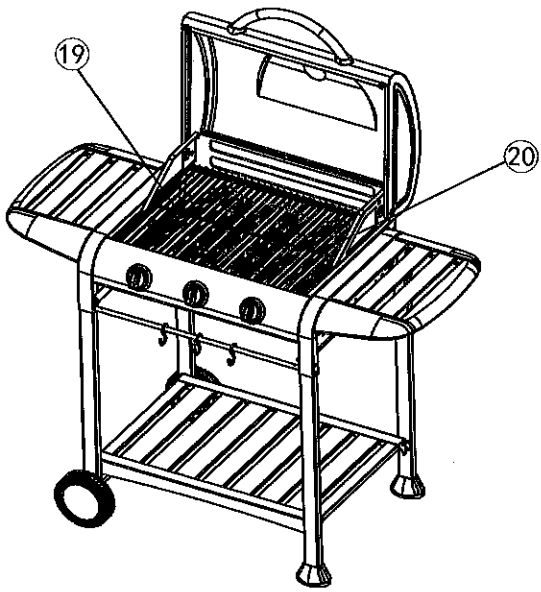

14

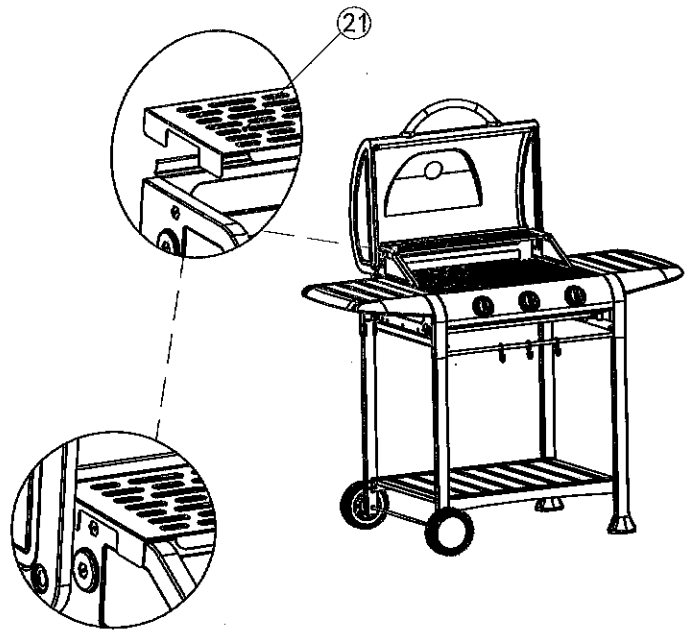

15

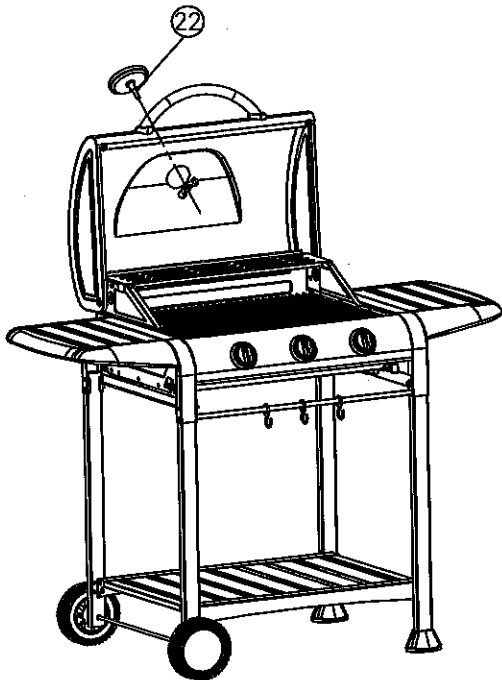

16

