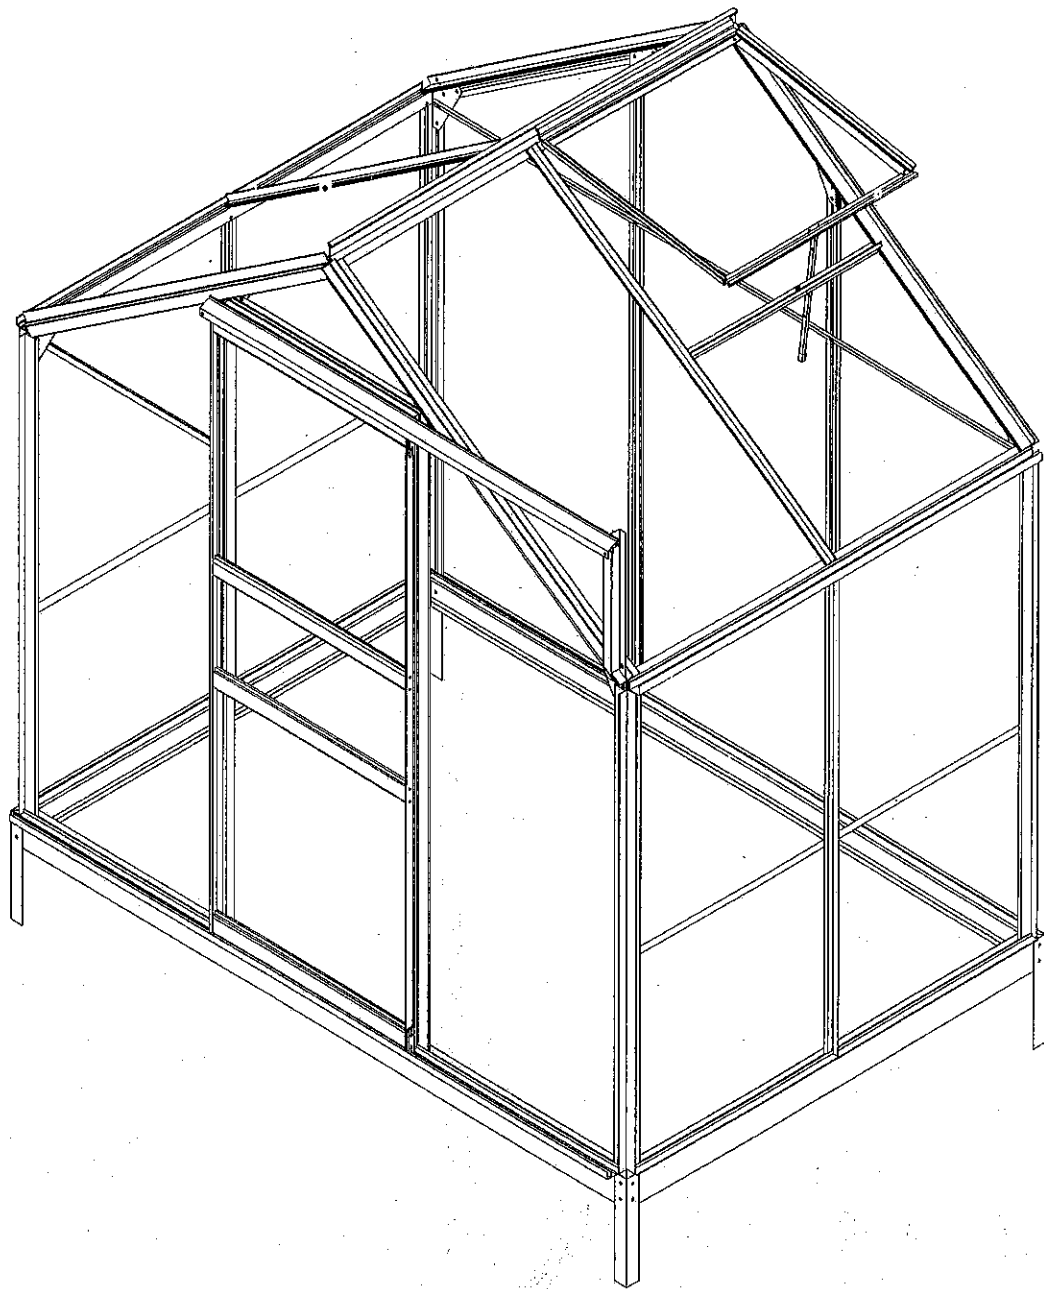


# Greenhouse Assembly

## Instruction 6X4FT



# **TO PREVENT INJURY, READ AND UNDERSTAND THE GREENHOUSE ASSEMBLY INSTRUCTIONS BEFORE USE.**

## **Notes:**

1. It takes about 1-2 hours to assemble the greenhouse by 2-3 persons.
2. The UV-protected side of the sheet is covered with opal white film and must face towards the sun.
3. Remove approximately 2 inches of film from all sheet edges before installing. Removing all film immediately after the construction is completed
4. Make sure the greenhouse is located on a flat, level surface.

## **GENERAL SAFETY, WARNINGS AND PRECAUTIONS**

### **KEEP WORK AREA CLEAN AND DRY.**

Cluttered, damp or wet work areas invite injuries.

**STAY ALERT.** Watch what you are doing at all times. Use common sense. Do not use the greenhouse when you are tired or distracted from the job at hand. It is recommended to use gloves for assembling the greenhouse.

### **MAINTAIN THIS PRODUCT WITH CARE.**

Keep the greenhouse clean and dry for better performance: maintenance should be performed regularly.

### **USE THE RIGHT PRODUCT FOR THE JOB.**

Do not attempt to force a small product to do the work of a larger industrial product. There are certain applications for which the greenhouse was designed. It will do the job better and more safely in the manner for which it was intended. Do not modify the greenhouse and do not use the greenhouse for a purpose for which it was not intended.






































### **MAINTAIN A SAFE WORKING ENVIRONMENT.**

Keep the work area tidy. Make sure there is adequate surrounding workspace. Avoid high traffic areas. Always keep the work area free of obstructions, grease, oil, trash and other debris.

### **PROPER GREENHOUSE LOCATION.**

Make sure the greenhouse is located on a flat, level surface.

# PARTS LIST

IMAGE	NO.	QTY	IMAGE	NO.	QTY	IMAGE	NO.	QTY
	F-01	4		F-21	1	screw ST4x10	F-A15a	8
	F-02	2		F-22	4	screw ST4x8	F-A16	2
	F-03	1		F-A01	2			
	F-04	1		F-A02	2			
	F-05	4		F-A03	2			
	F-06	2		F-A04	2			
	F-07	2		F-A05	2			
	F-08	1		F-A06	2			
	F-09	1		F-A07	1			
	F-10	1		F-A08	1			
	F-11	1		F-A09	2			
	F-12	1		F-A10	1			
	F-13	1		F-A11	1			
	F-14	2		F-A17	2			
	F-15	2		F-A12	1			
	F-16	2		F-A13	14			
	F-17	2		F-A14	106			
	F-18	1		F-A14a	3			
	F-19	8	screw ST4x14	F-A15	12			

# Ground Beam Foundation with Anchor Points

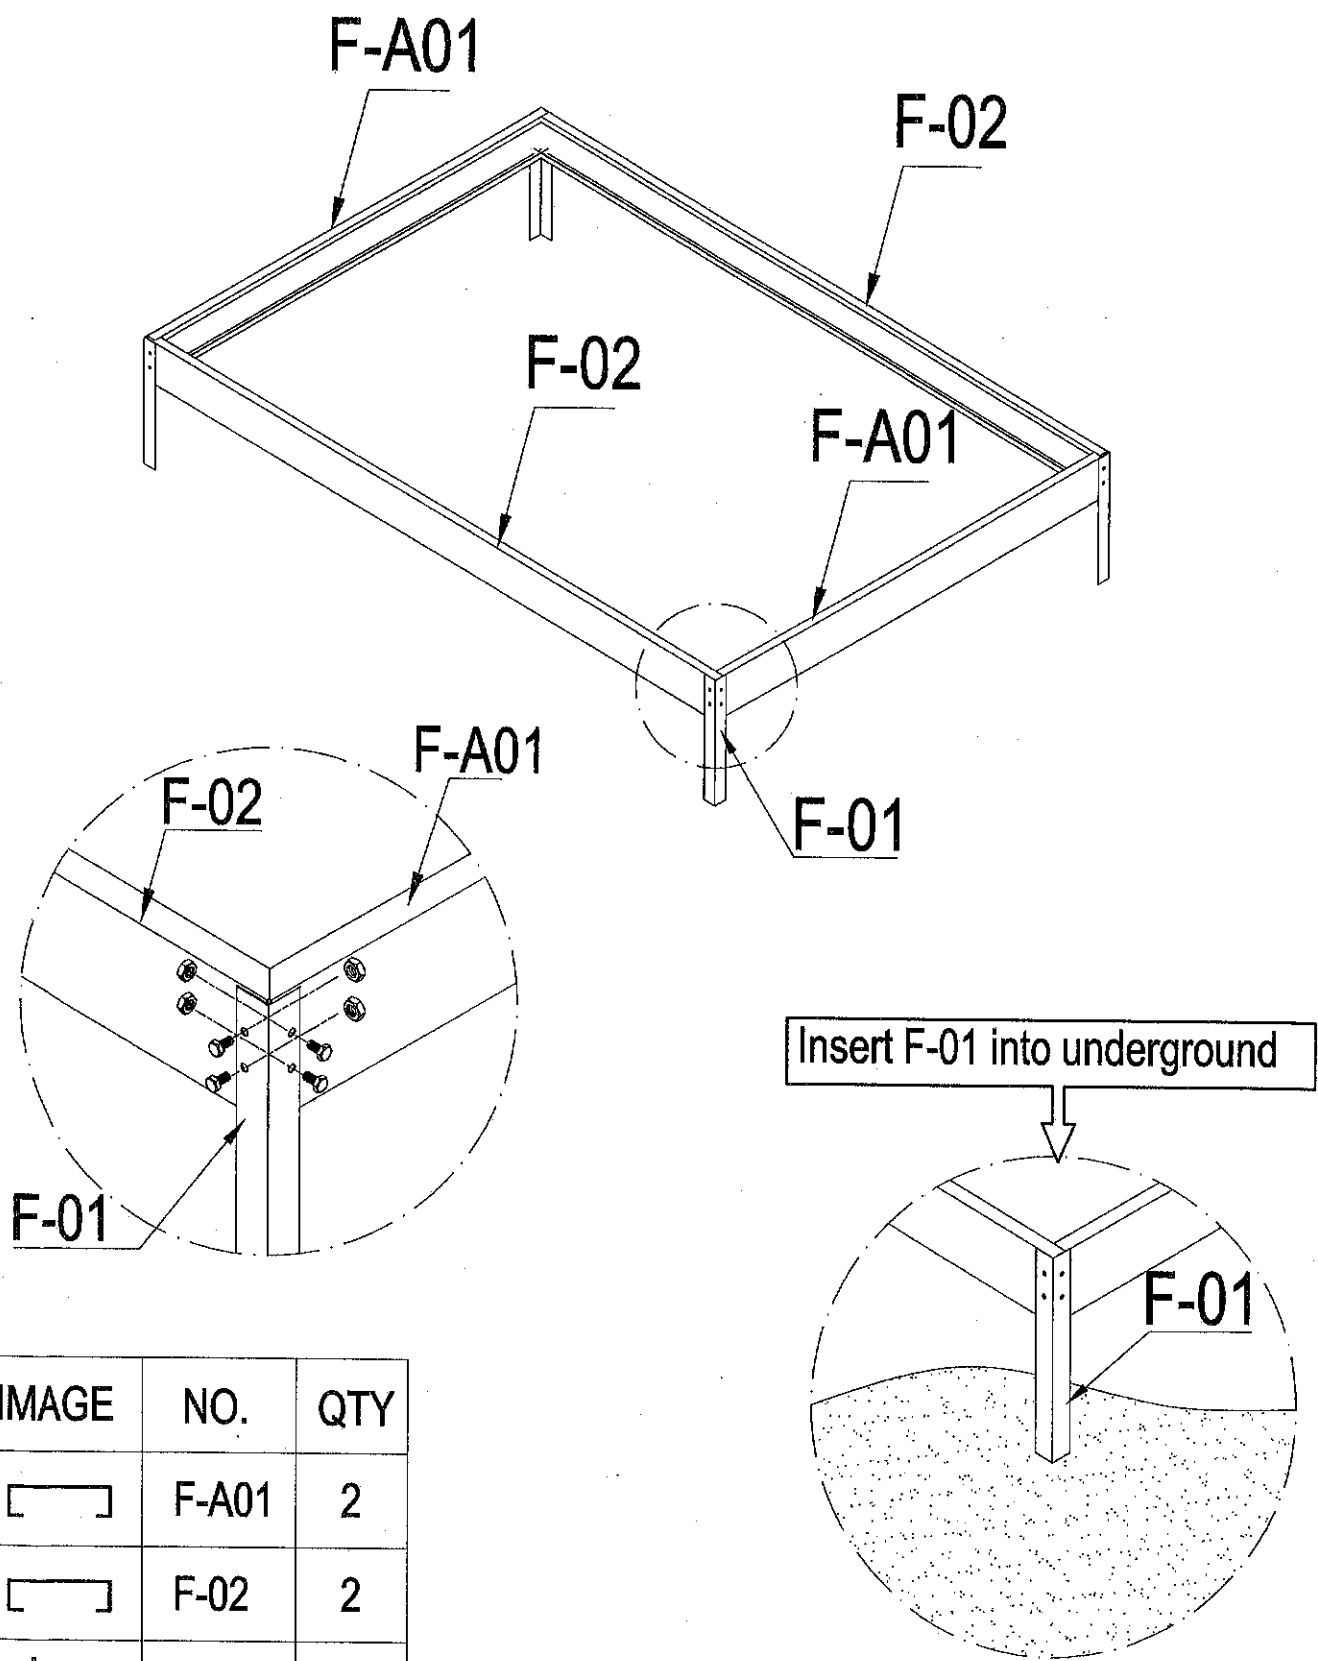




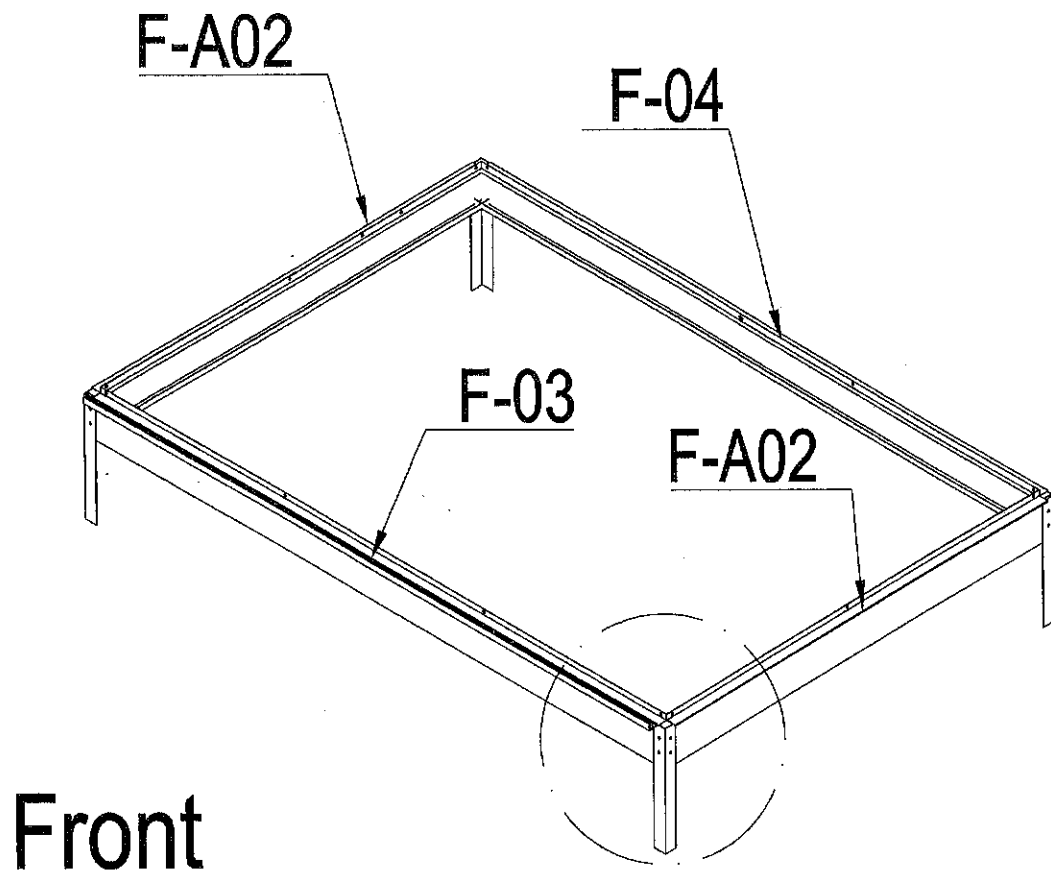


IMAGE	NO.	QTY
	F-A01	2
	F-02	2
	F-01	4
	F-A14	16



Front

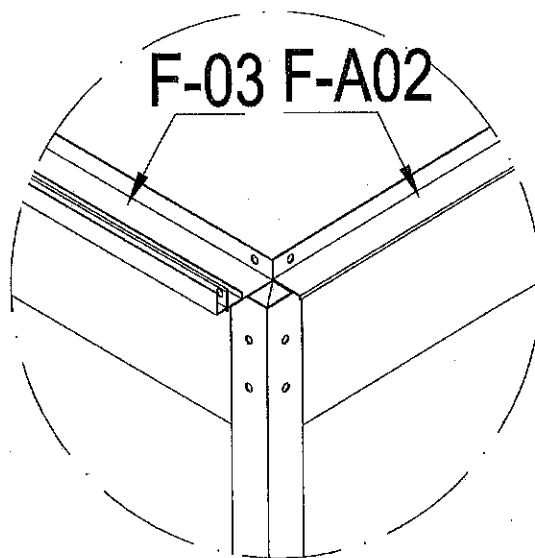



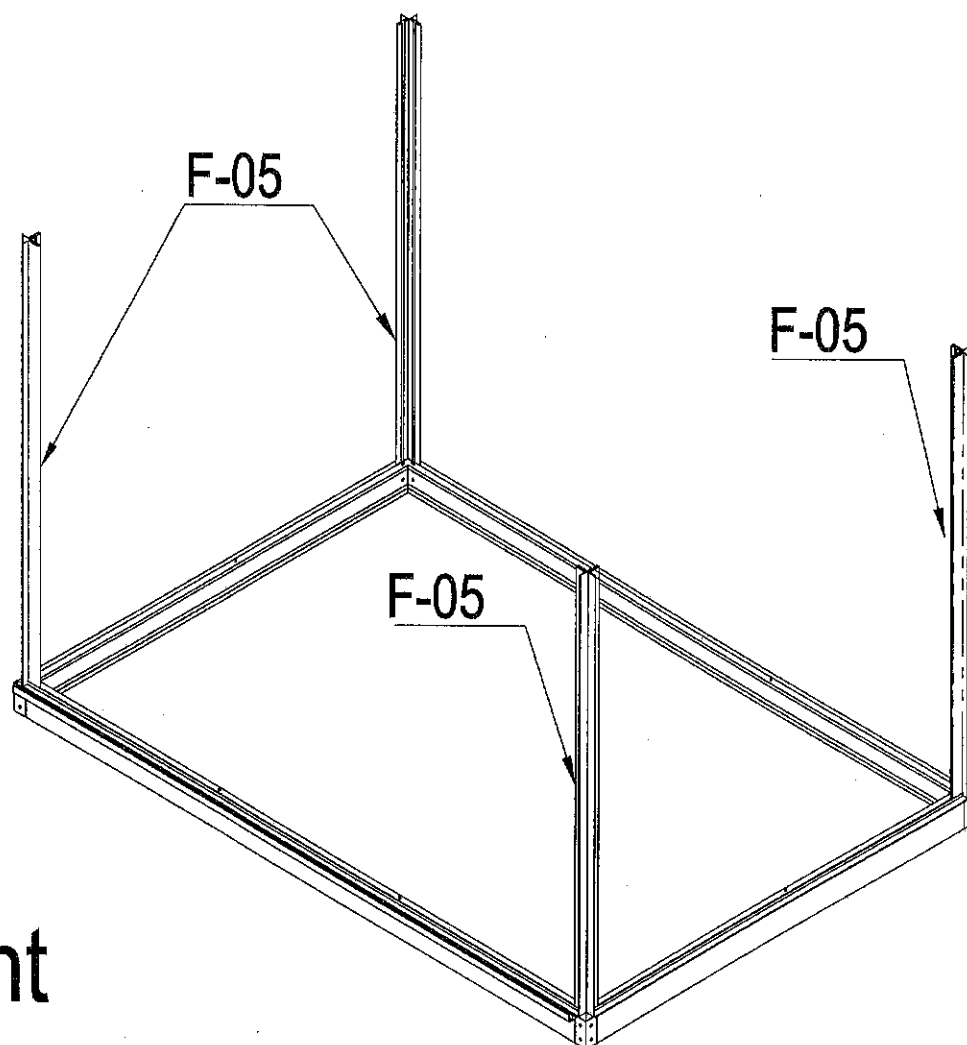


IMAGE	NO.	QTY
	F-A02	2
	F-04	1
	F-03	1



Front

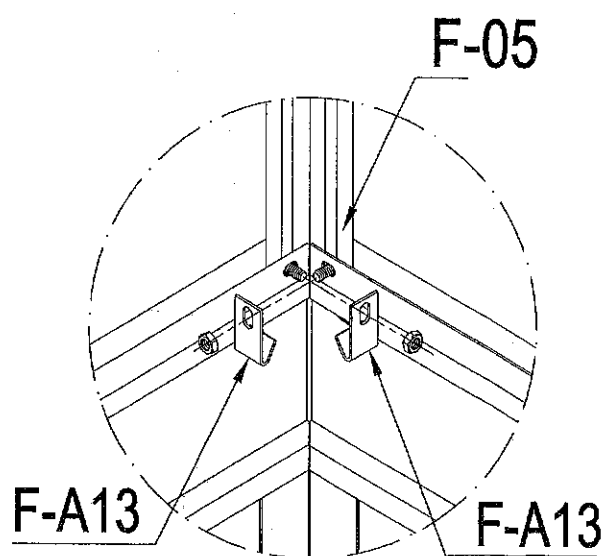





IMAGE	NO.	QTY
	F-05	4
	F-A13	8
	F-A14	8

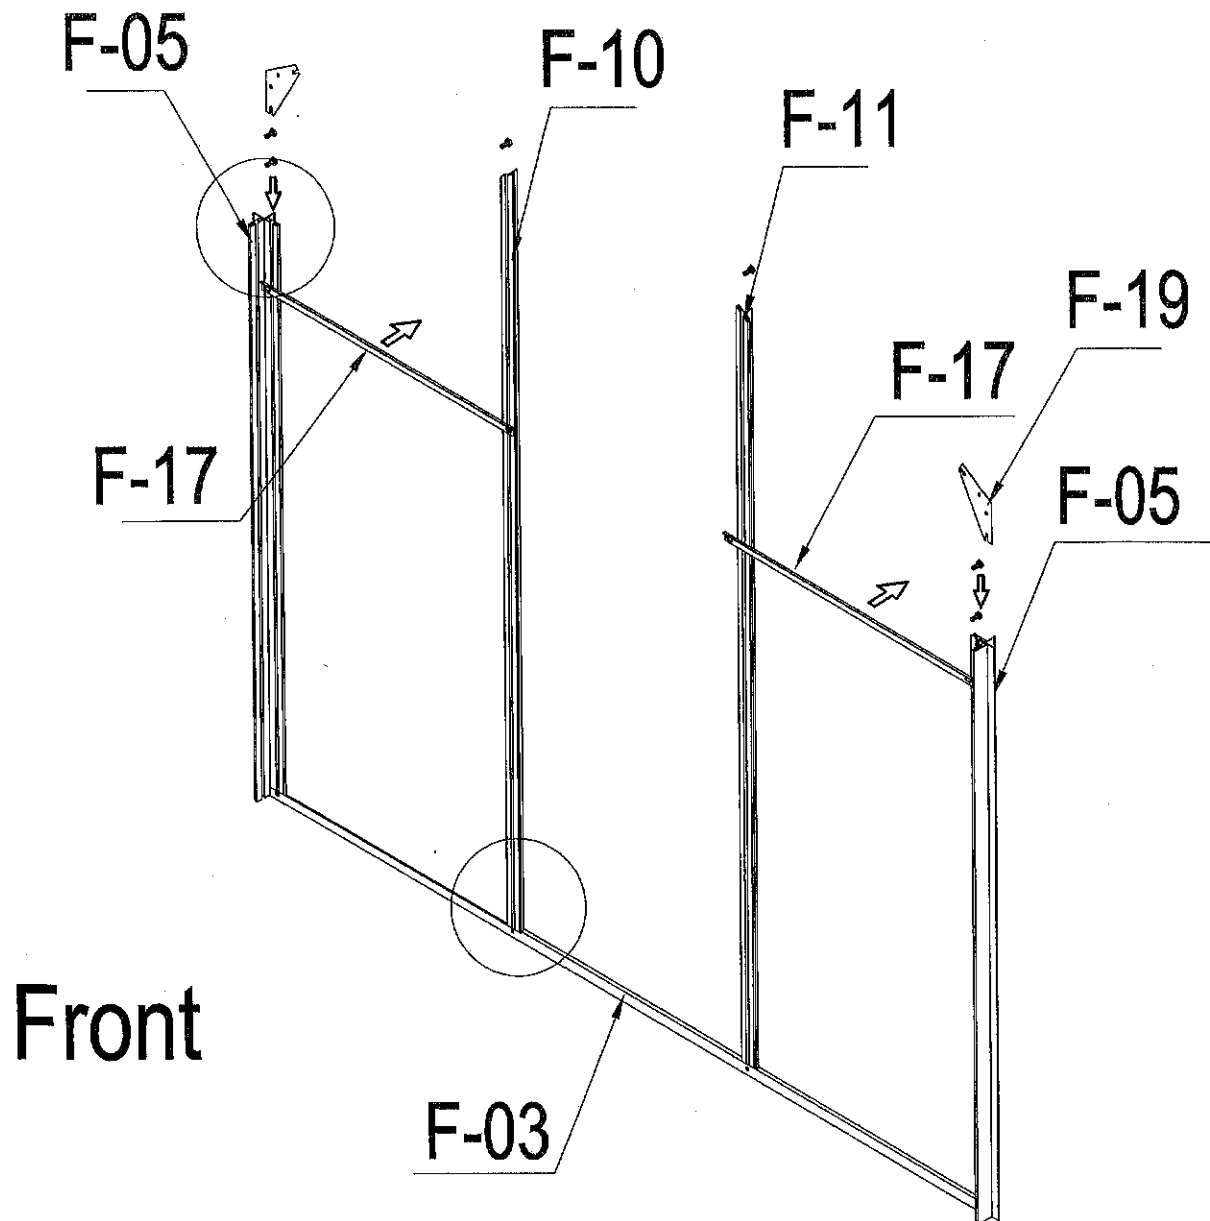






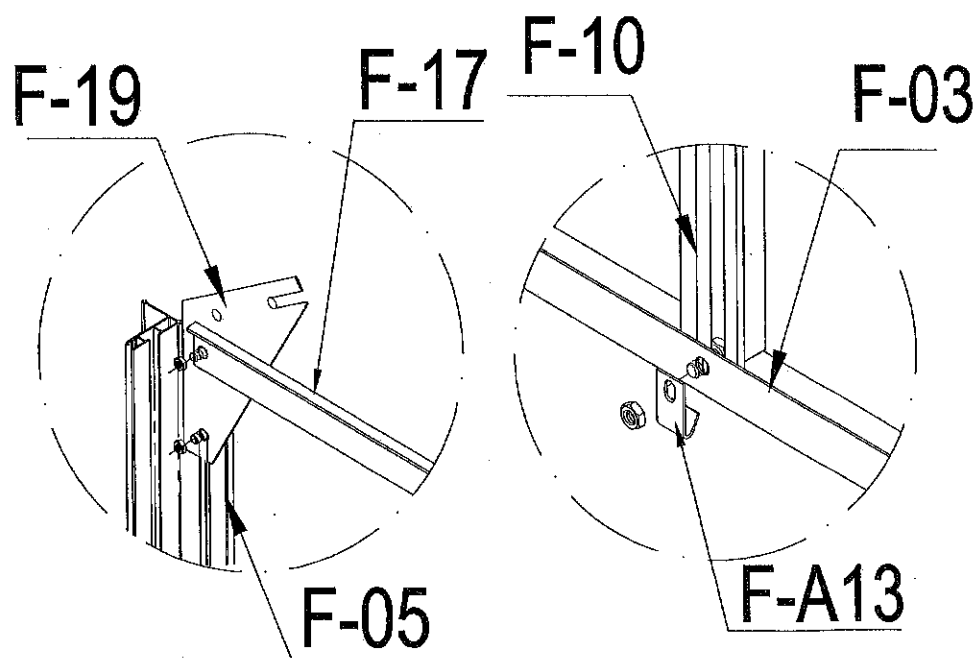


IMAGE	NO.	QTY
	F-10	1
	F-11	1
	F-17	2
	F-19	2
	F-A13	2
	F-A14	8



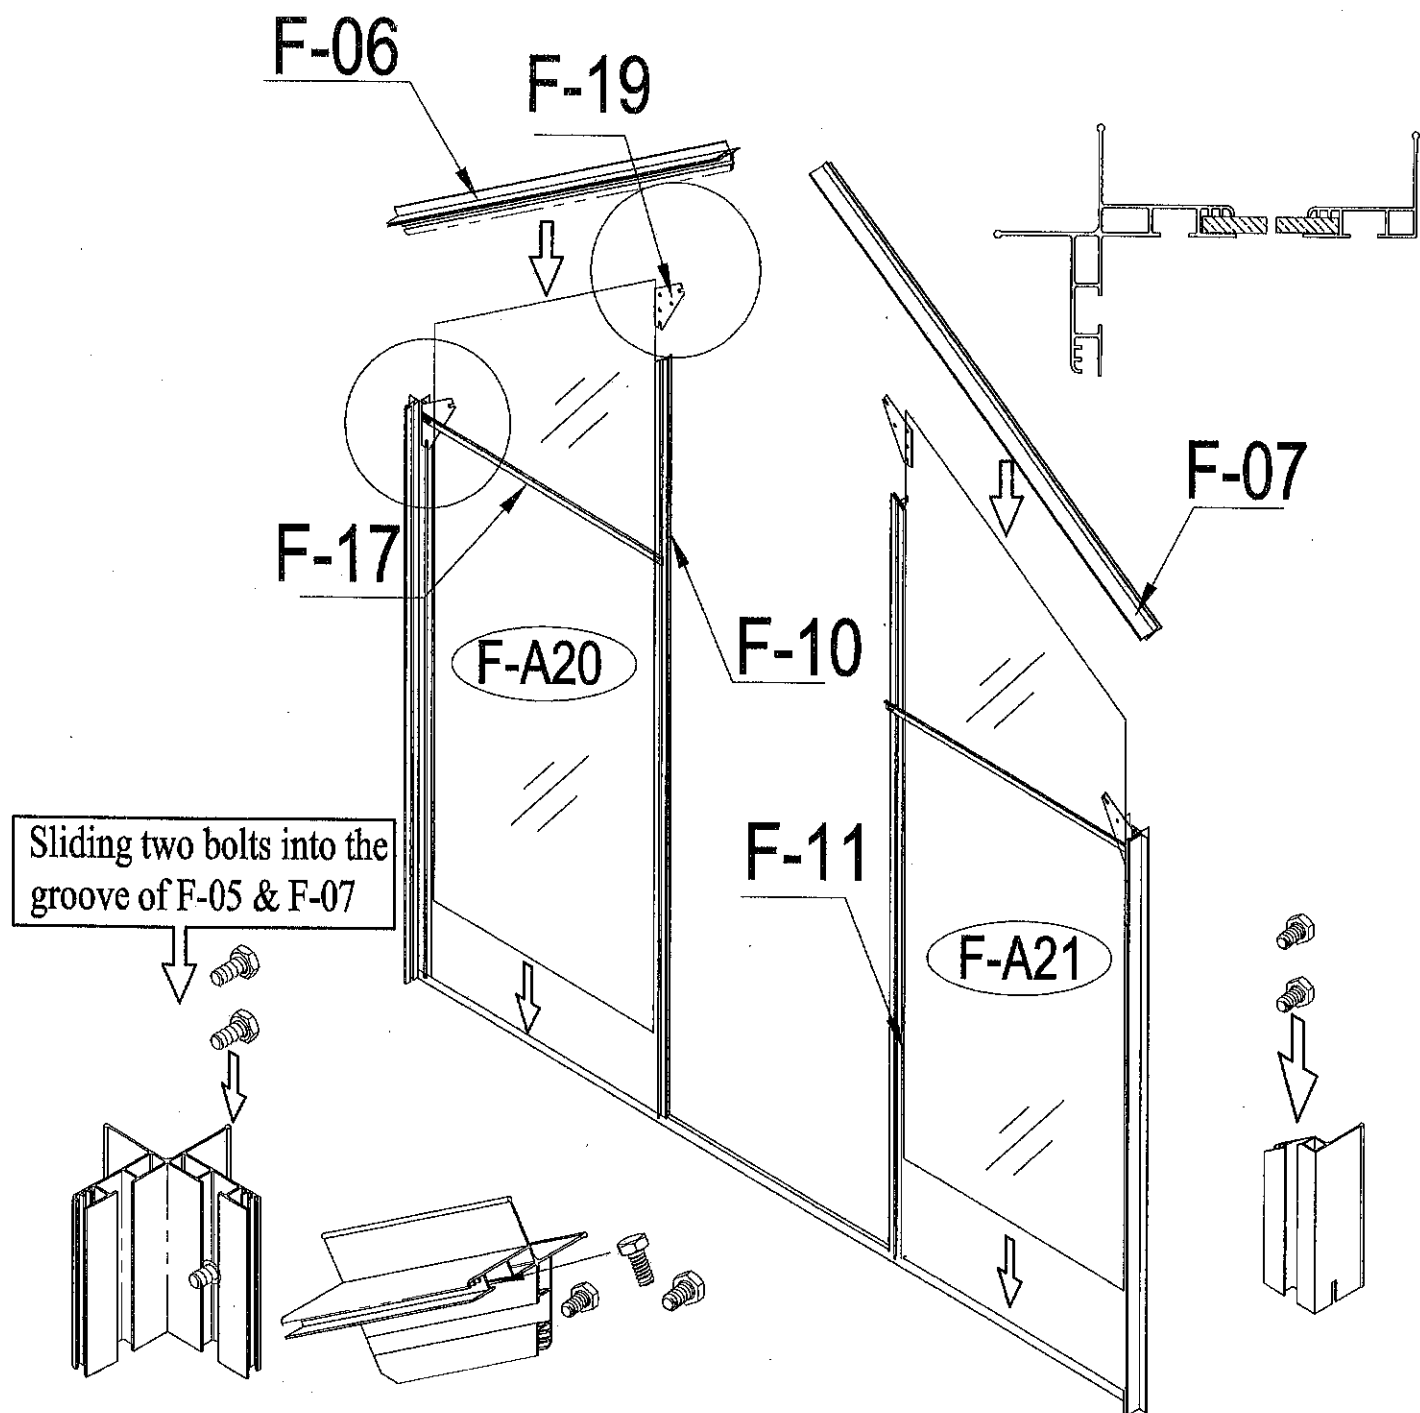






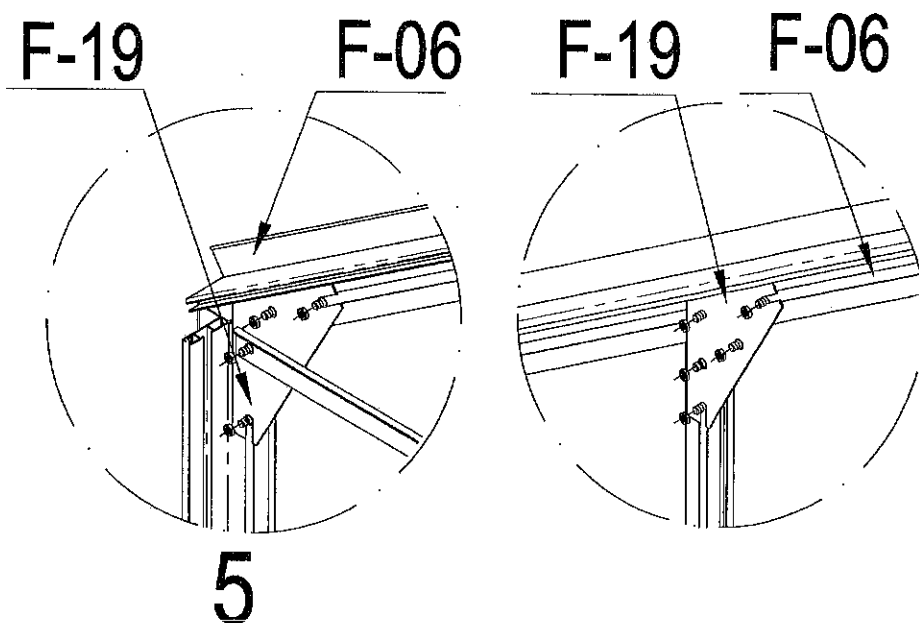


IMAGE	NO.	QTY
	F-06	1
	F-07	1
	F-A20	1
	F-A21	1
	F-19	2
	F-A14	16





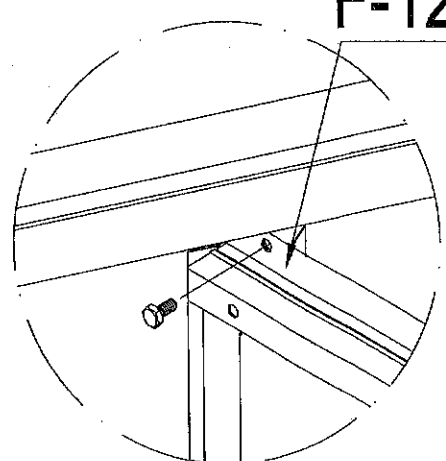
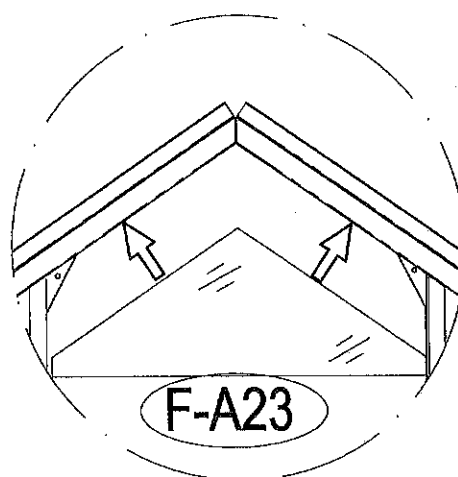
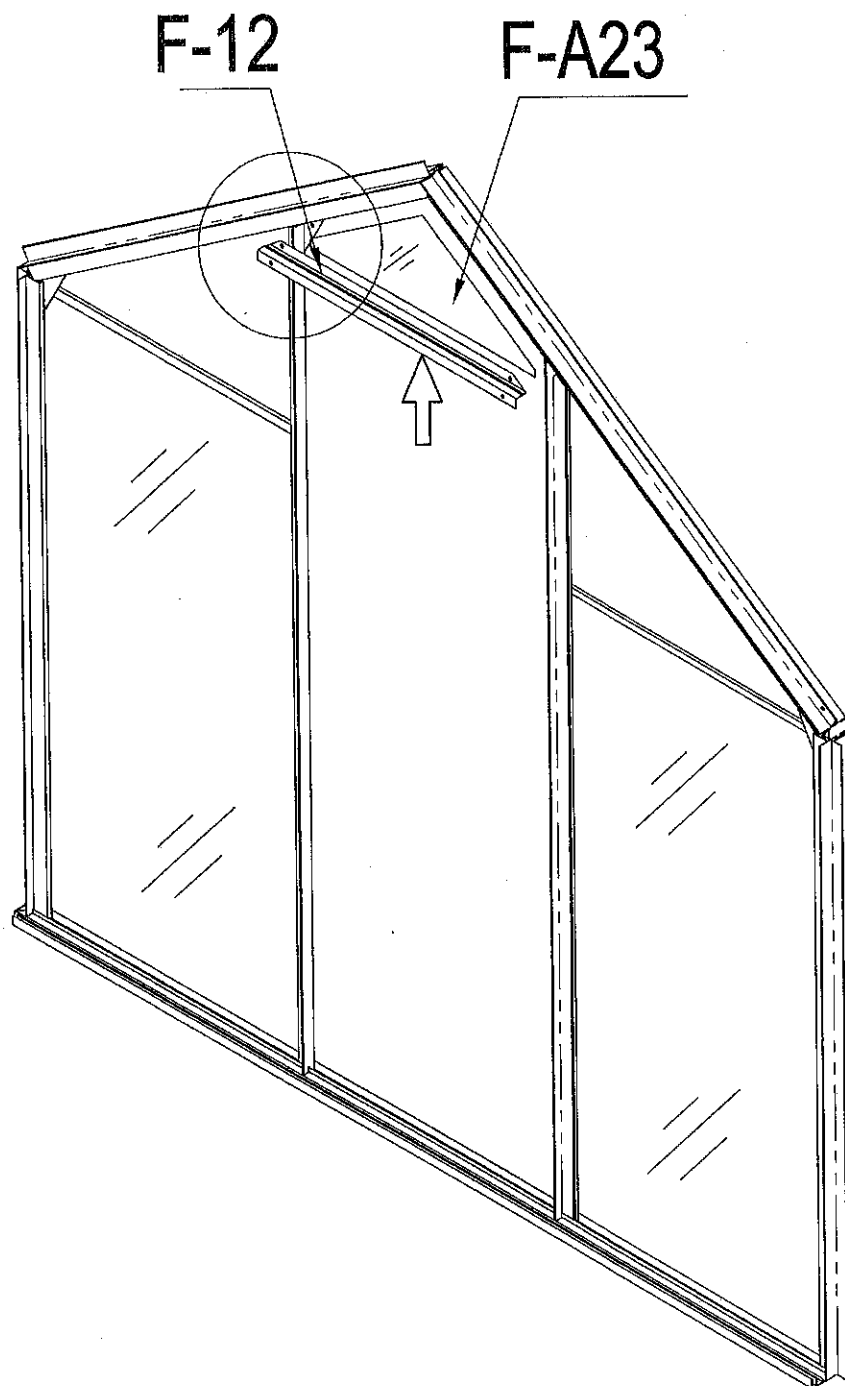





IMAGE	NO.	QTY
	F-12	1
	F-A23	1
	F-A14	2

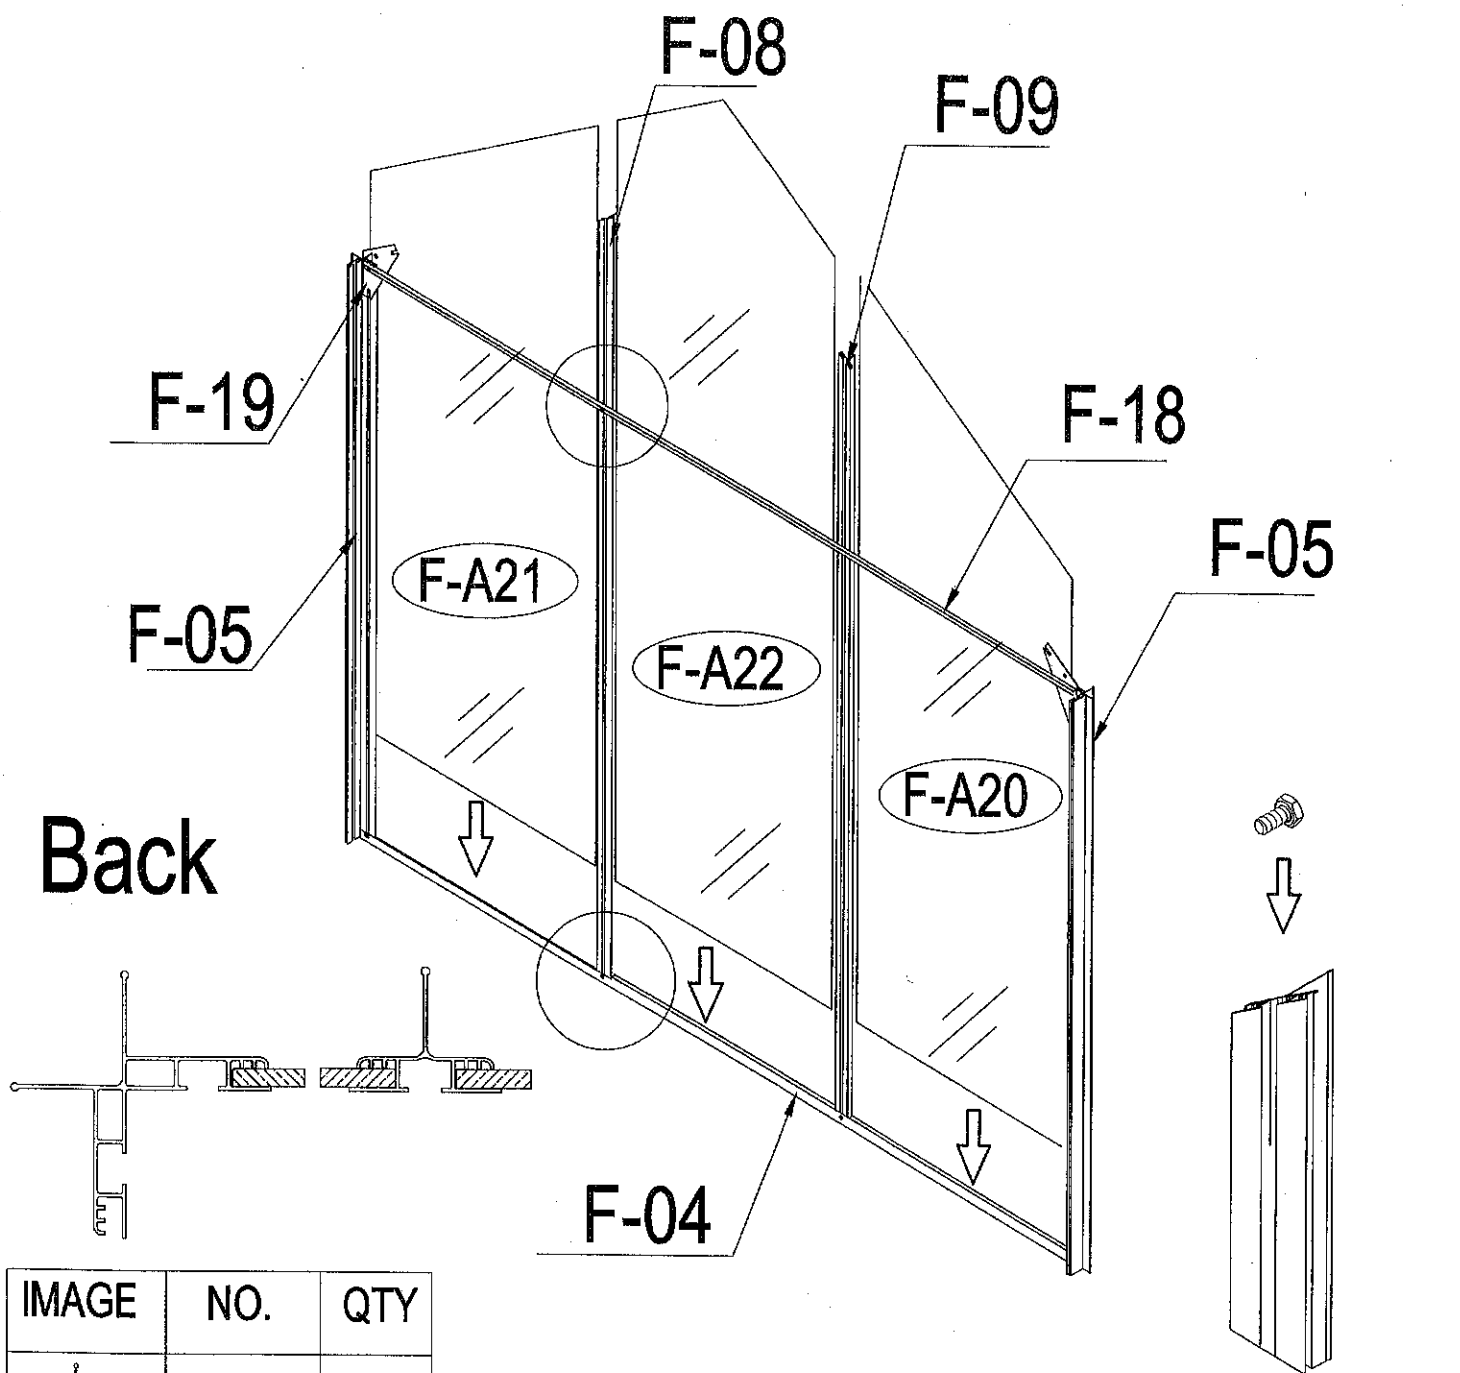
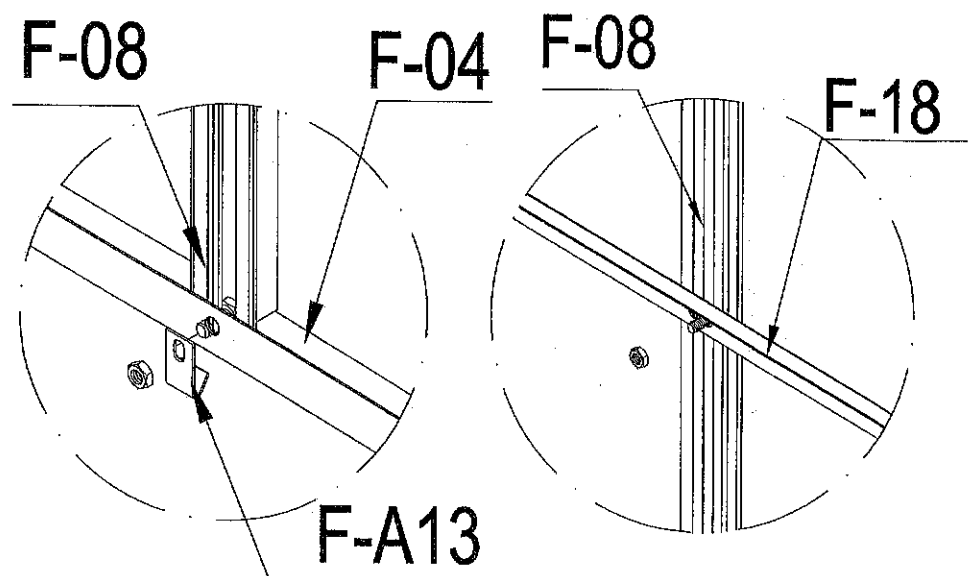


IMAGE	NO.	QTY
	F-08	1
	F-09	1
	F-18	1
	F-19	2
	F-A20	1
	F-A21	1
	F-A22	1
	F-A13	2
	F-A14	8



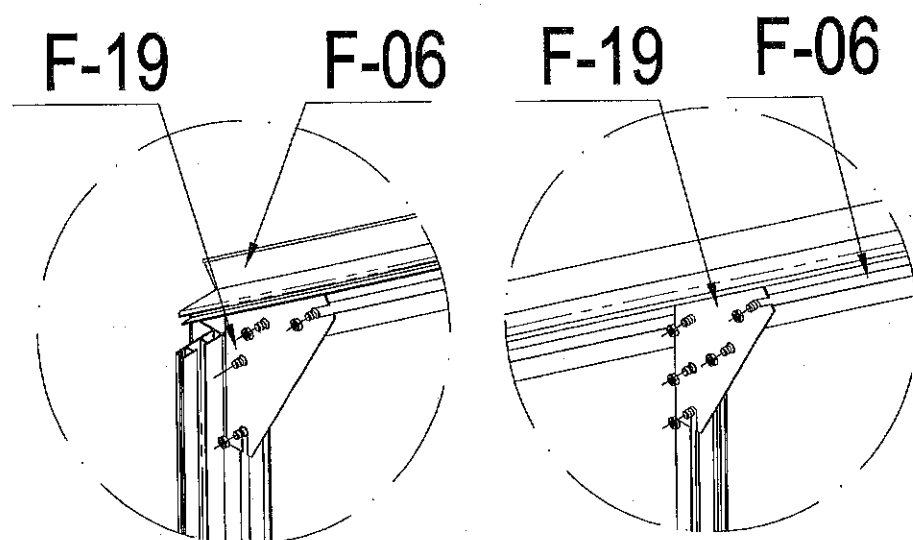
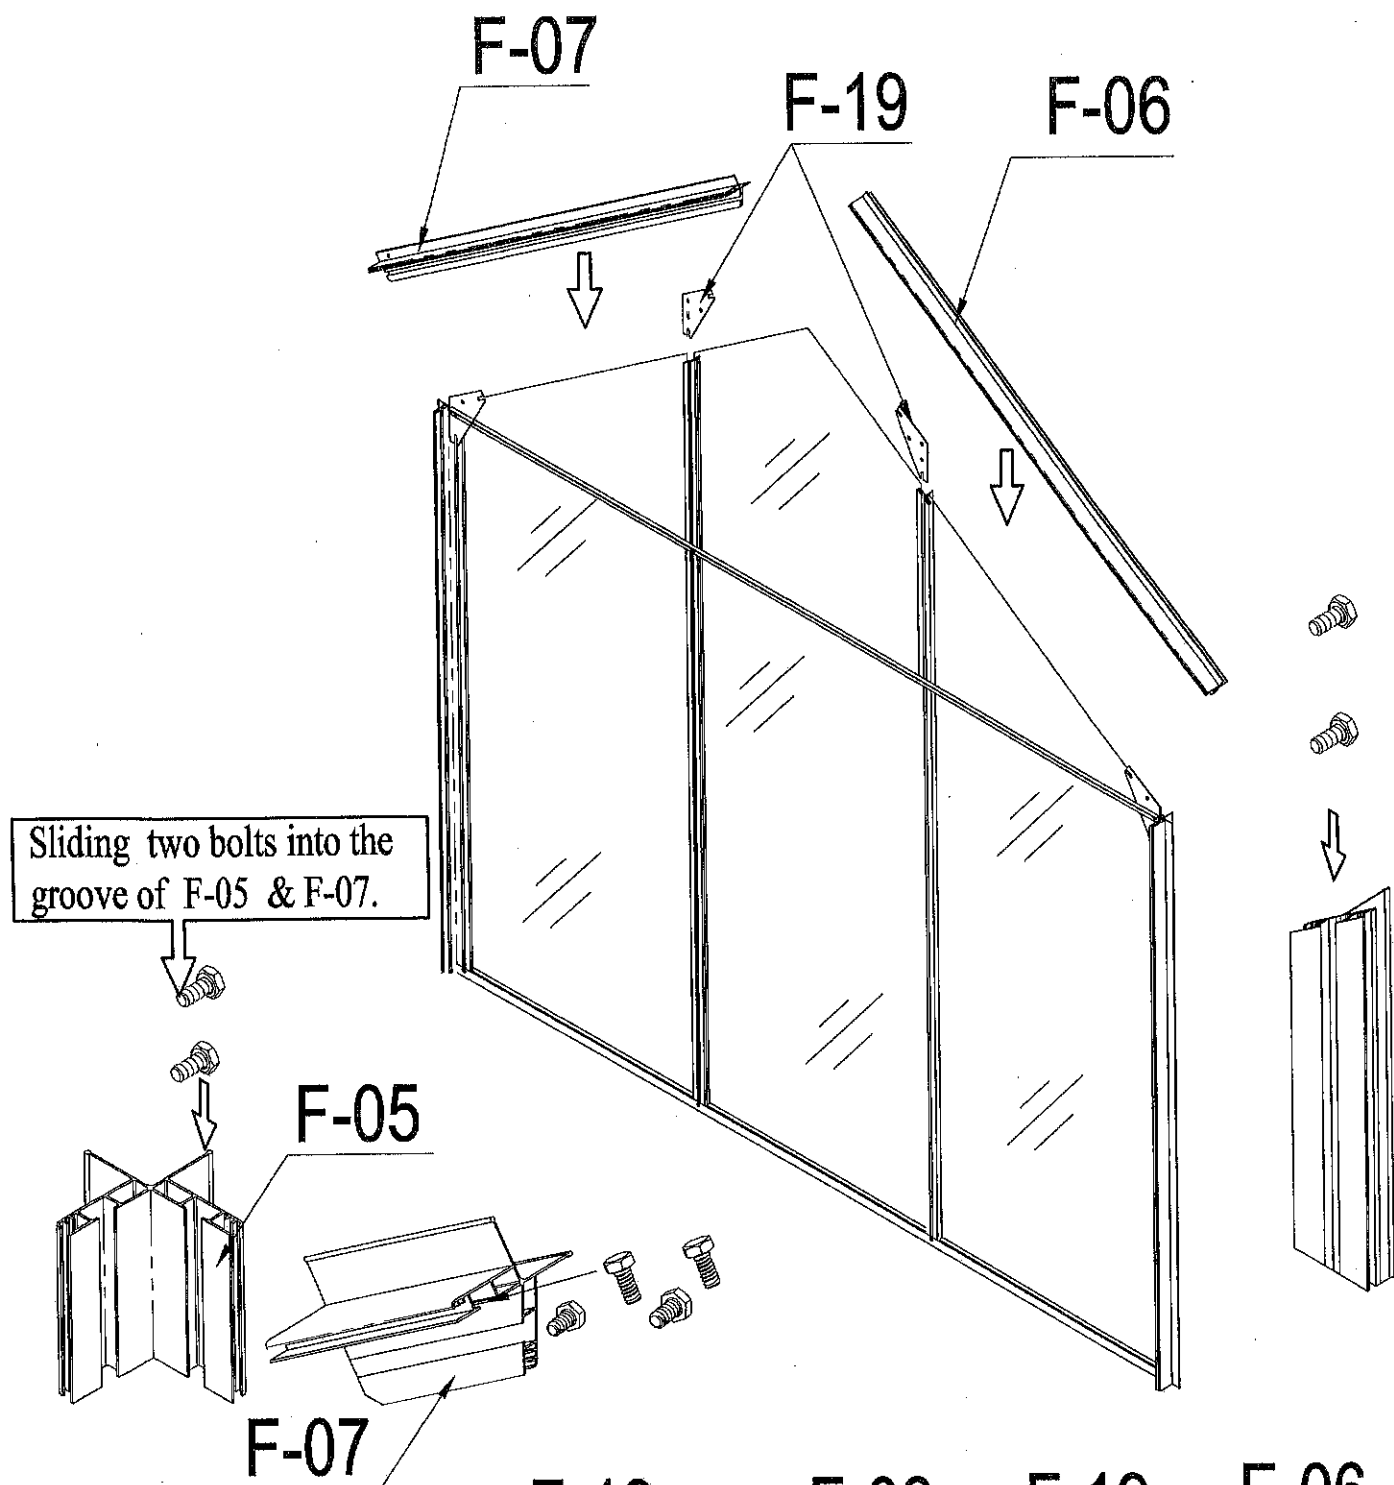




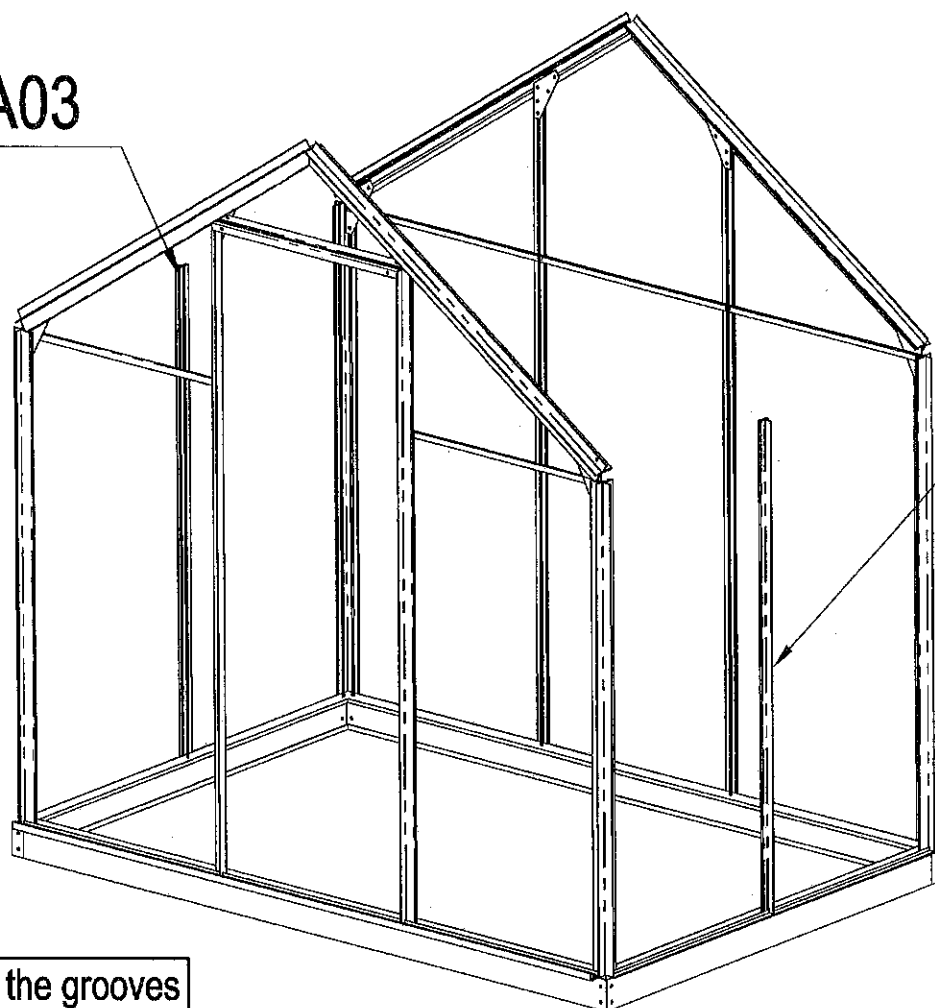



IMAGE	NO.	QTY
	F-06	1
	F-07	1
	F-19	2
	F-A14	16

F-A03



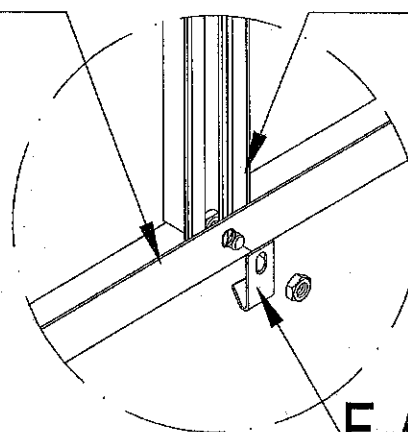
F-A03

Leave a bolt in the grooves  
of F-A03 for future use.



F-A01

F-A03



F-A13

IMAGE	NO.	QTY
	F-A03	4
	F-A13	4
	F-A14	4

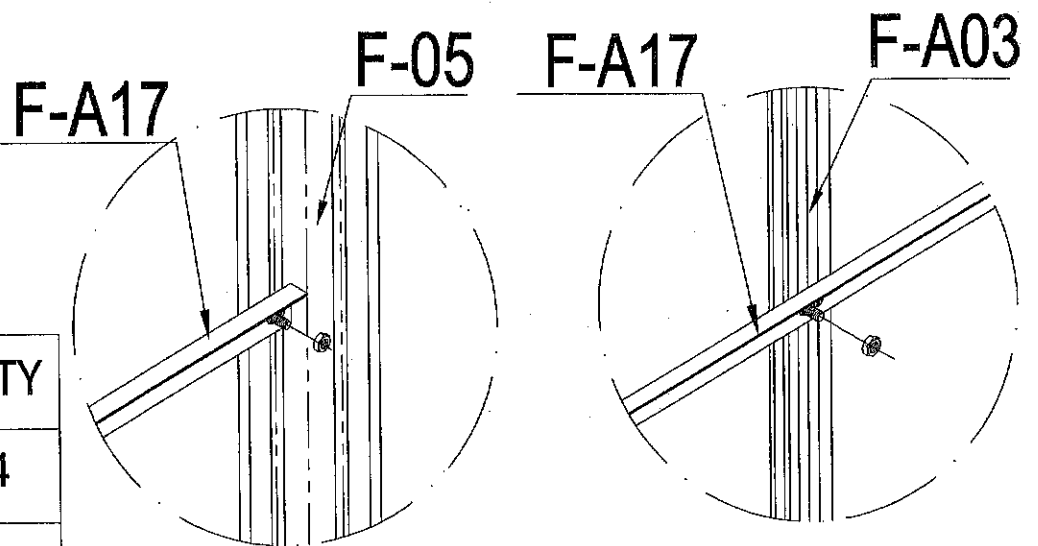
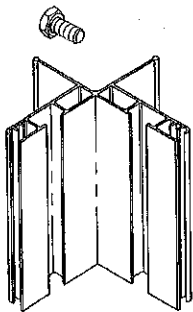
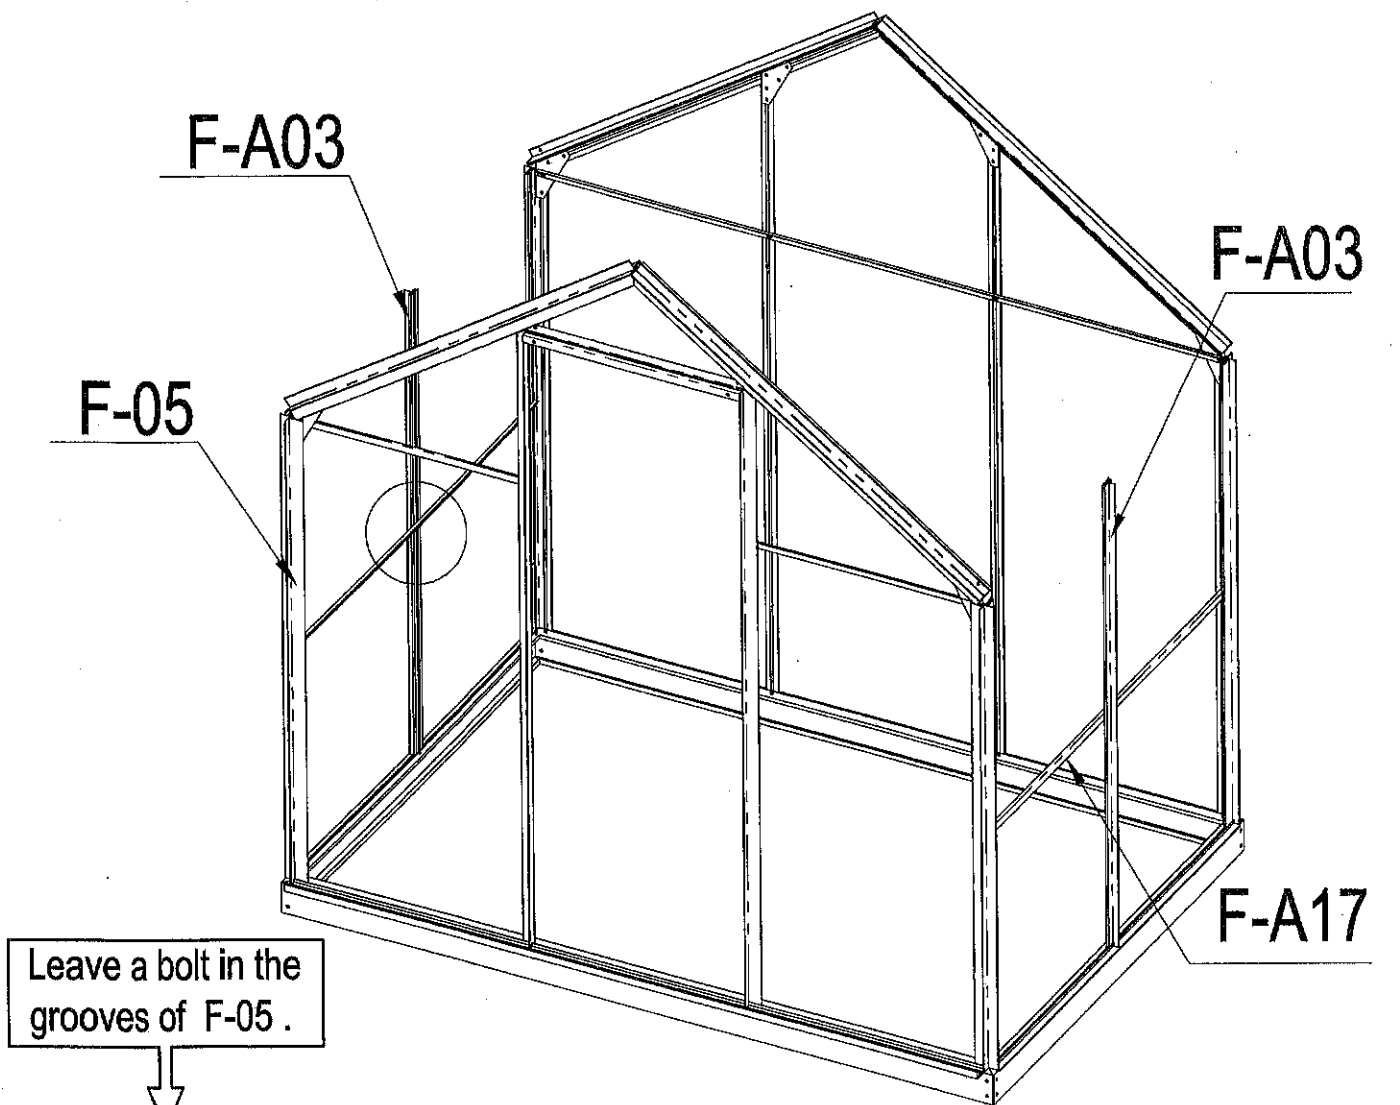



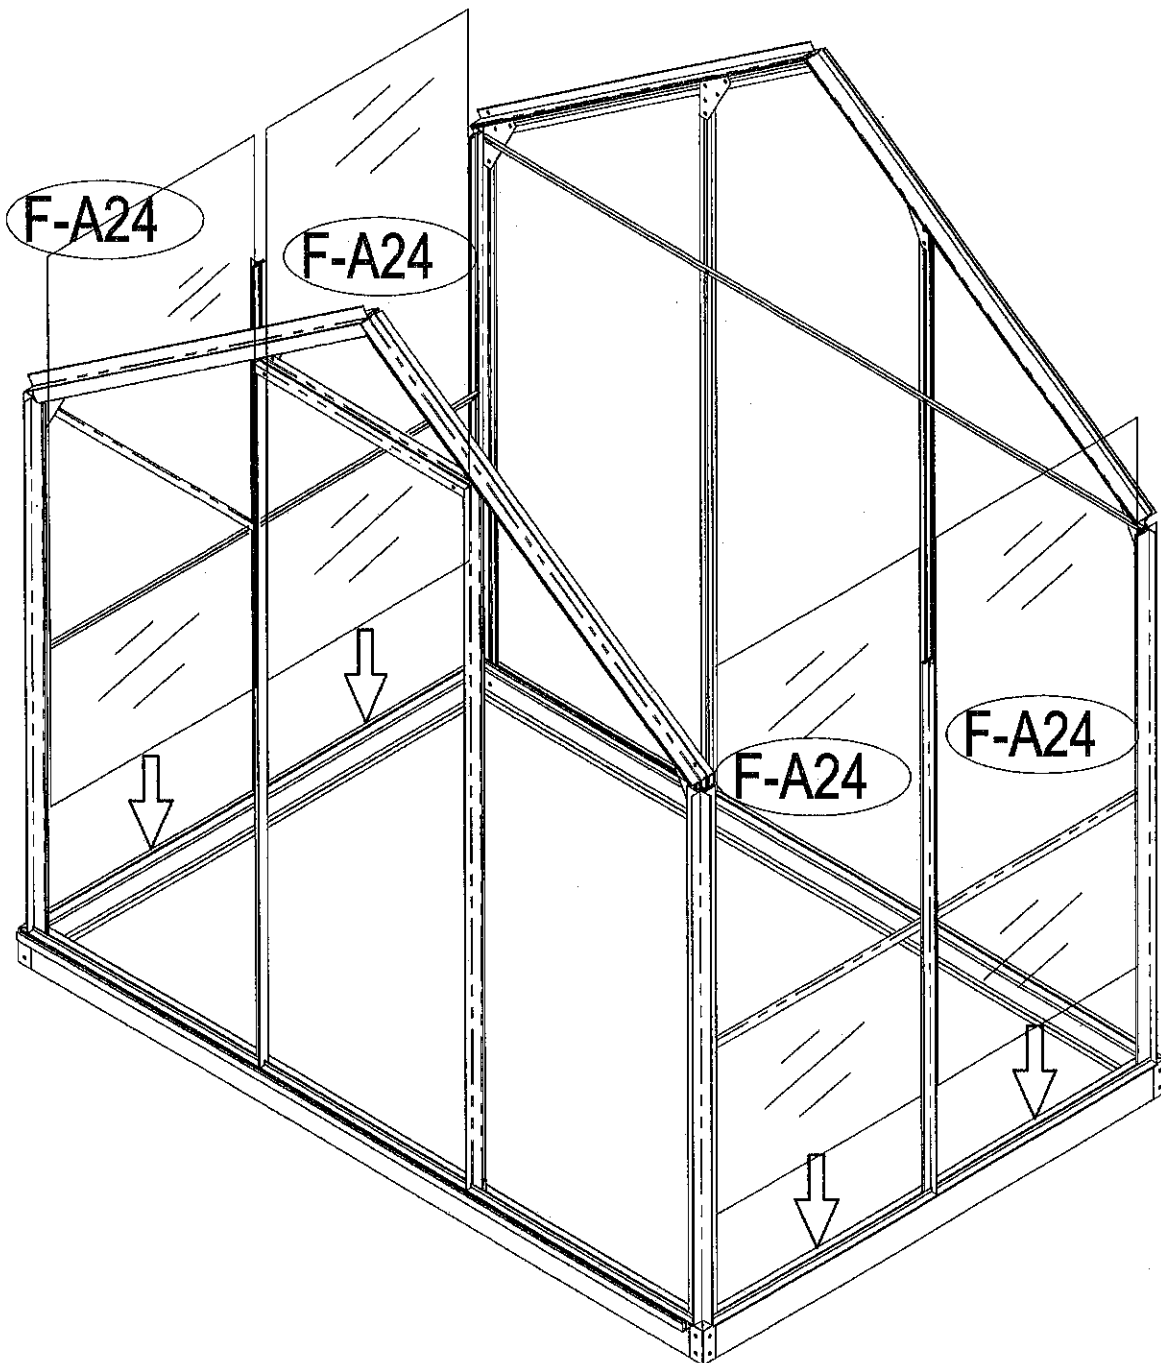
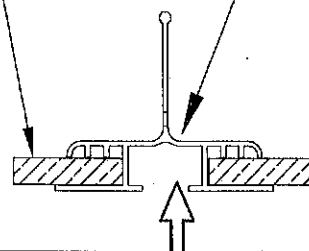


IMAGE	NO.	QTY
	F-A03	4
	F-A17	2
	F-A14	4





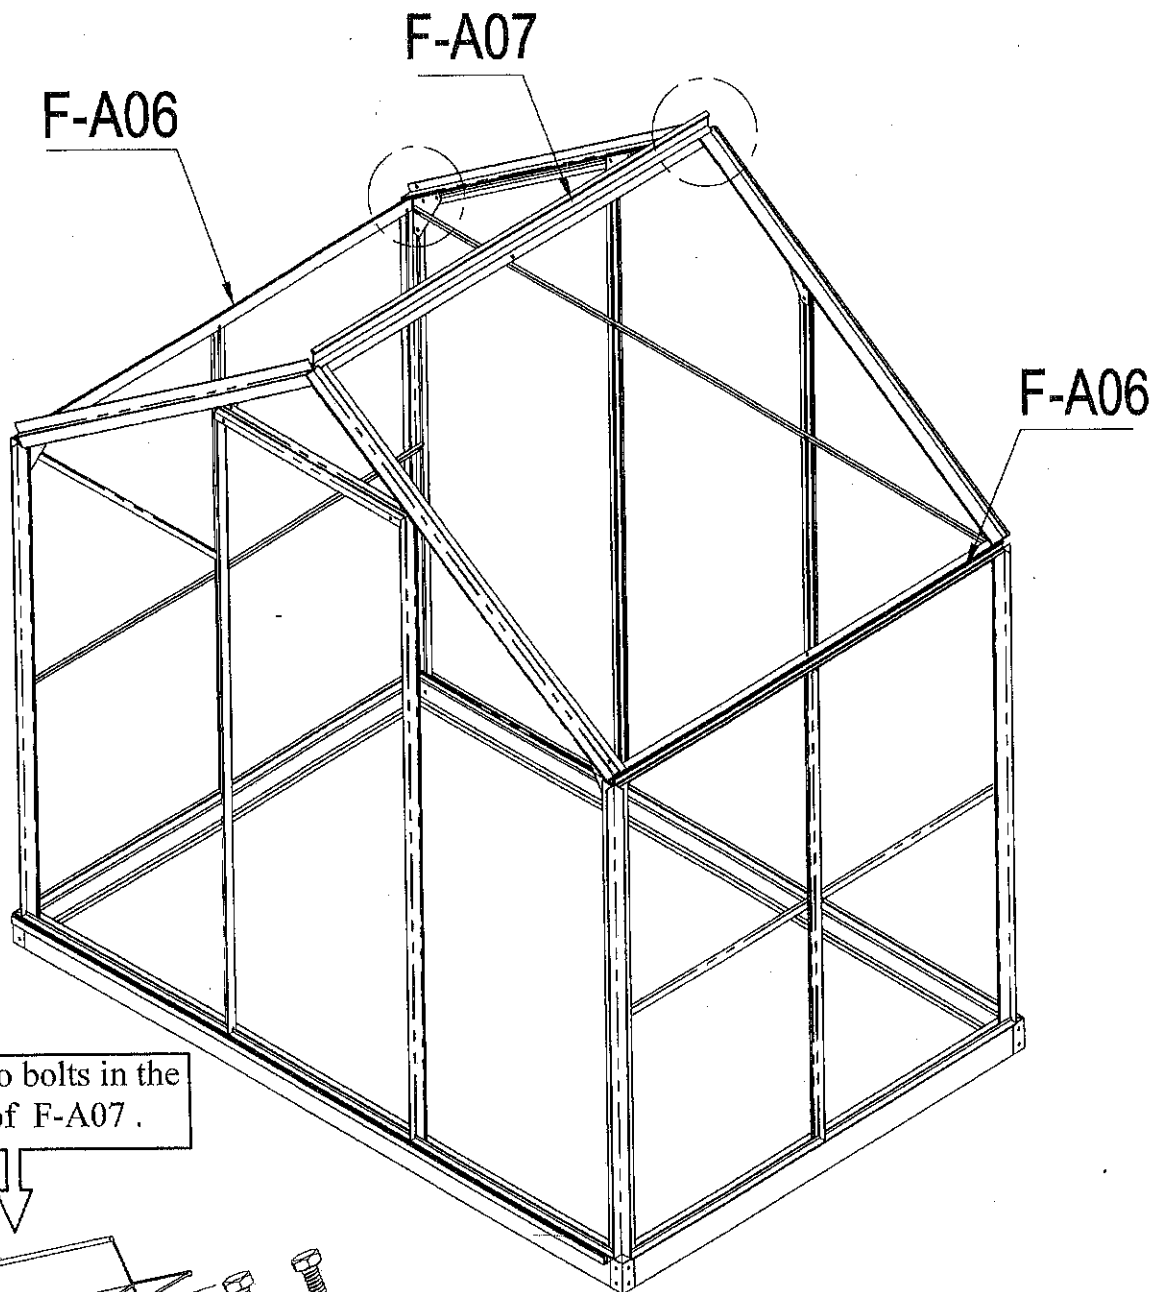
F-A24

F-A03



Sliding polycarbonate F-A24 in  
the channel of profile F-A03.

IMAGE	NO.	QTY
	F-A03	2
	F-A24	4



Leave two bolts in the grooves of F-A07 .

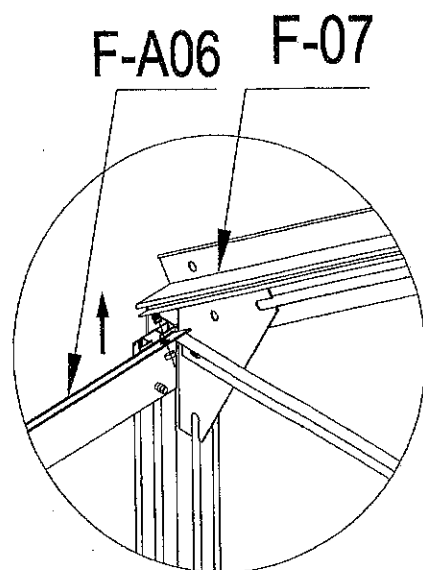
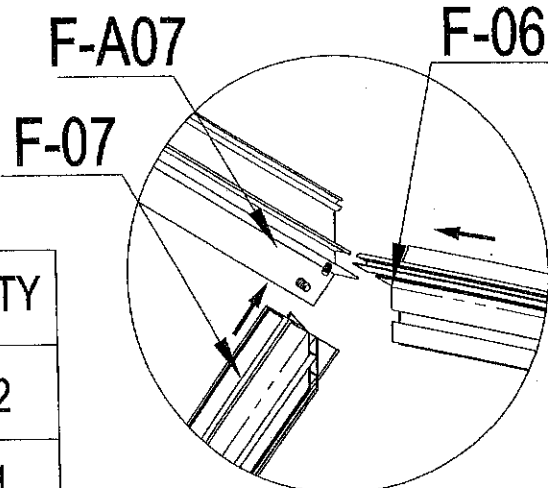
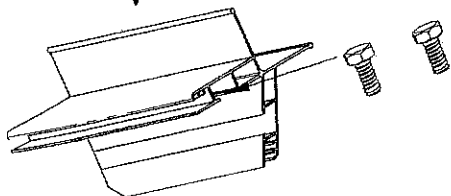
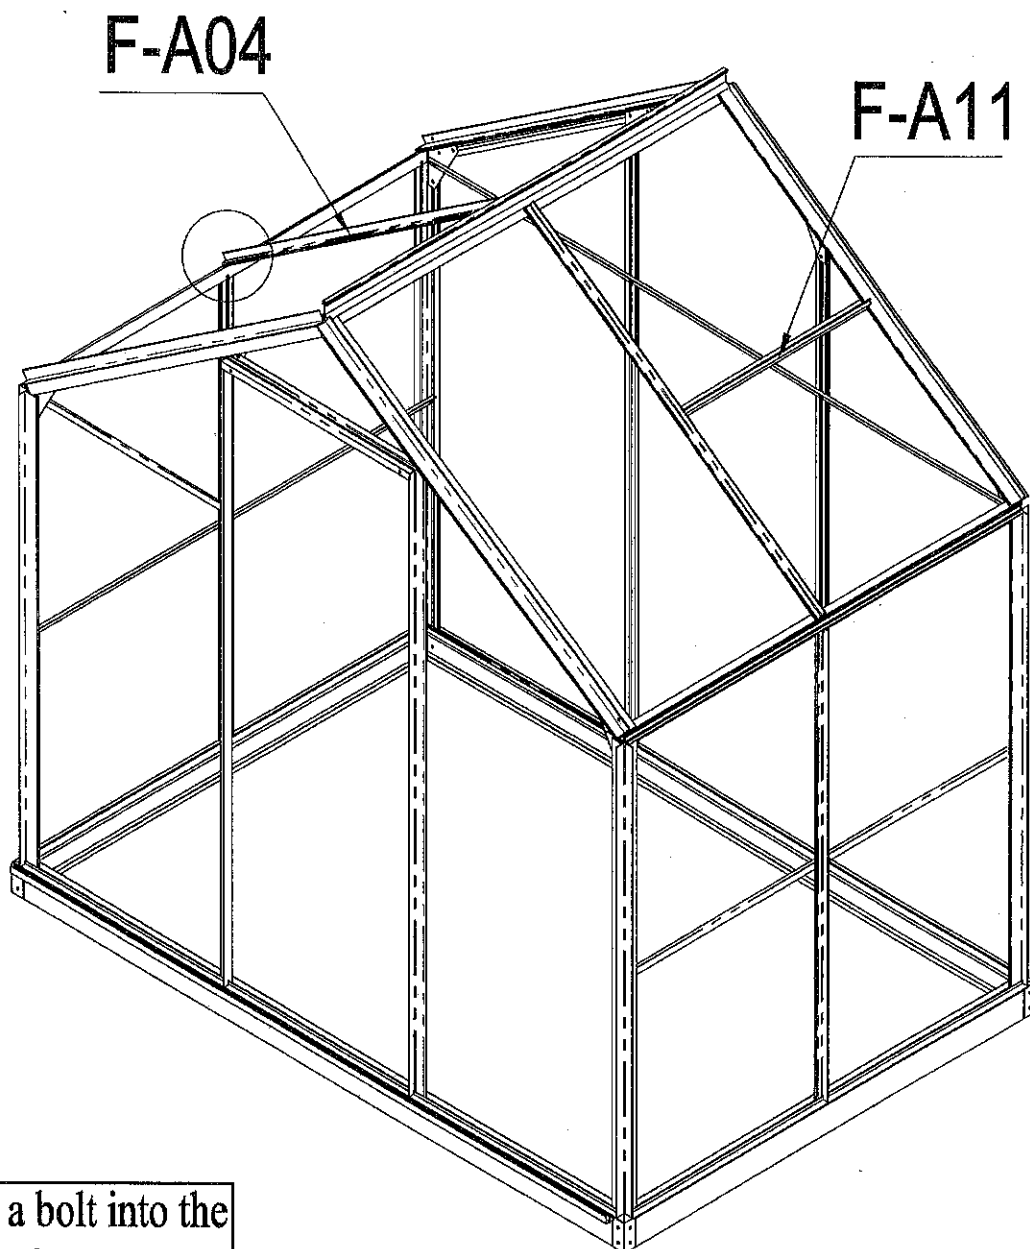


IMAGE	NO.	QTY
	F-A06	2
	F-A07	1
	F-A14	12



Sliding a bolt into the groove of F-A04

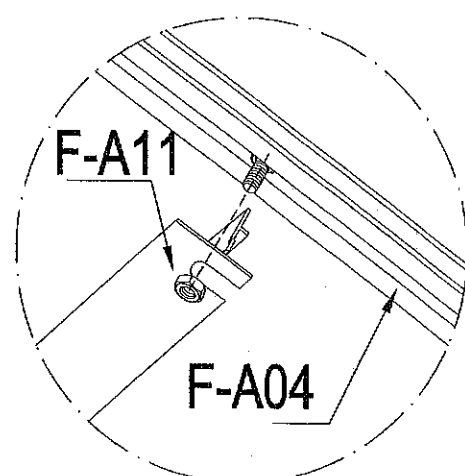
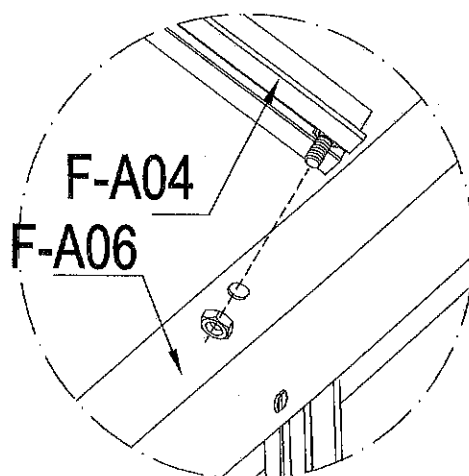
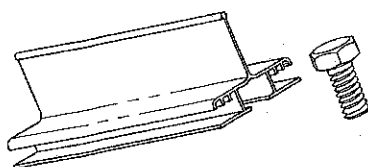
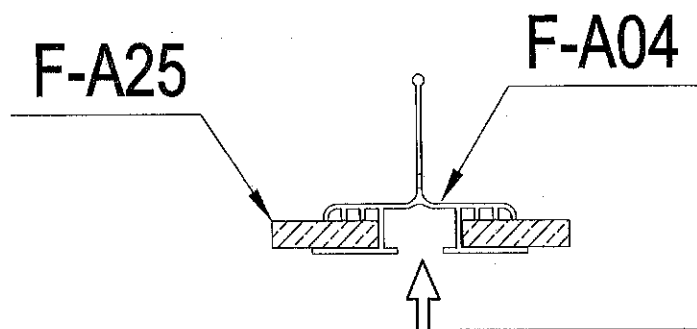
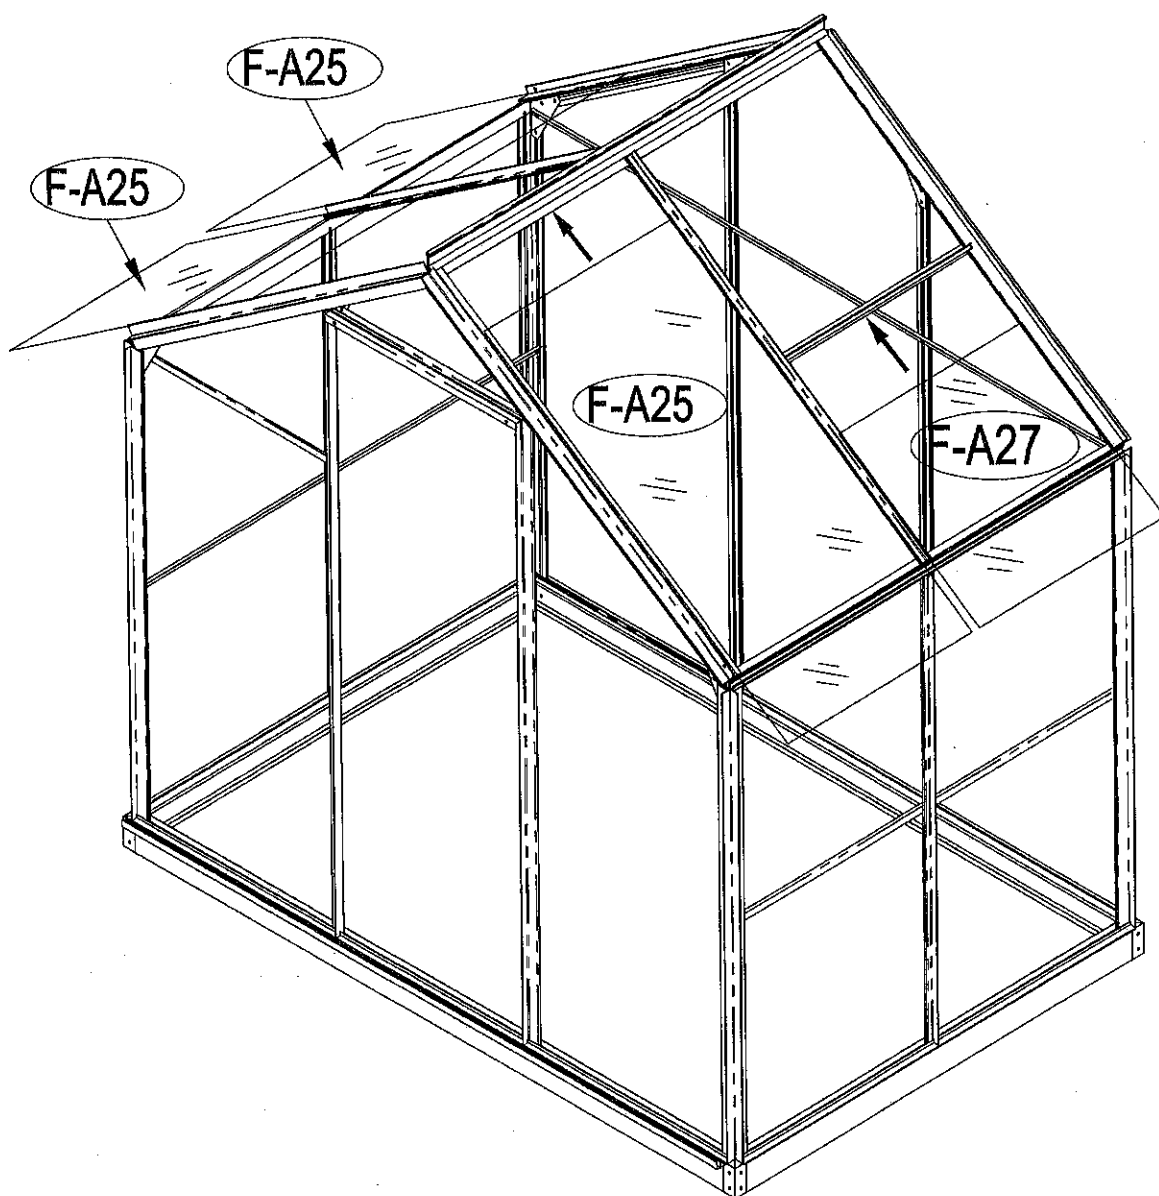


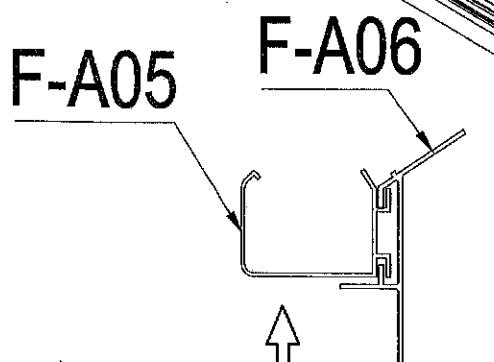
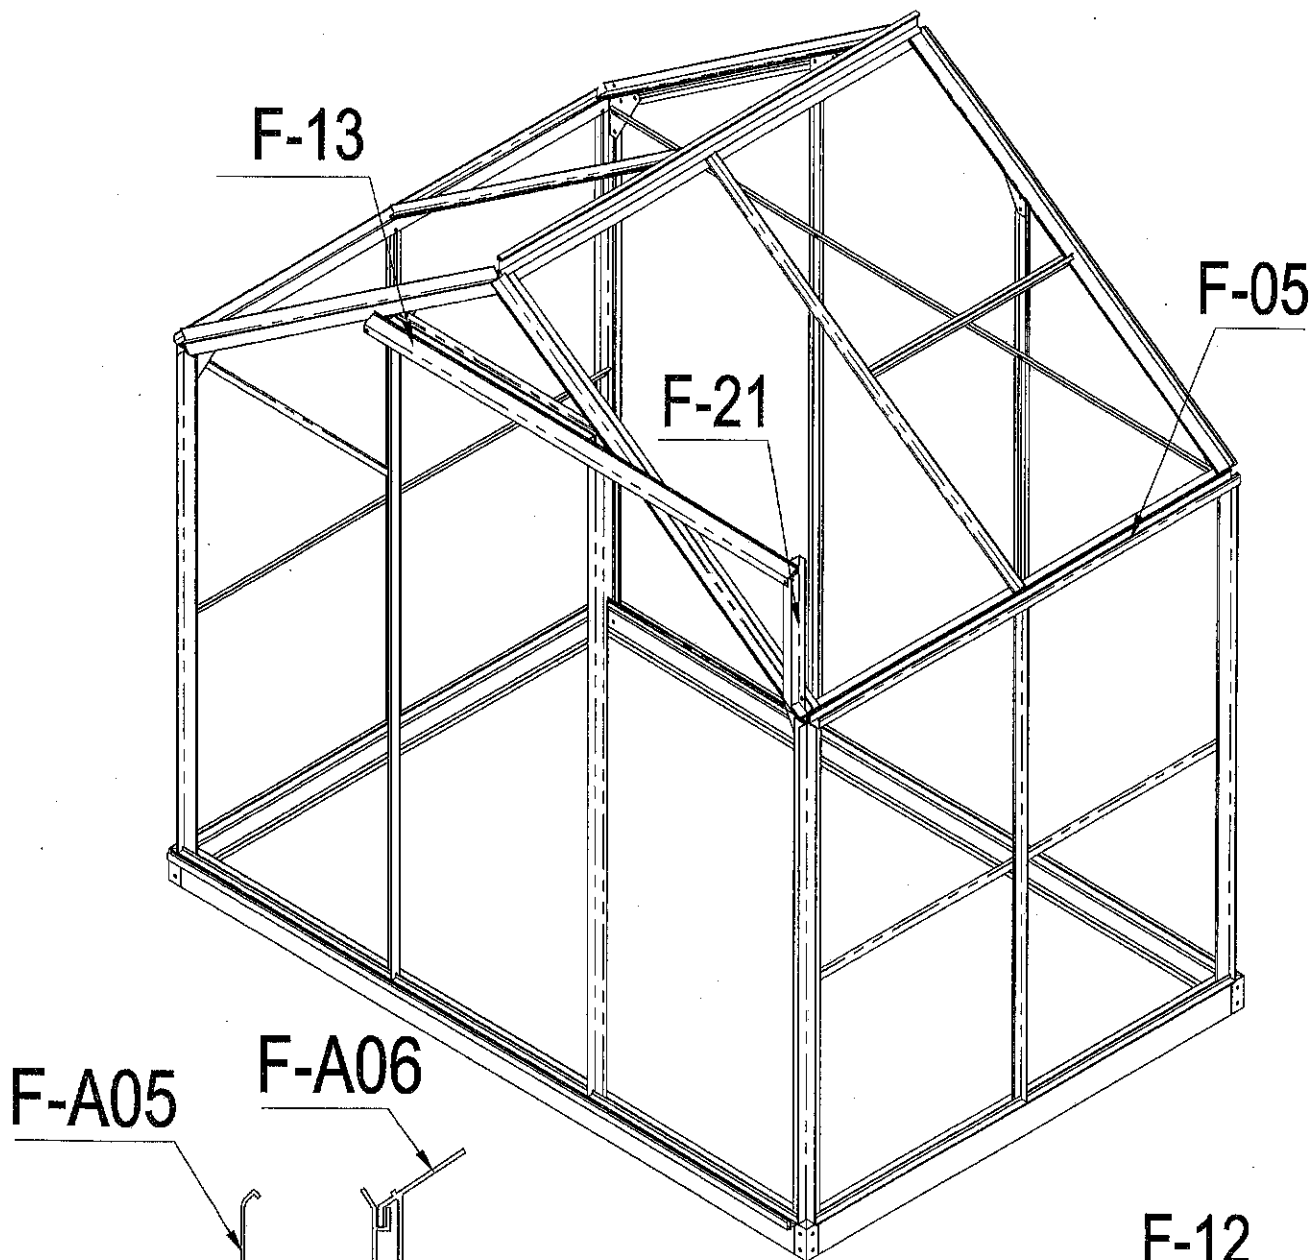
IMAGE	NO.	QTY
	F-A04	2
	F-A11	1
	F-A14	6





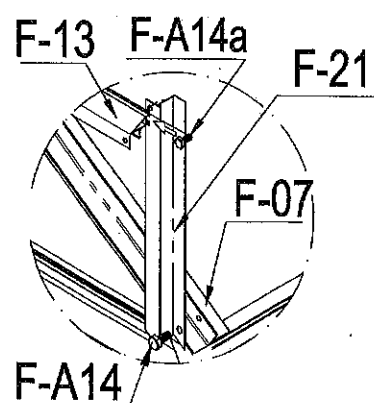
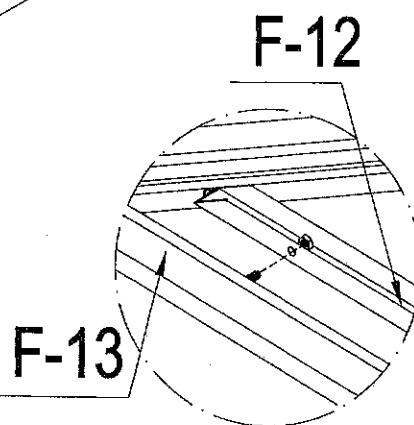
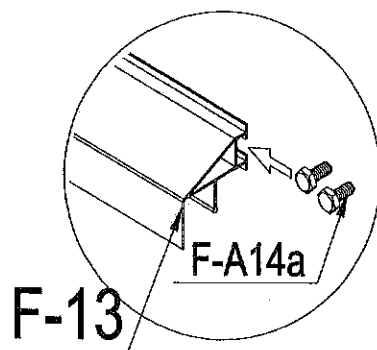
Sliding polycarbonate F-A25 in  
the channel of profile F-A04

IMAGE	NO.	QTY
	F-A27	1
	F-A25	3



Sliding profile F-A05  
in F-A06 as drawing

IMAGE	NO.	QTY
	F-A05	2
	F-13	1
	F-21	1
	F-A14	1
	F-A14a	3



# Window

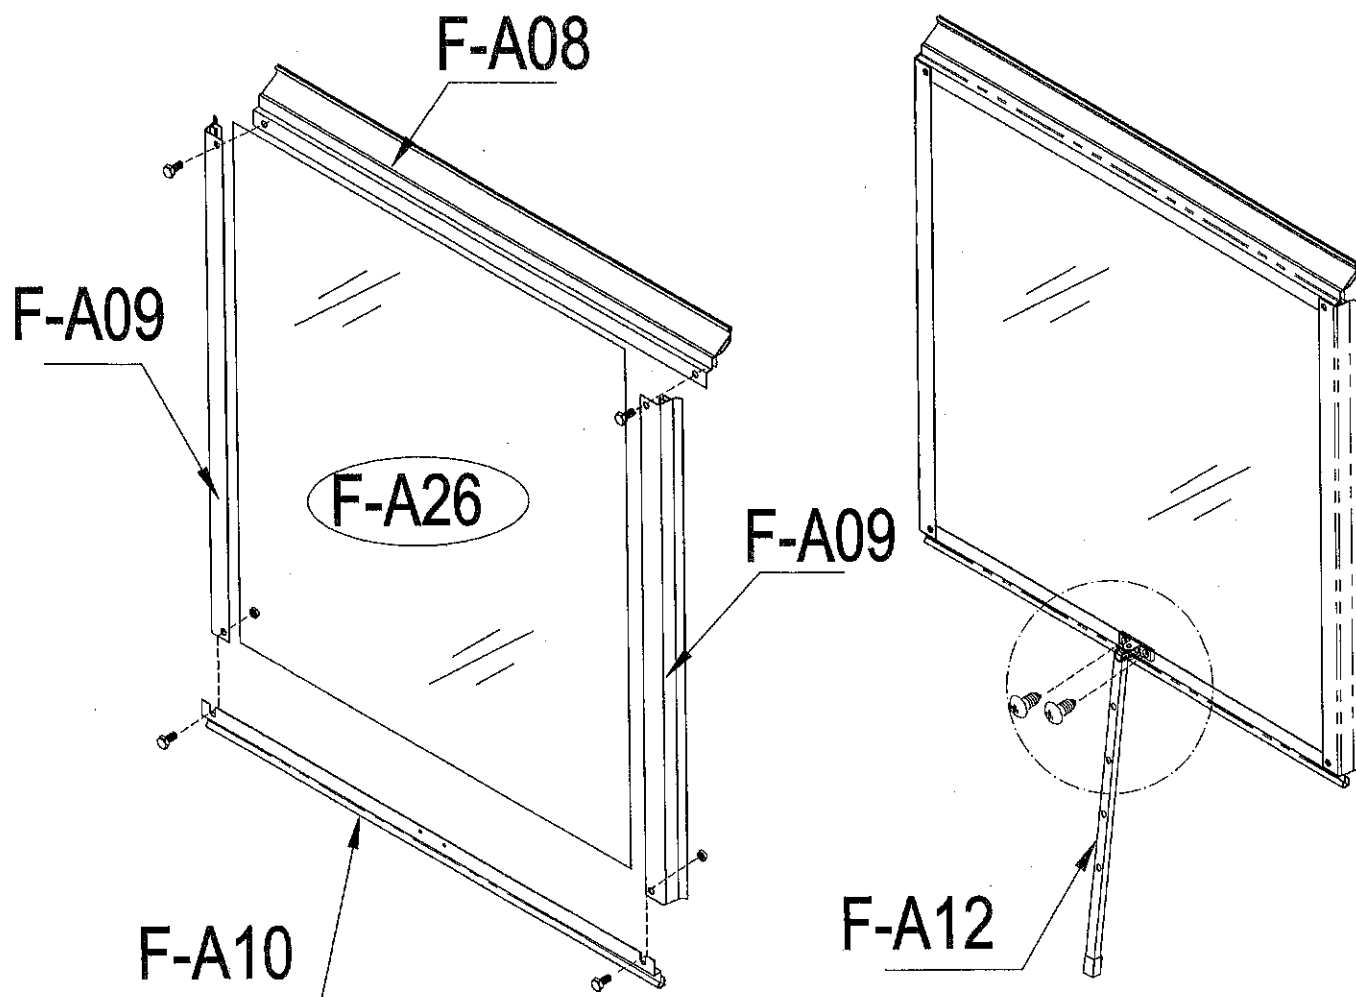







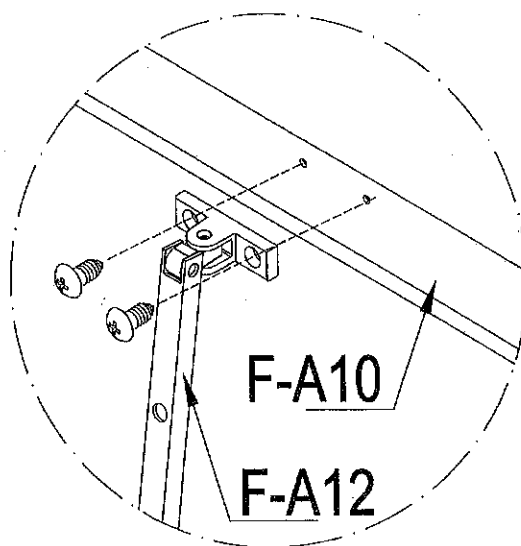
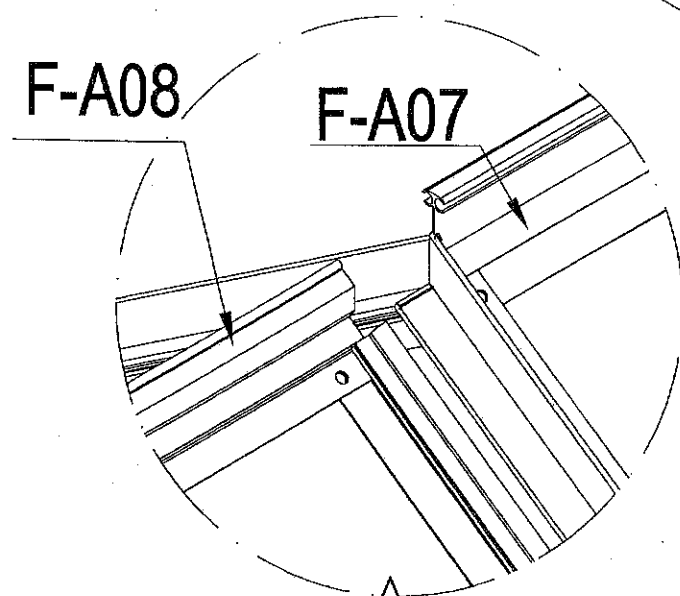
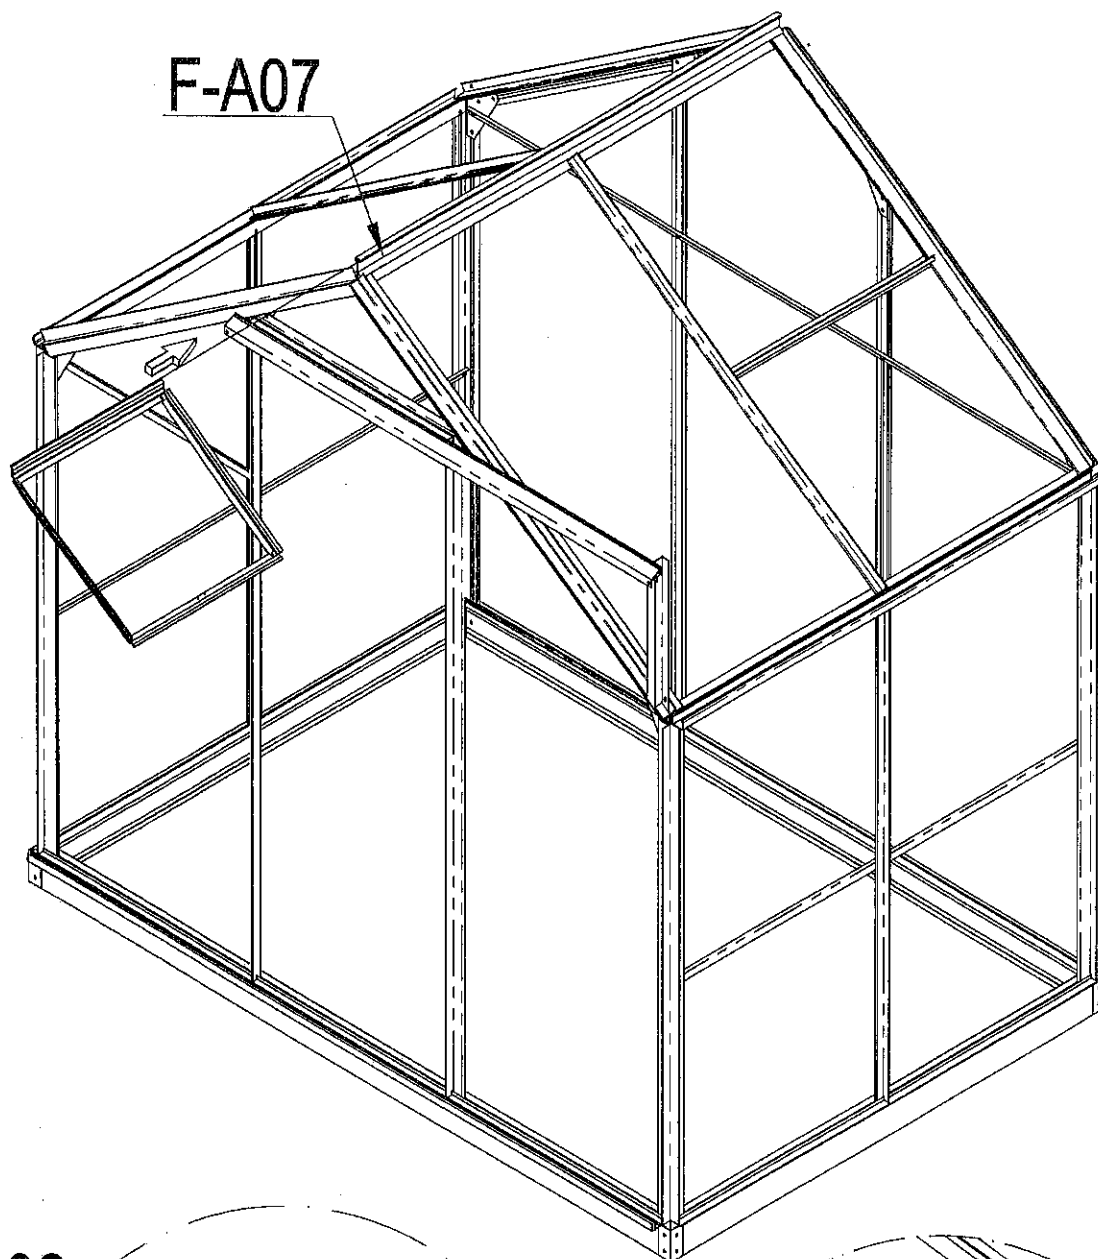
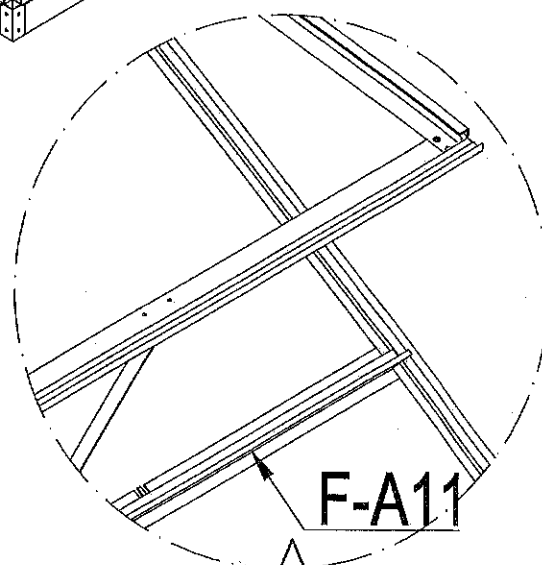


IMAGE	NO.	QTY
	F-A08	1
	F-A09	2
	F-A10	1
	F-A12	1
	F-A26	1
	F-A16	2
	F-A14	4



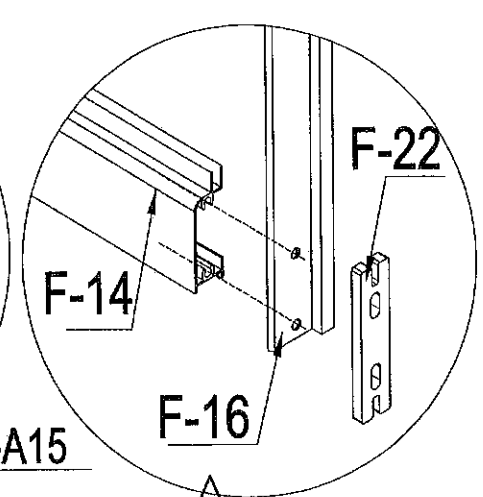
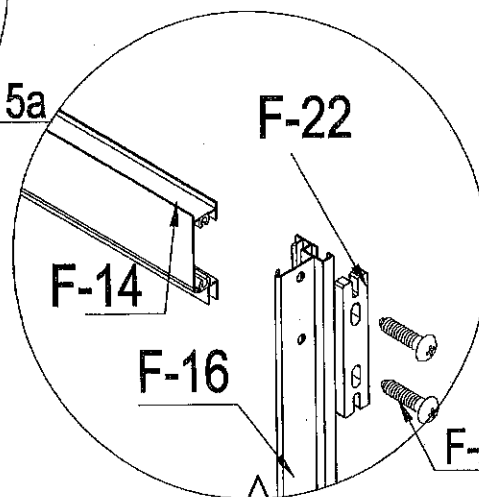
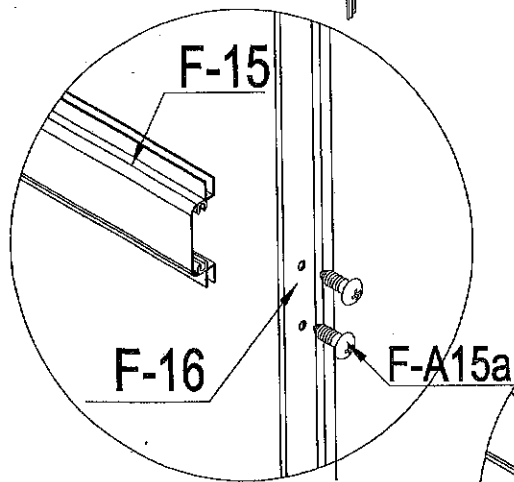
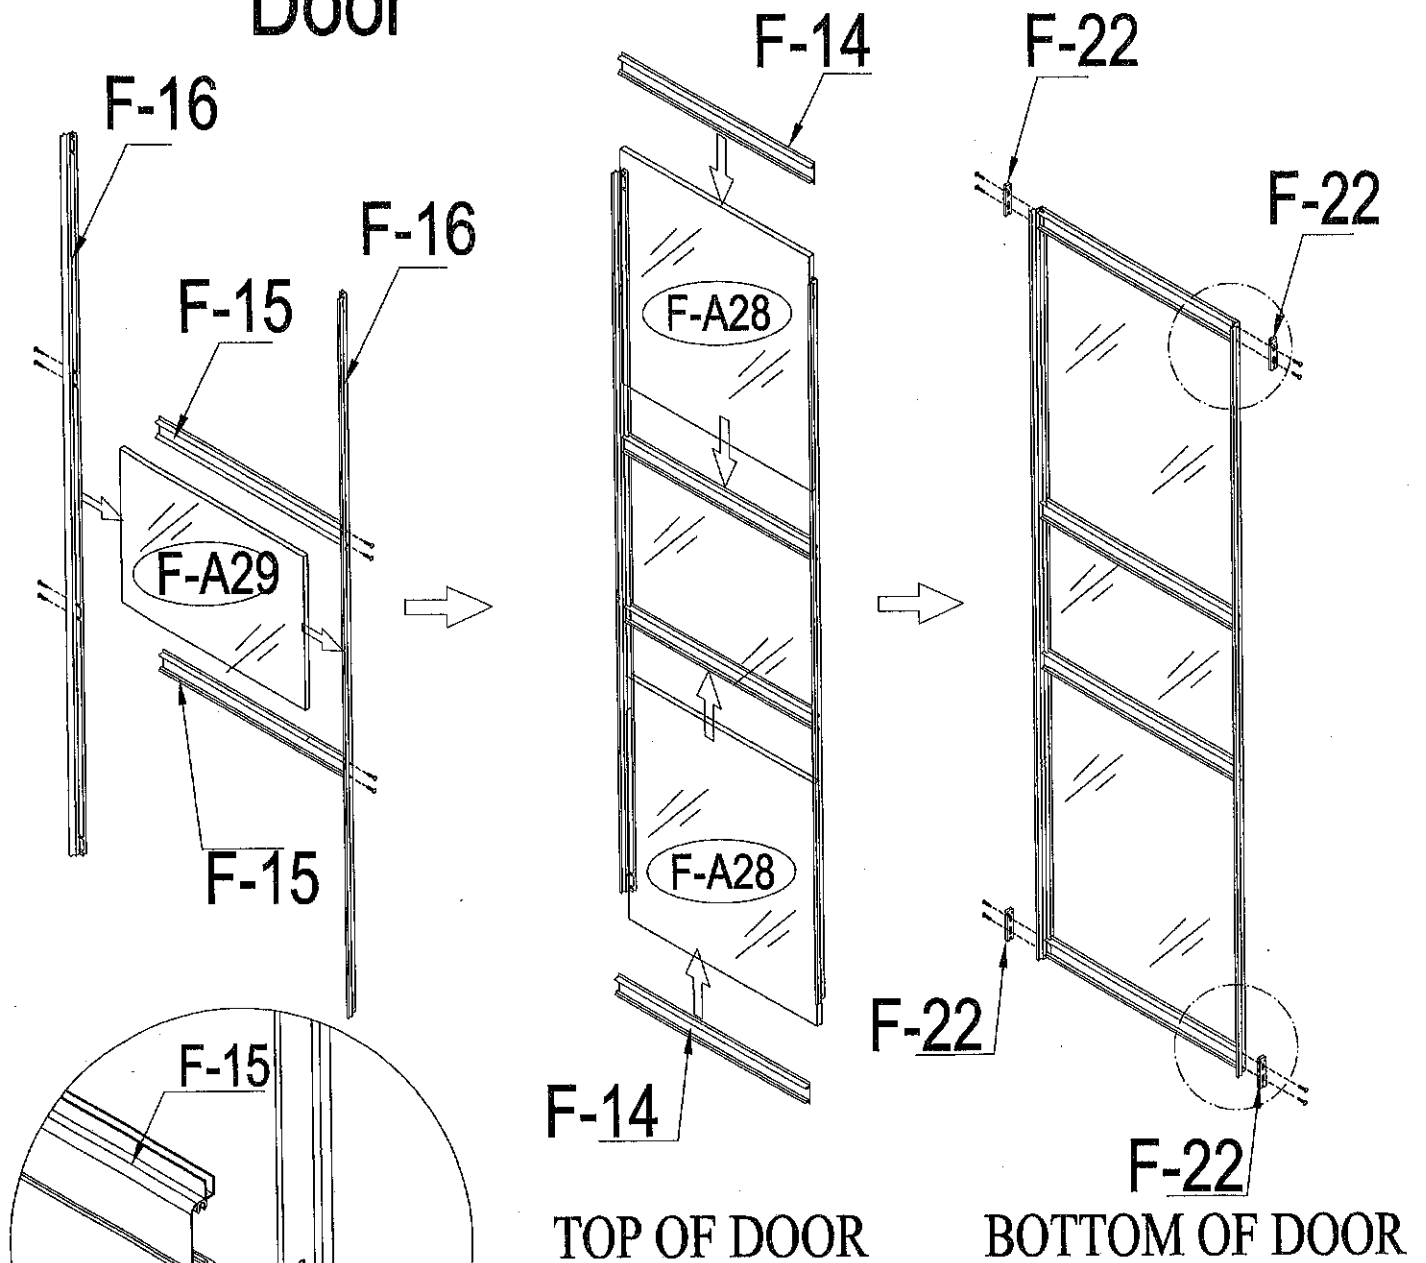


Slide F-A08 into the track of F-A07.



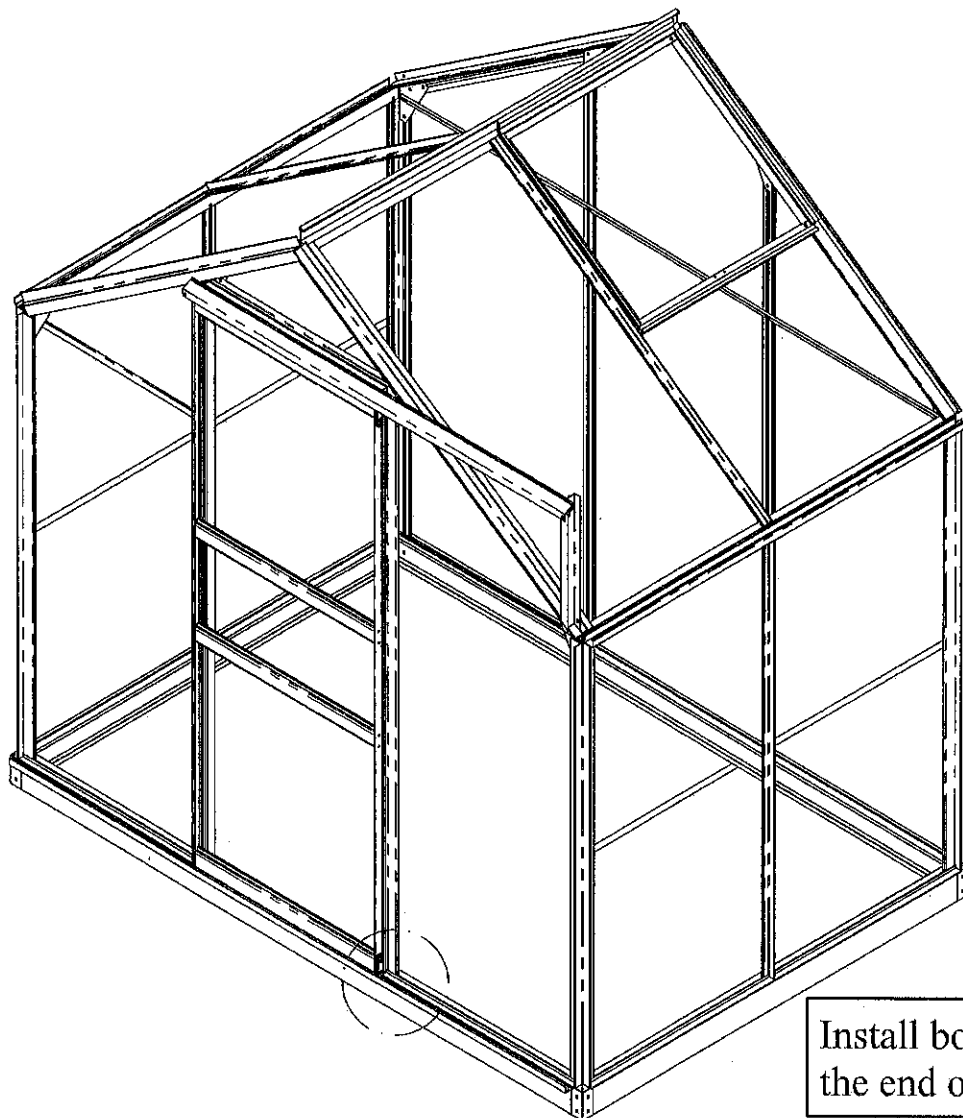
Adjust F-A11 into the correct position, then tighten with the bolt and nut.

# Door



Please install plastic piece F-22 in the direction of the image.

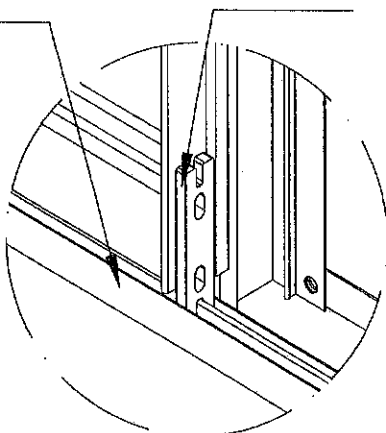
IMAGE	NO.	QTY
	F-16	2
	F-14	2
	F-15	2
	F-22	4
	F-A15	8
	F-A15a	8



Install bolts & nuts on the end of pro file F-13.

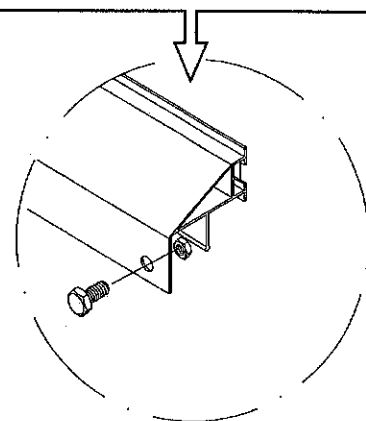
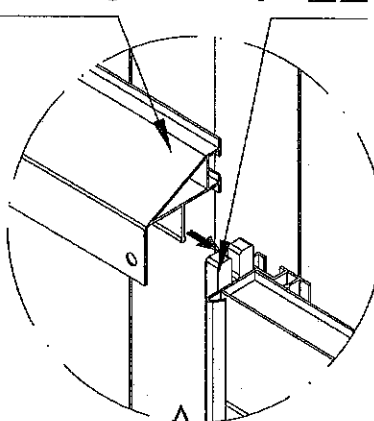
F-03

F-22




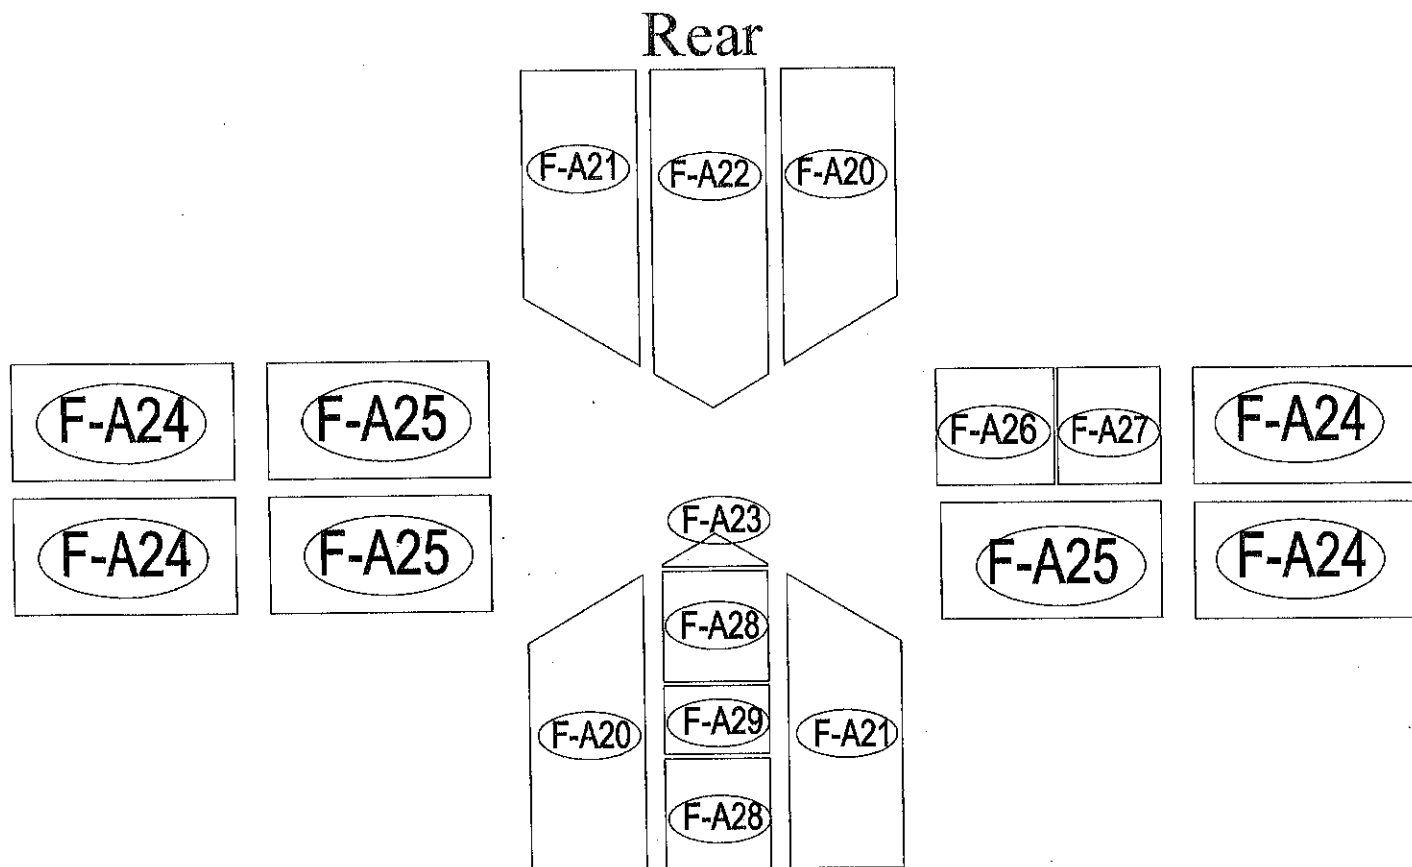
F-13

F-22



Plastic parts F-22 is adjustable to up or down

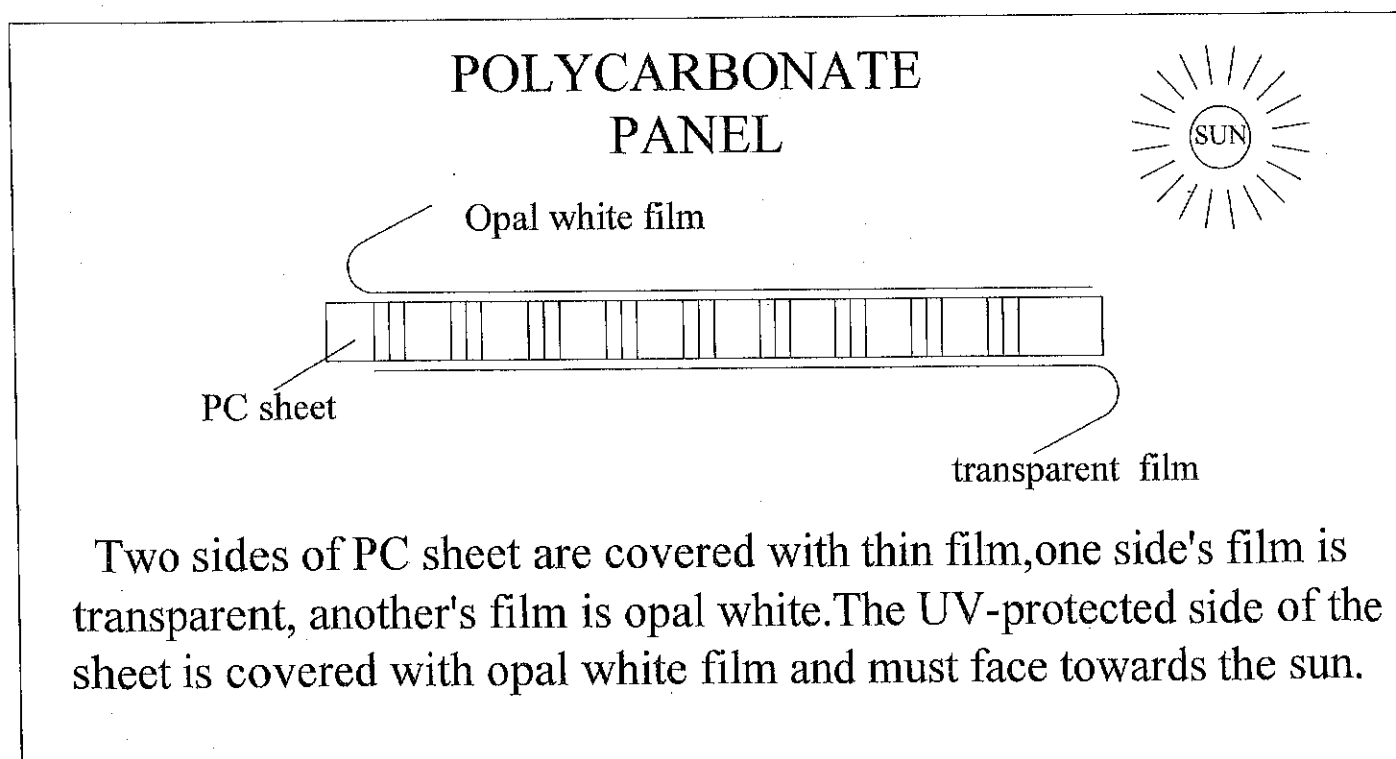
IMAGE	NO.	QTY
	F-A14	2



### Notes:

### Front

1. Remove approximately 2 inches of film from all sheet edges before installing. remove all film immediately after the constructions completed.
2. The UV-protected side of the sheet is covered with opal white film and must face towards the sun.



6X4FT

