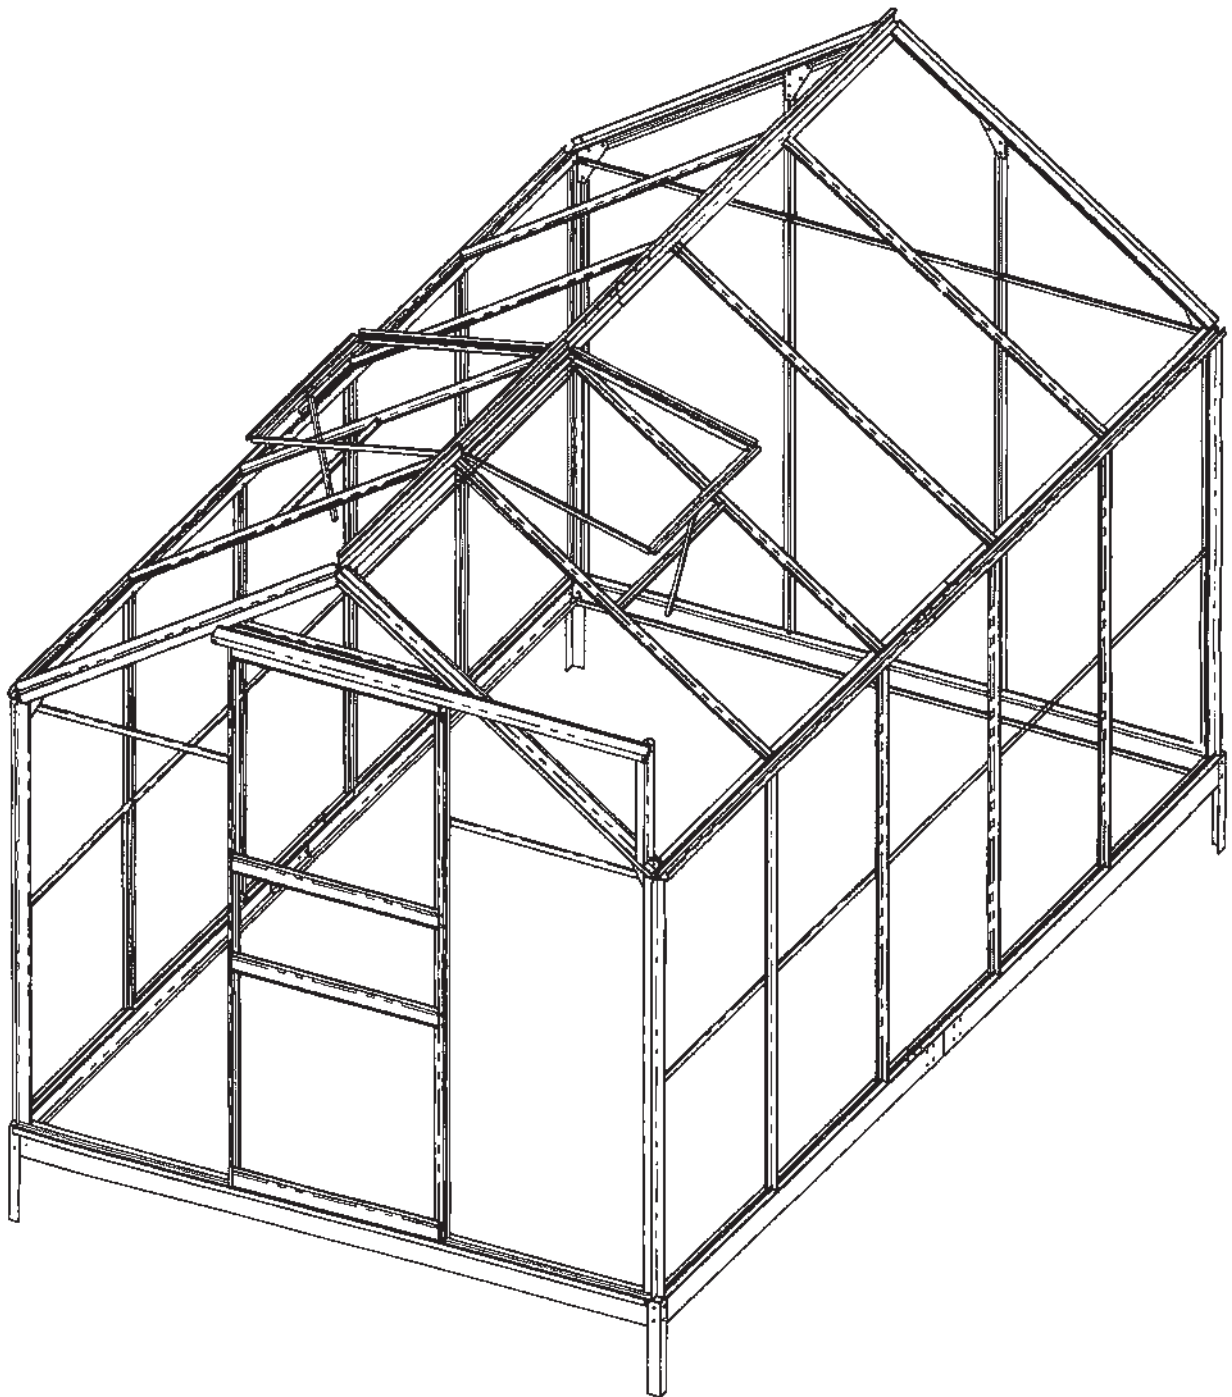


Greenhouse Assembly

Instruction 6X10FT



TO PREVENT INJURY, READ AND UNDERSTAND THE GREENHOUSE ASSEMBLY INSTRUCTIONS BEFORE USE.

Notes:

1. It takes about 3-4 hours to assemble the greenhouse by 2-3 persons.
2. The UV-protected side of the sheet is covered with opal white film and must face towards the sun.
3. Remove approximately 2 inches of film from all sheet edges before installing. Removing all film immediately after the construction is completed
4. Make sure the greenhouse is located on a flat, level surface.

GENERAL SAFETY, WARNINGS AND PRECAUTIONS

KEEP WORK AREA CLEAN AND DRY.

Cluttered, damp or wet work areas invite injuries.

STAY ALERT. Watch what you are doing at all times. Use common sense. Do not use the greenhouse when you are tired or distracted from the job at hand. It is recommended to use gloves for assembling the greenhouse.

MAINTAIN THIS PRODUCT WITH CARE.

Keep the greenhouse clean and dry for better performance: maintenance should be performed regularly.

USE THE RIGHT PRODUCT FOR THE JOB.

Do not attempt to force a small product to do the work of a larger industrial product. There are certain applications for which the greenhouse was designed. It will do the job better and more safely in the manner for which it was intended. Do not modify the greenhouse and do not use the greenhouse for a purpose for which it was not intended.












































MAINTAIN A SAFE WORKING ENVIRONMENT.

Keep the work area tidy. Make sure there is adequate surrounding workspace. Avoid high traffic areas. Always keep the work area free of obstructions, grease, oil, trash and other debris.

PROPER GREENHOUSE LOCATION.

Make sure the greenhouse is located on a flat, level surface.

PARTS LIST

IMAGE	NO.	QTY	IMAGE	NO.	QTY.	IMAGE	NO.	QTY.
	F-01	4		F-21	1		F-D14	180
	F-02	2		F-22	4		F-D14a	3
	F-03	1		F-D01	2	screw ST4x14	F-D15	8
	F-04	1		F-D01a	2	screw ST4x10	F-D15a	8
	F-05	4		F-D02	2	screw ST4x8	F-D16	4
	F-06	2		F-D02a	2		F-D17	2
	F-07	2		F-D03	8		F-D18	2
	F-08	1		F-D04	8		F-D19	2
	F-09	1		F-D05	2			
	F-10	1		F-D05a	2			
	F-11	1		F-D06	2			
	F-12	1		F-D06a	2			
	F-13	1		F-D07	2			
	F-14	2		F-D08	2			
	F-15	2		F-D09	4			
	F-16	2		F-D10	2			
	F-17	2		F-D11	2			
	F-18	3		F-D12	2			
	F-19	8		F-D13	20			

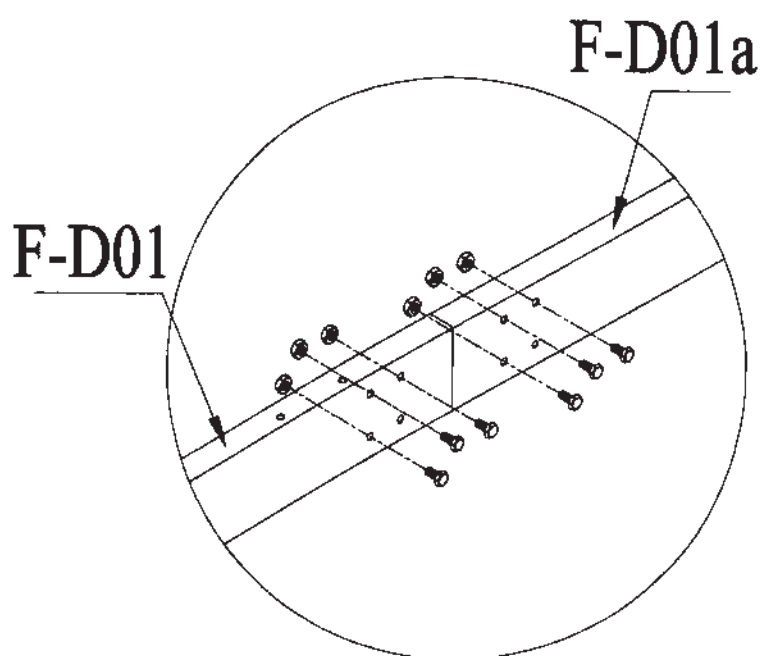
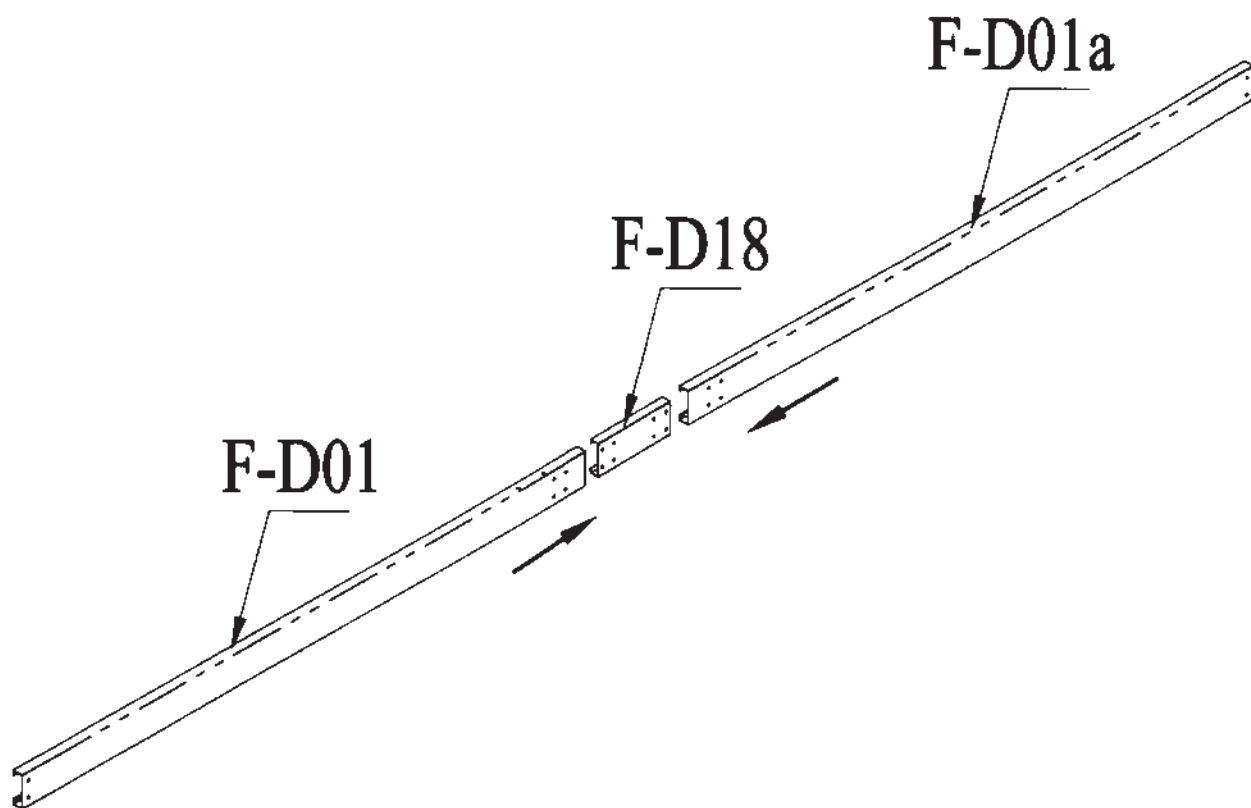






IMAGE	NO.	QTY
	F-D01	2
	F-D01a	2
	F-D18	2
	F-D14	16

Ground Beam Foundation with Anchor Points

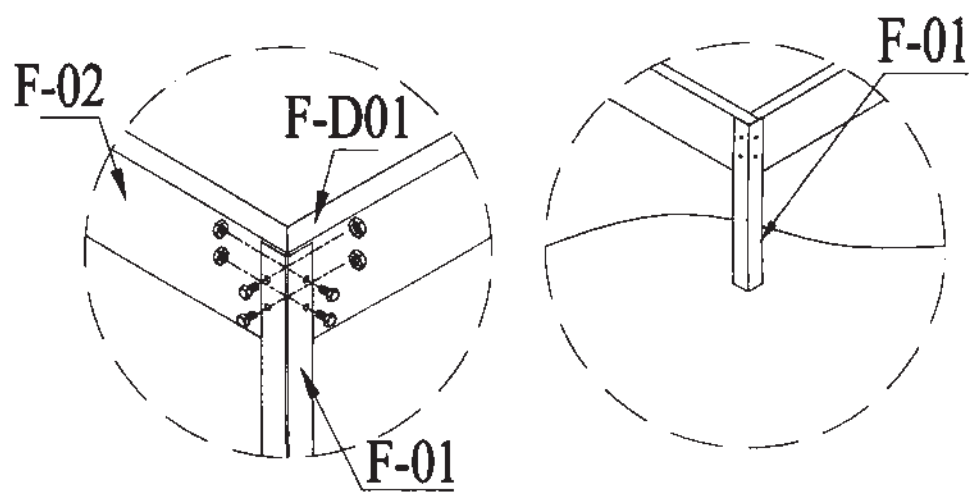
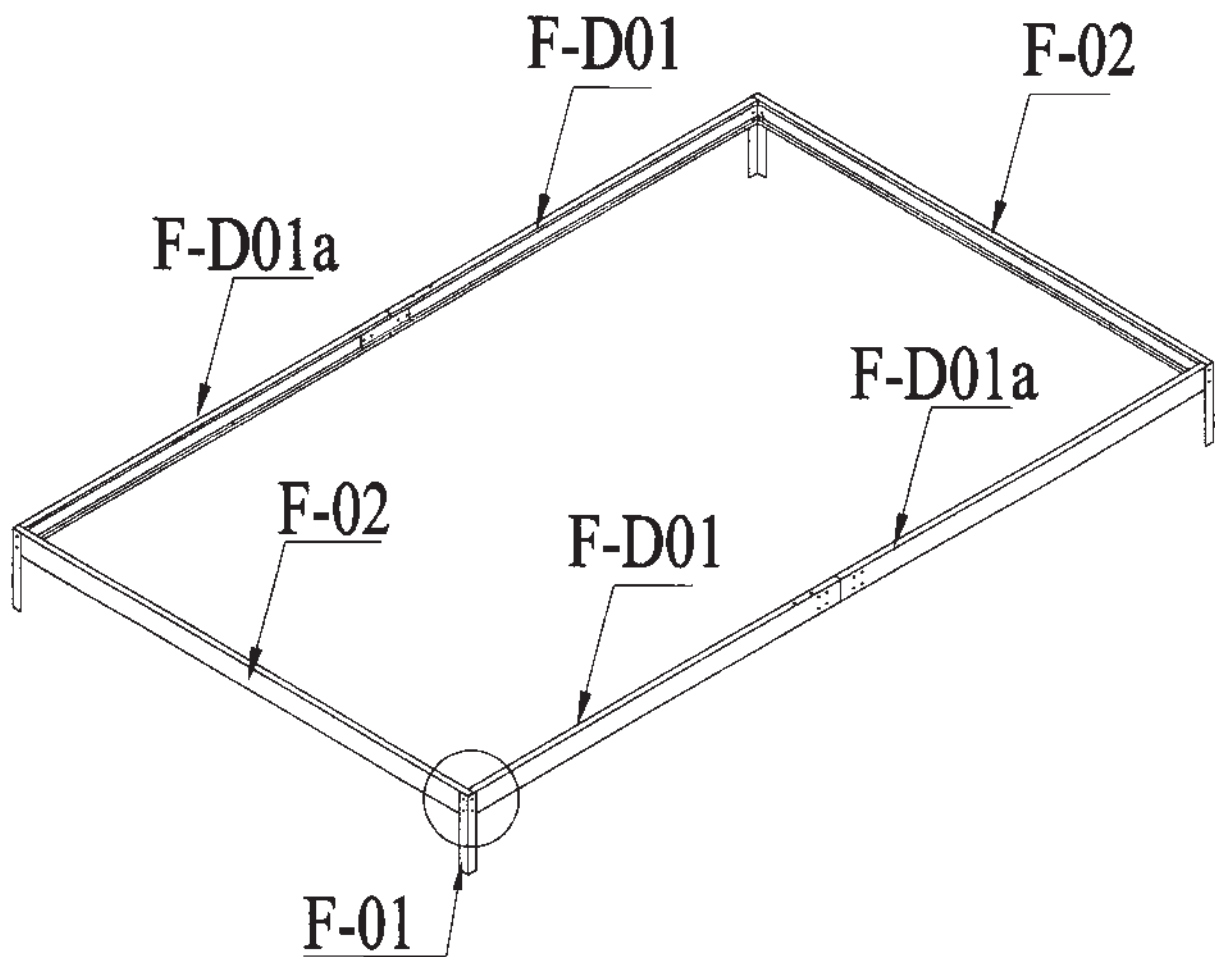





IMAGE	NO.	QTY
	F-02	2
	F-01	4
	F-D14	16

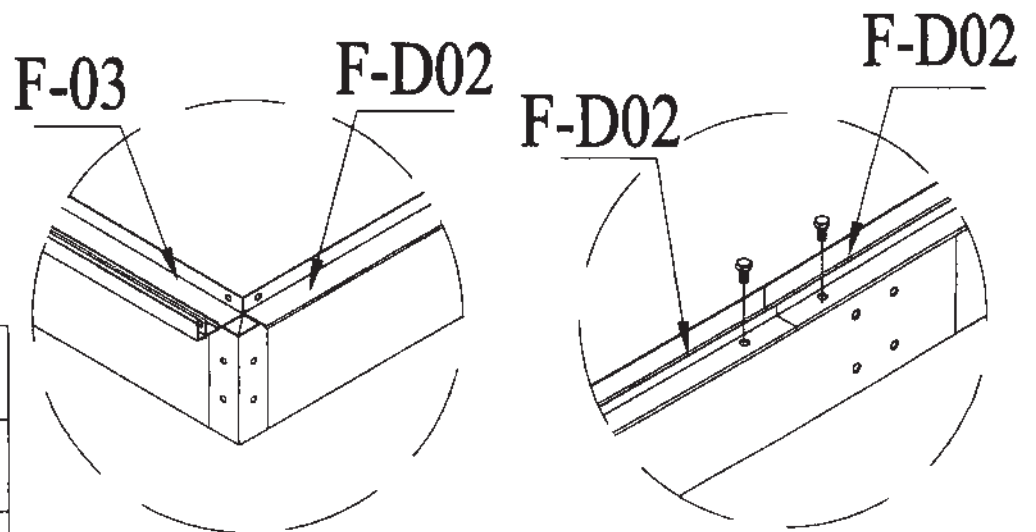
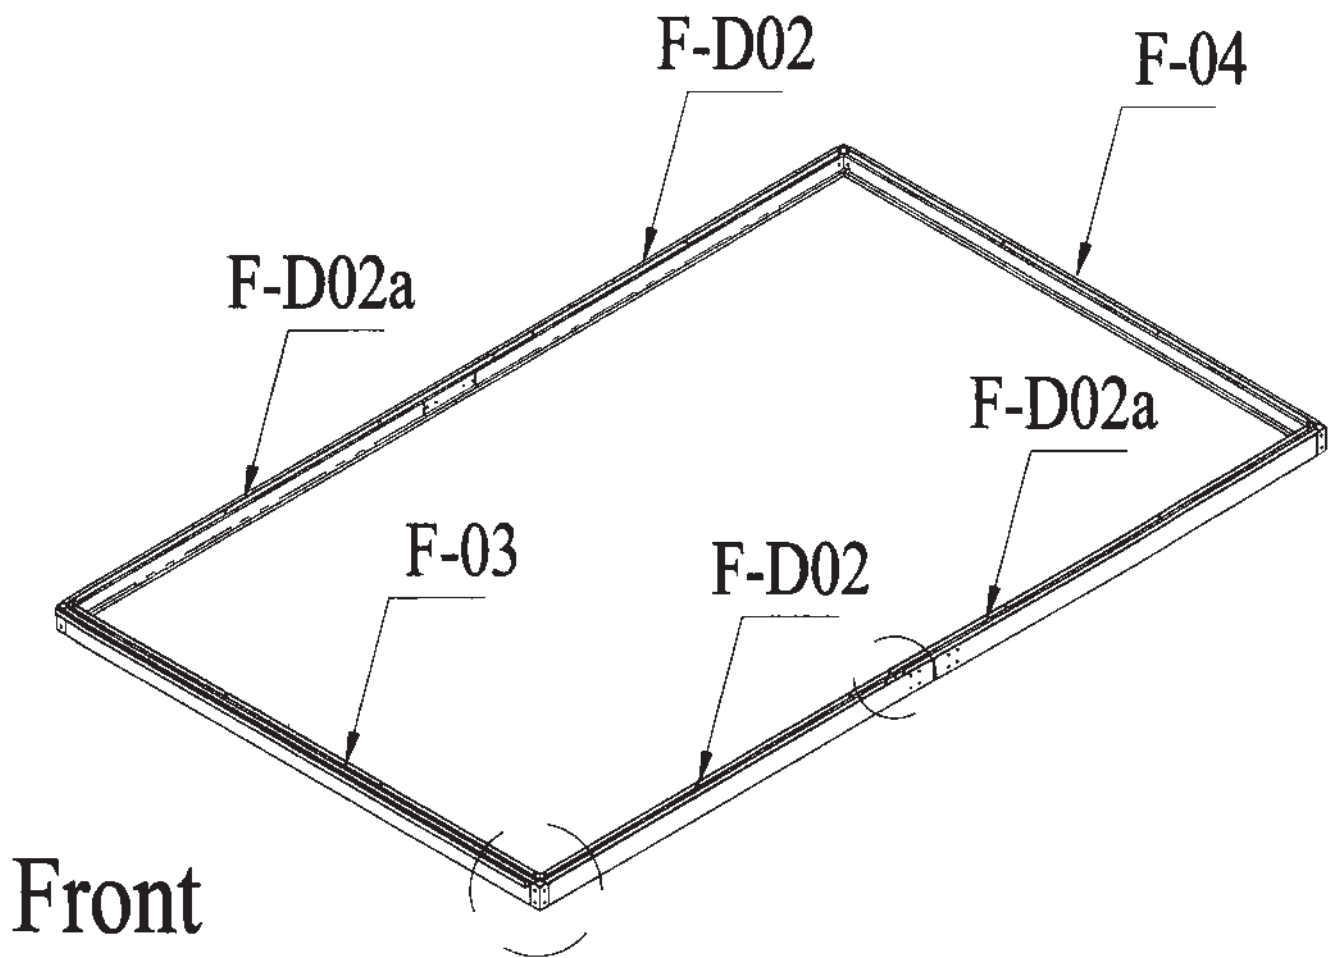




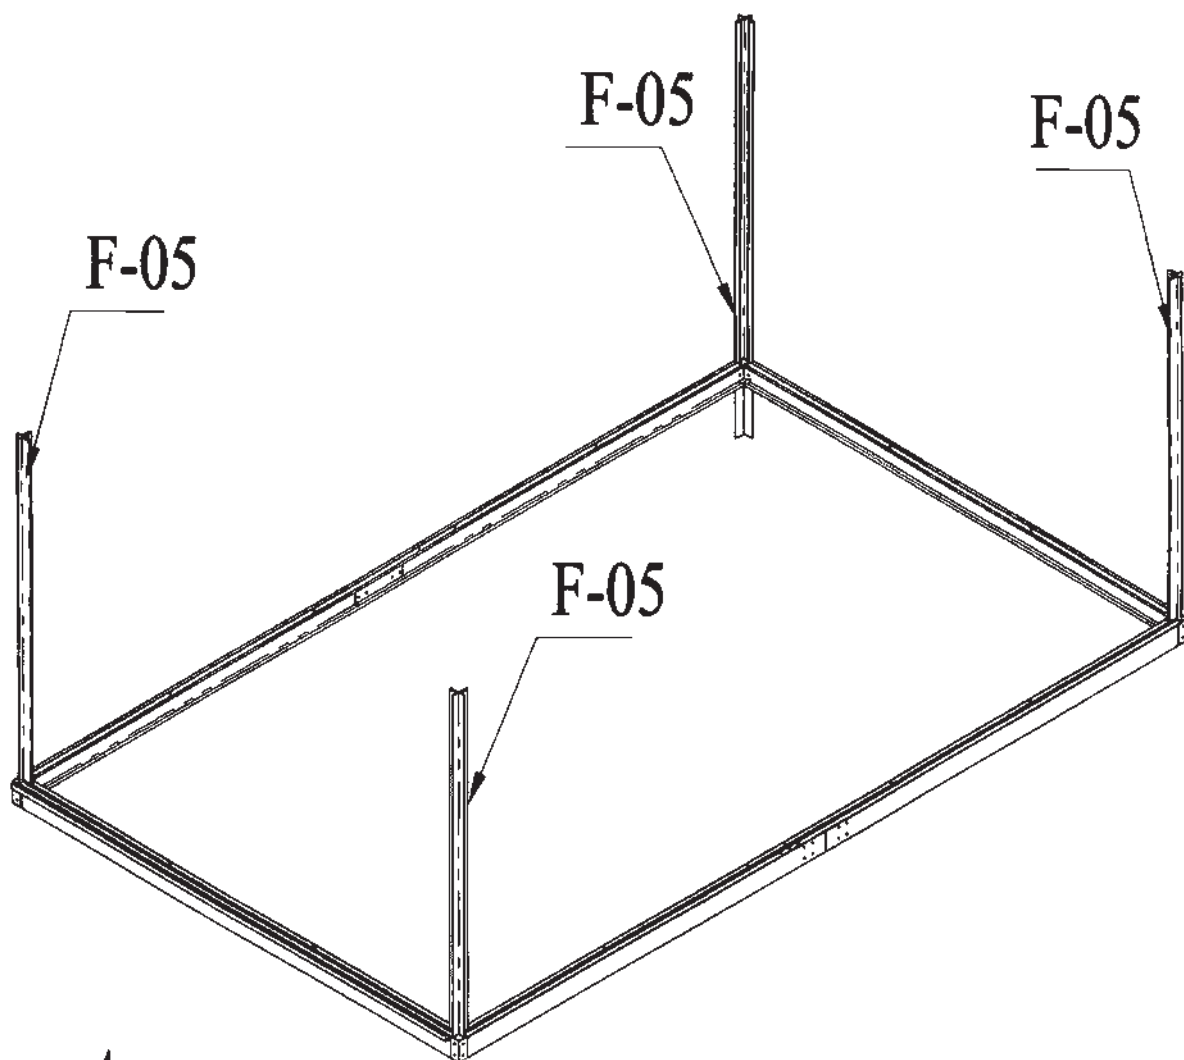


IMAGE	NO.	QTY
	F-D02	2
	F-04	1
	F-03	1
	F-D14	4



Front

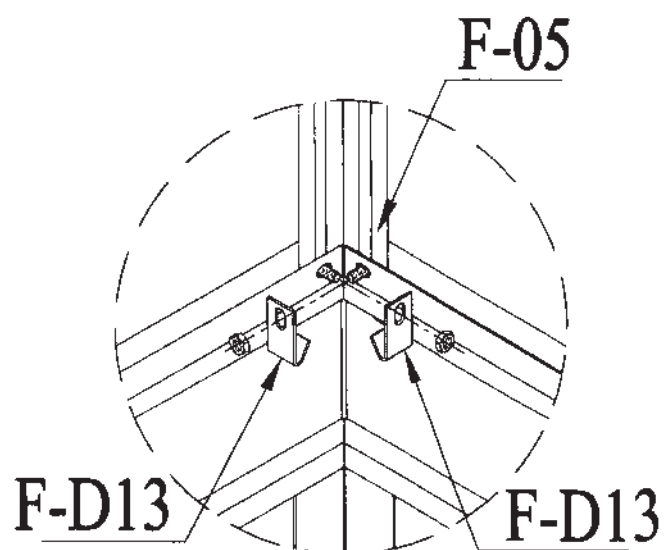





IMAGE	NO.	QTY
	F-05	4
	F-D13	8
	F-D14	8

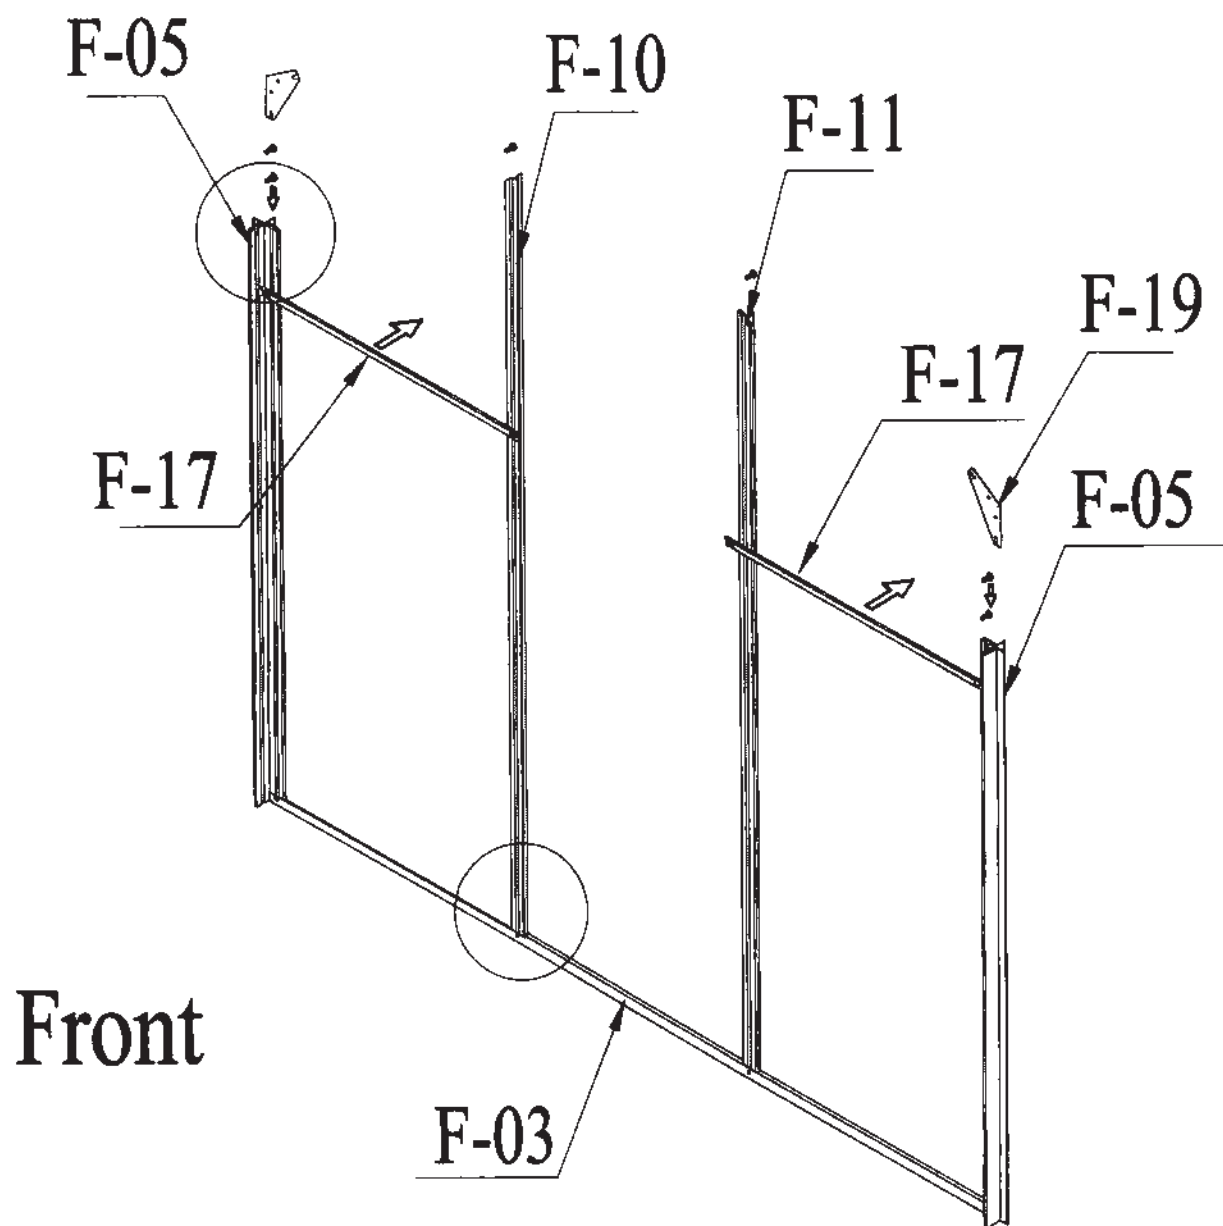






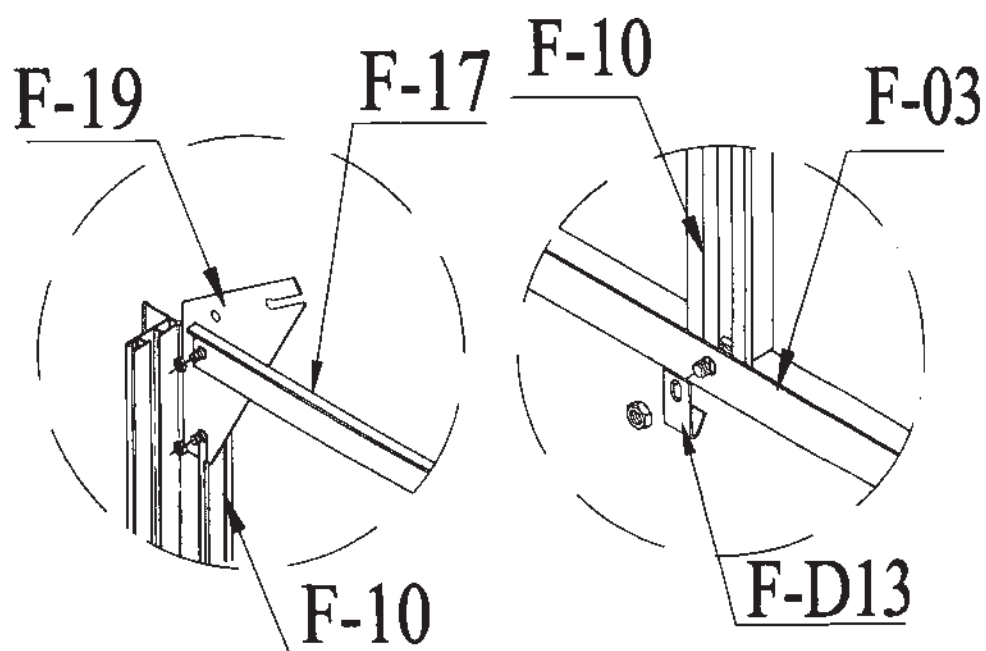


IMAGE	NO.	QTY
	F-10	1
	F-11	1
	F-17	2
	F-19	2
	F-D13	2
	F-D14	8



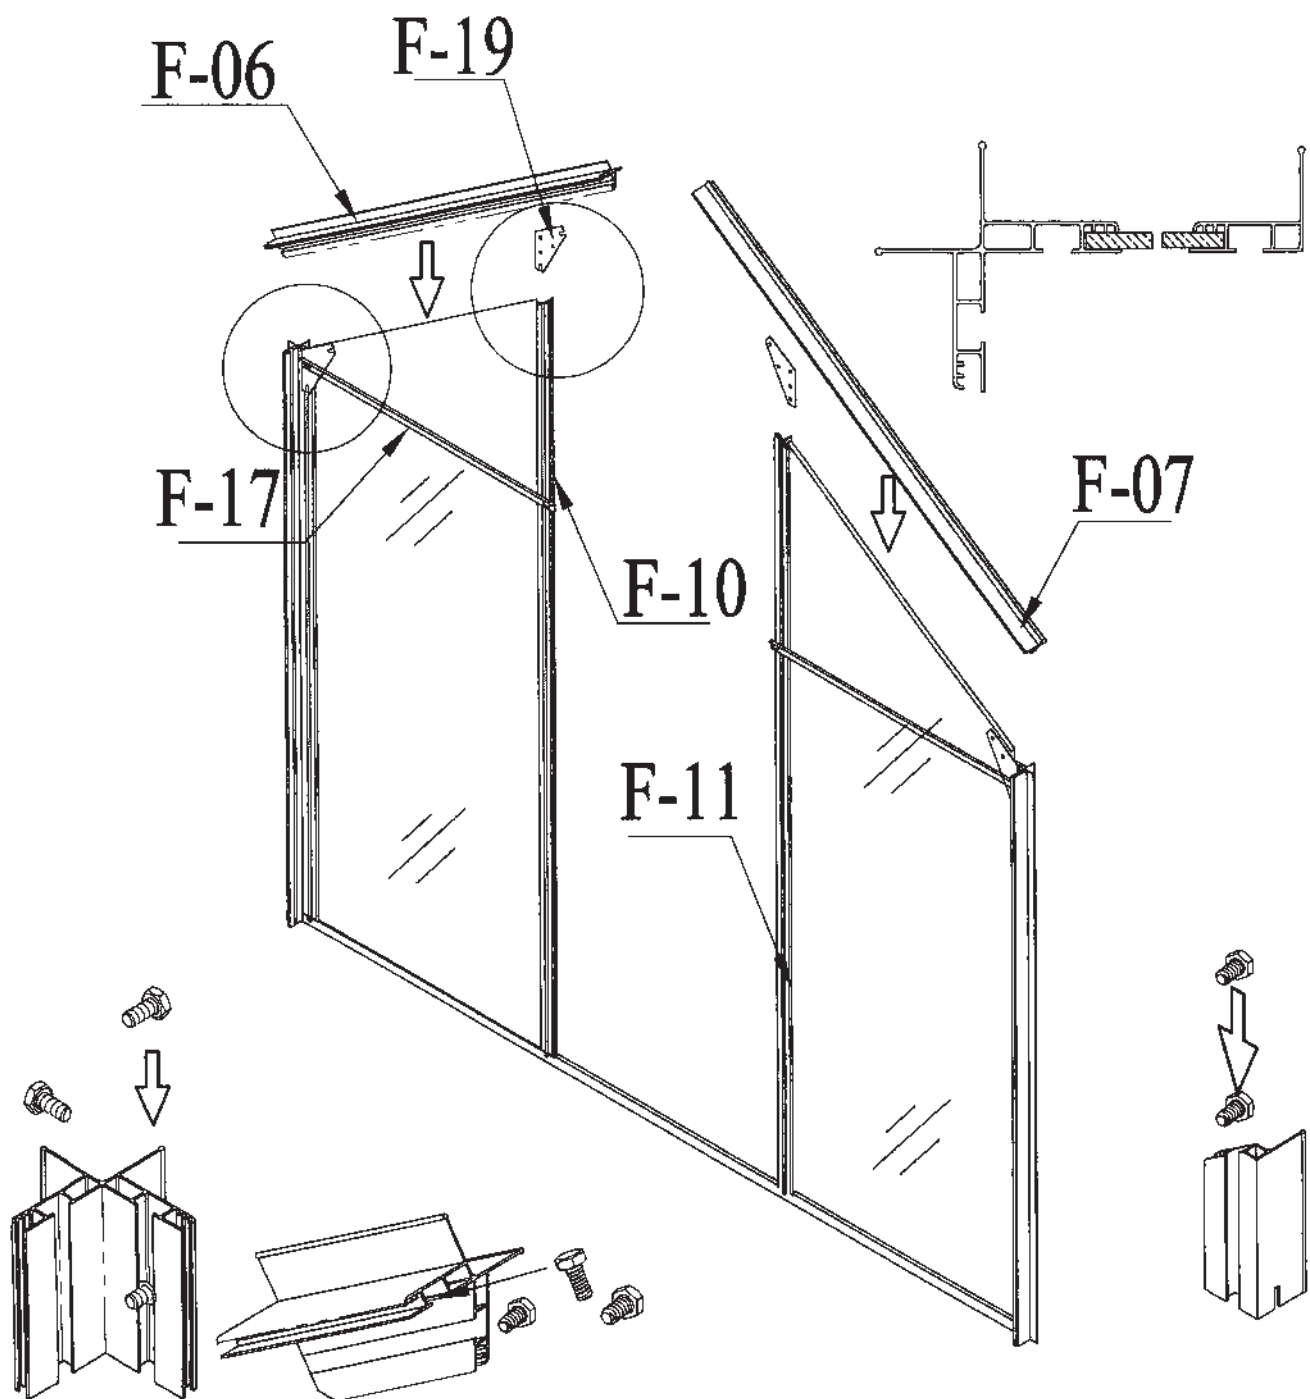






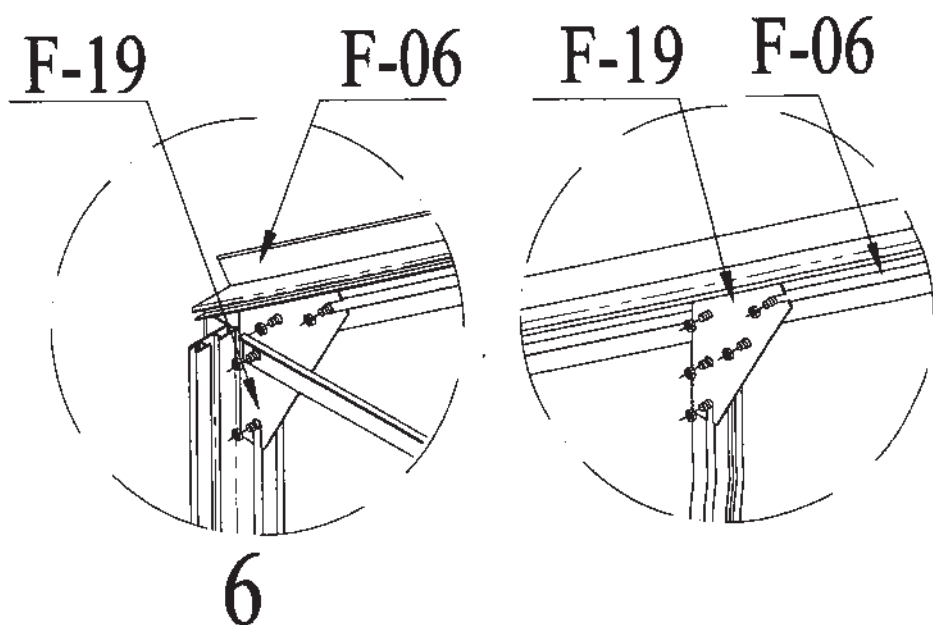
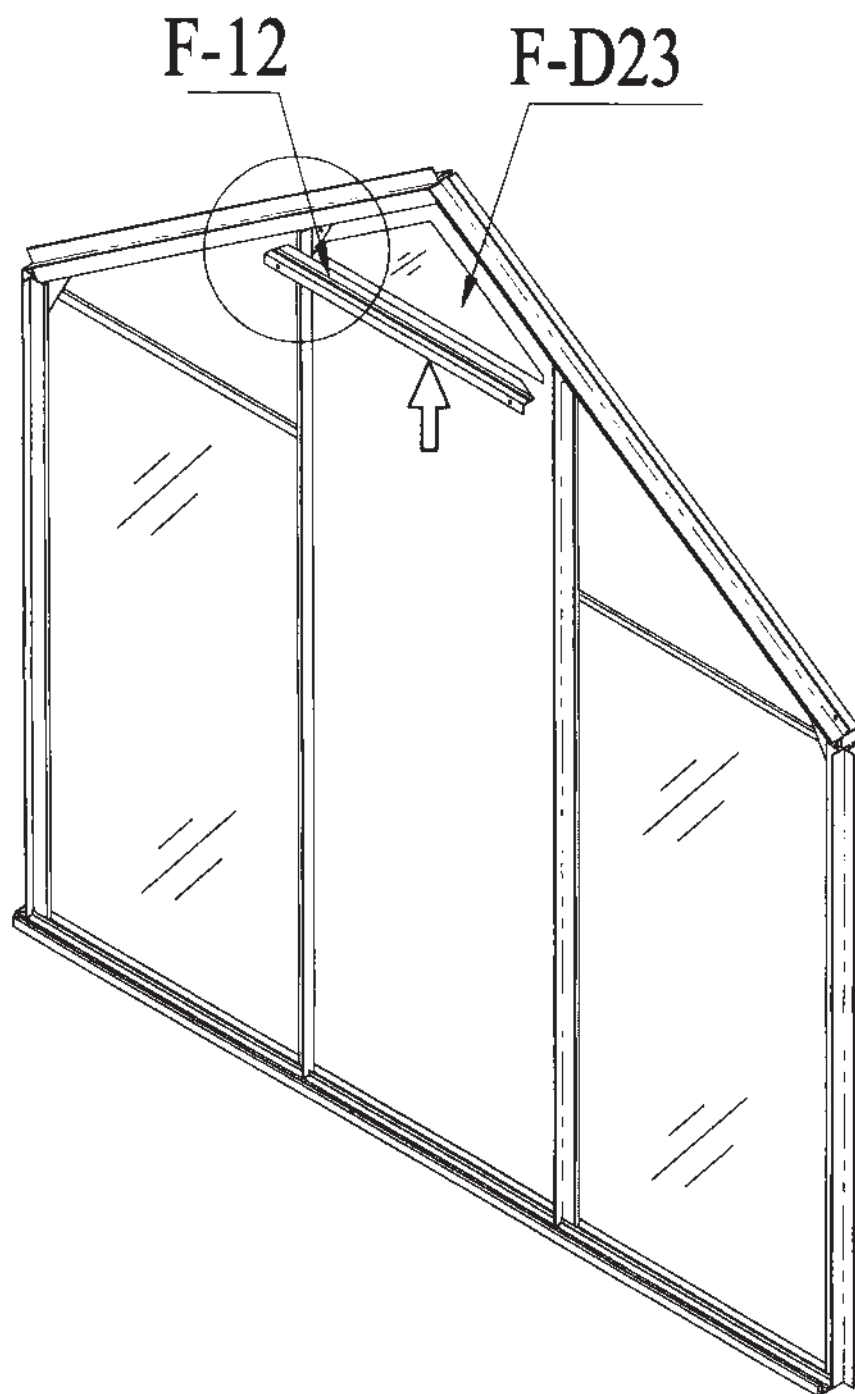


IMAGE	NO.	QTY
	F-06	1
	F-07	1
	F-D20	1
	F-D21	1
	F-19	2
	F-D14	12





F-12

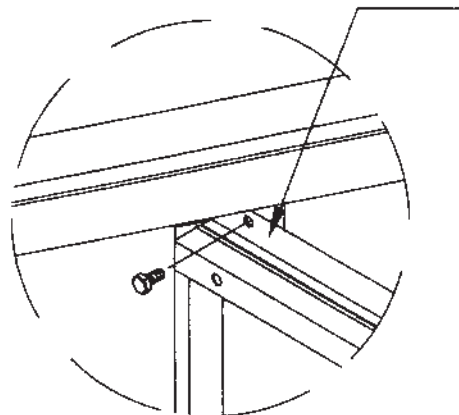





IMAGE	NO.	QTY
	F-12	1
	F-D23	1
	F-D14	2

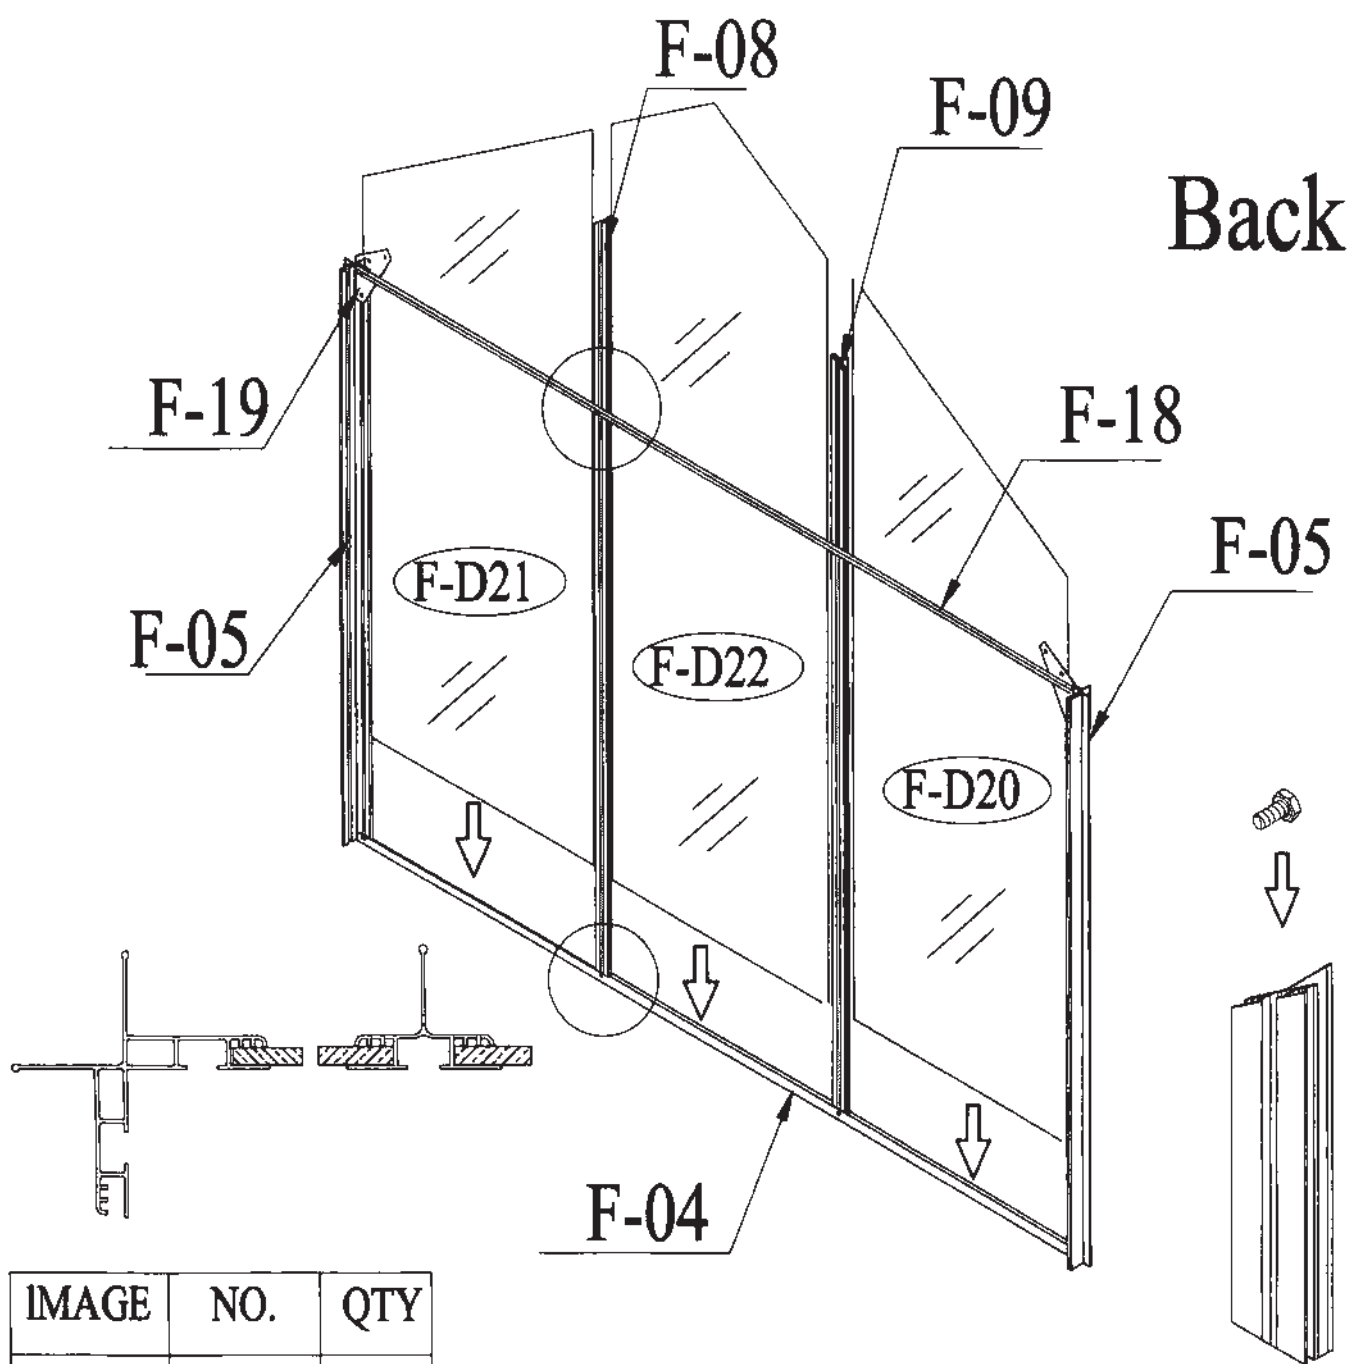
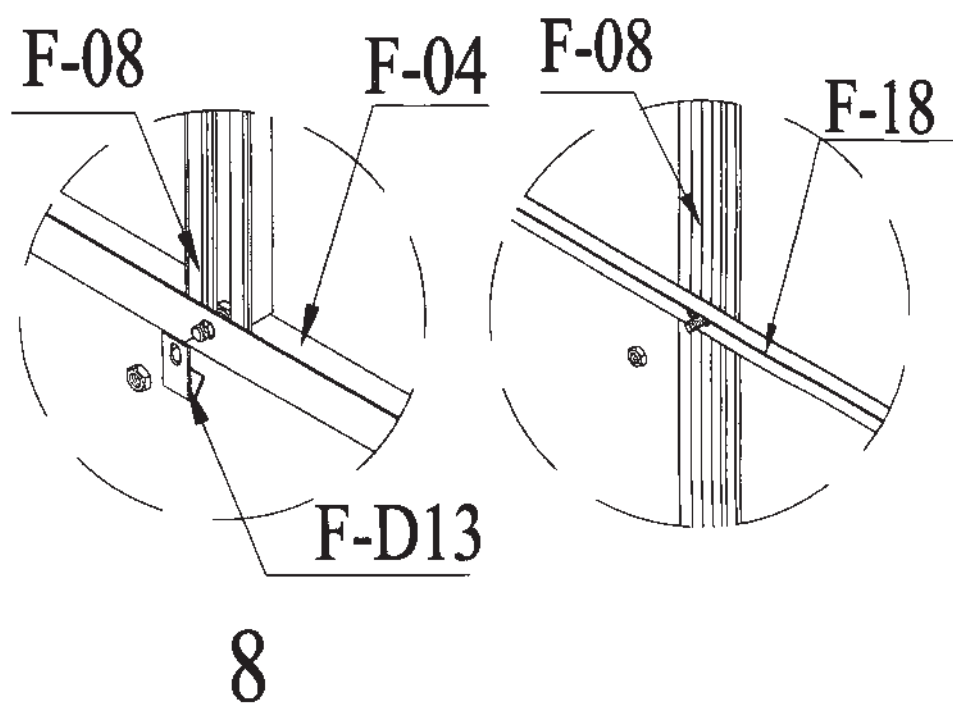


IMAGE	NO.	QTY
	F-08	1
	F-09	1
	F-18	1
	F-19	2
	F-D20	1
	F-D21	1
	F-D22	1
	F-D13	2
	F-D14	8



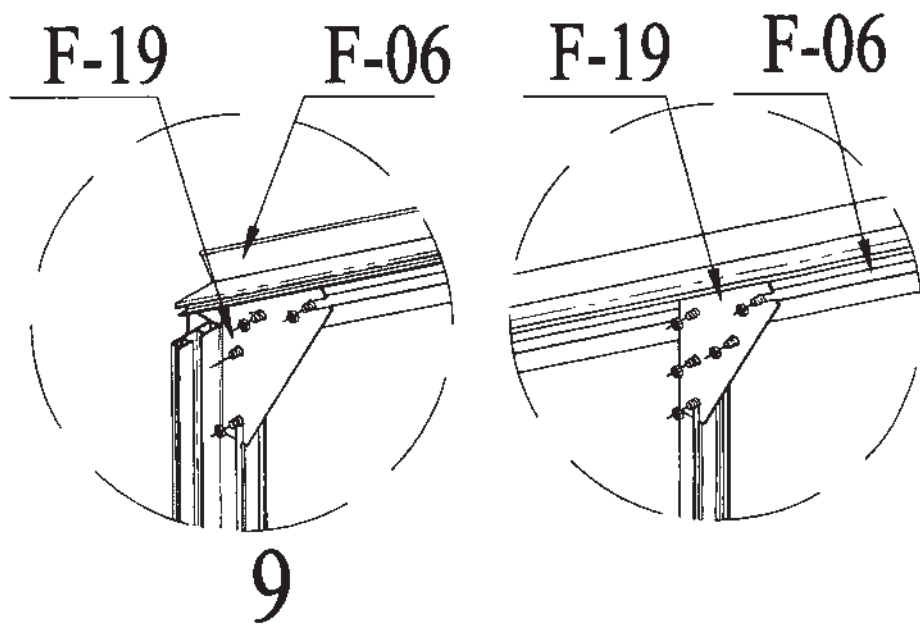
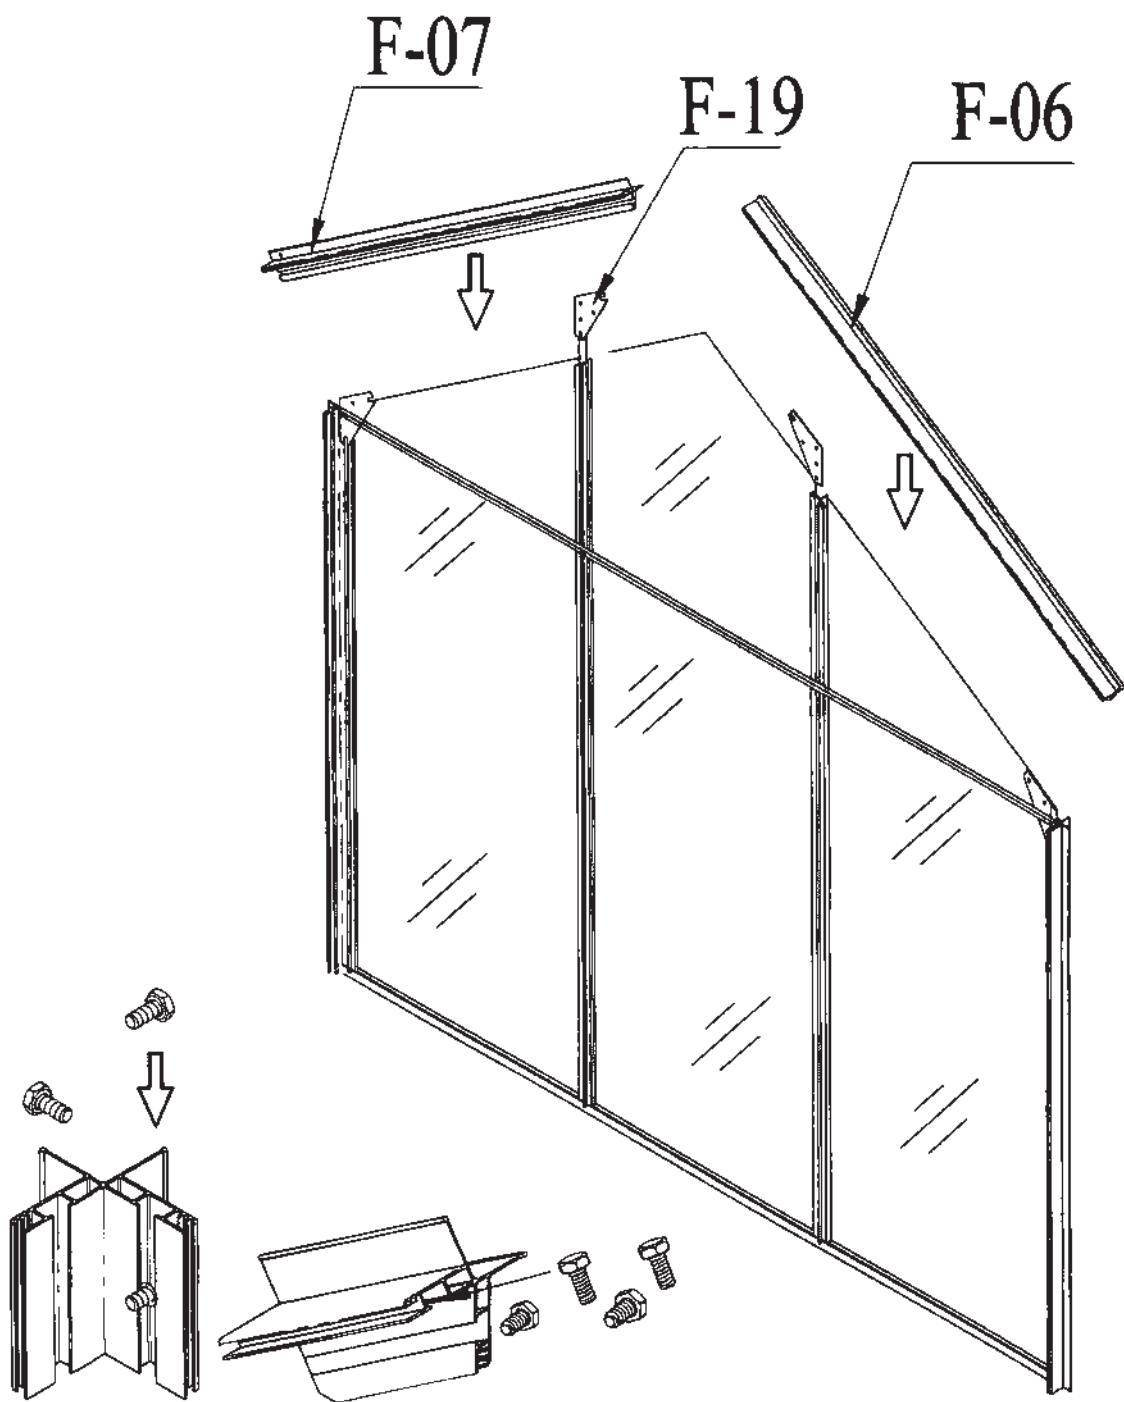






IMAGE	NO.	QTY
	F-06	1
	F-07	1
	F-19	2
	F-D14	12

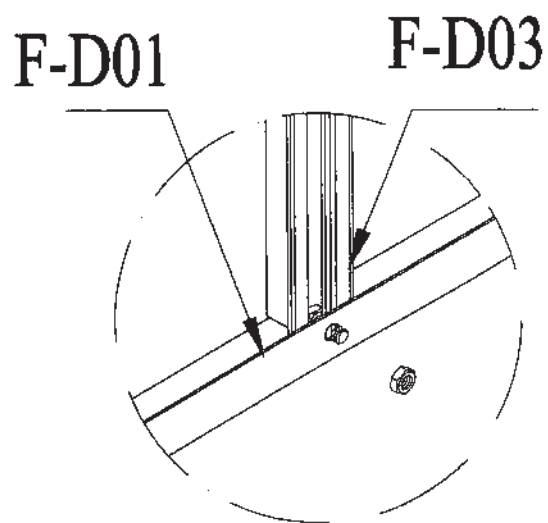
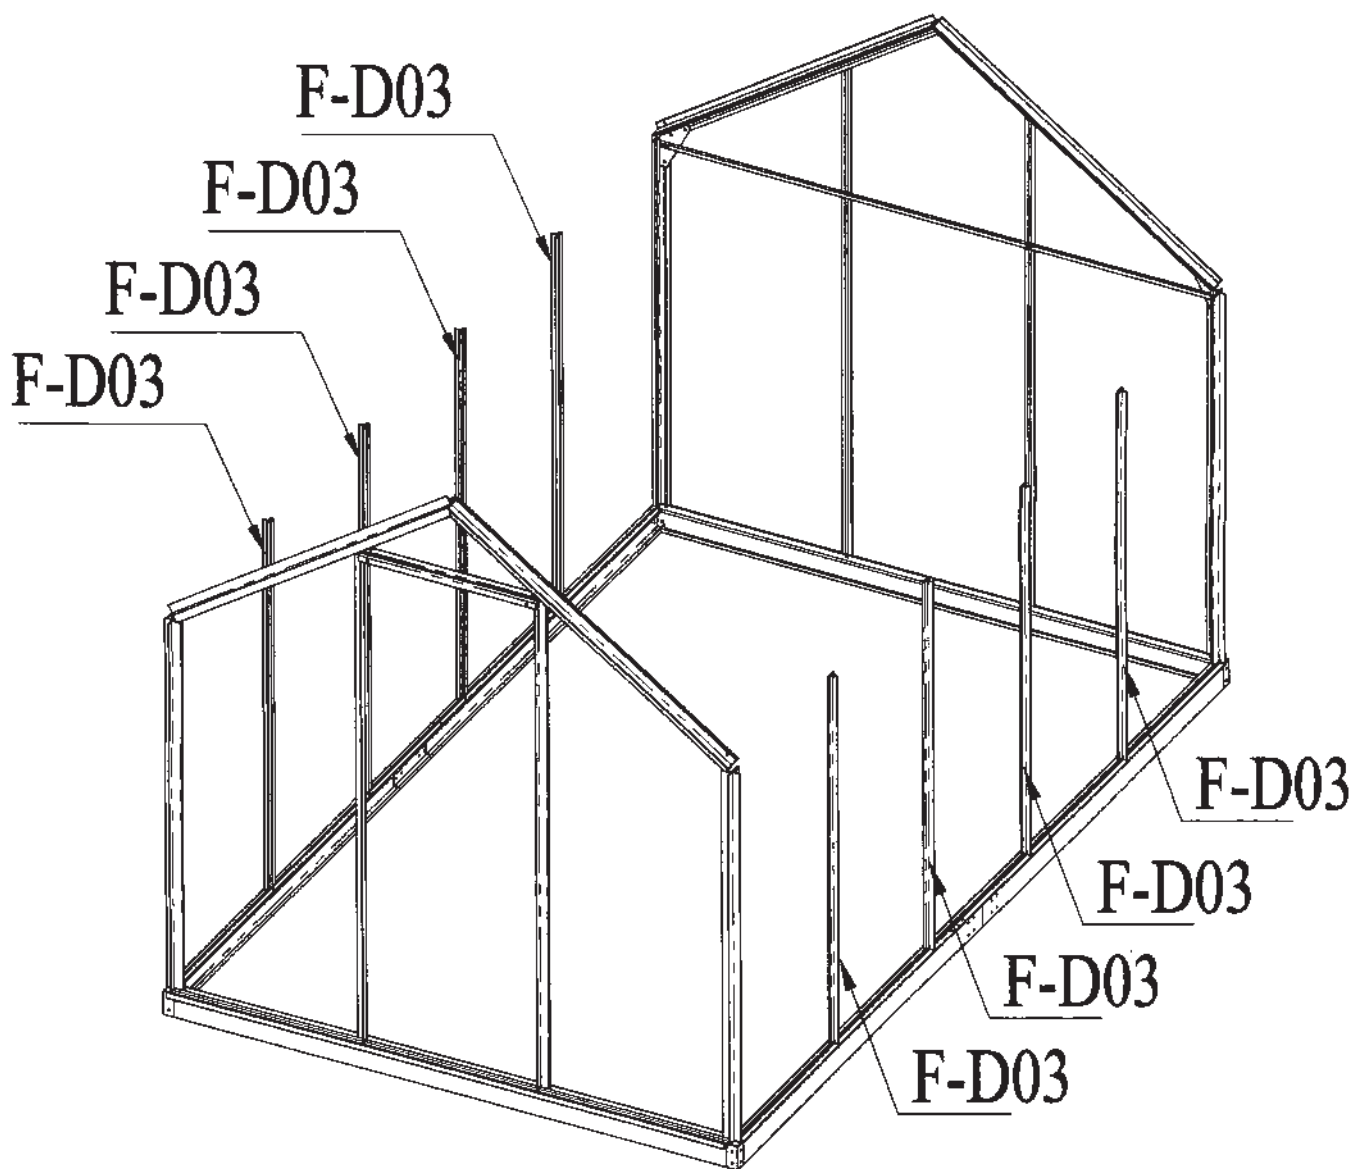
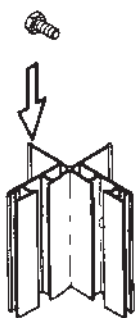
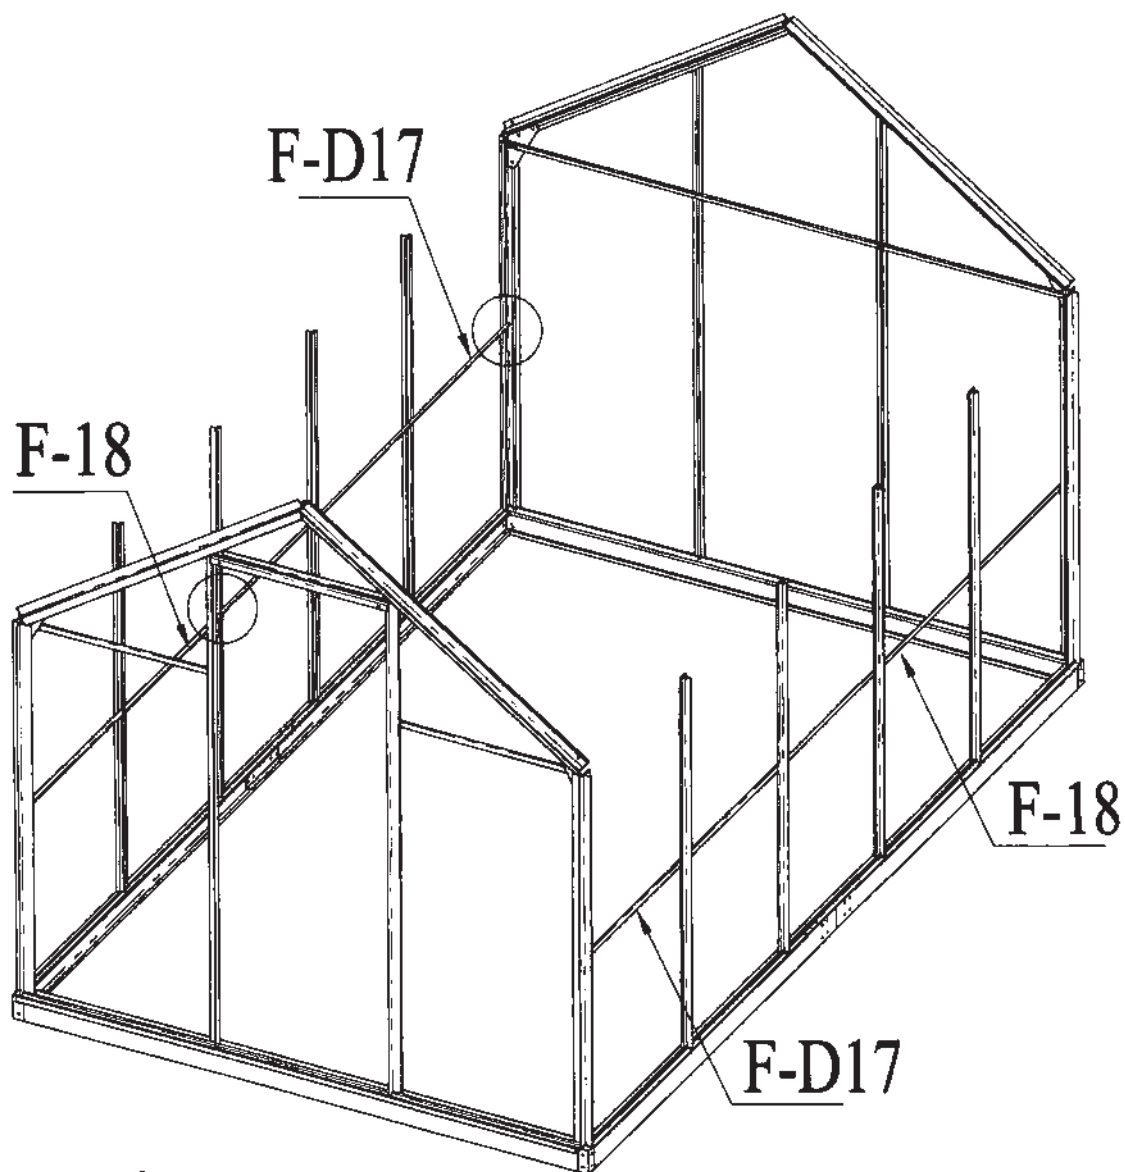


IMAGE	NO.	QTY
	F-D03	8
	F-D14	8



F-D03

F-D17

F-D17

F-05

F-18

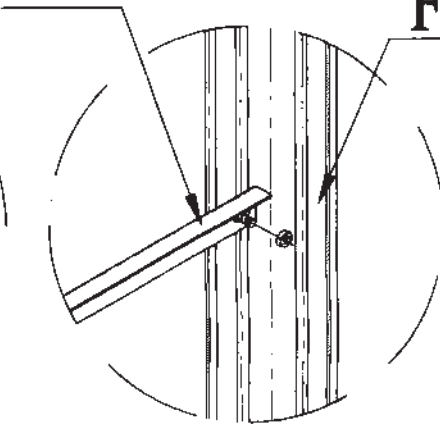
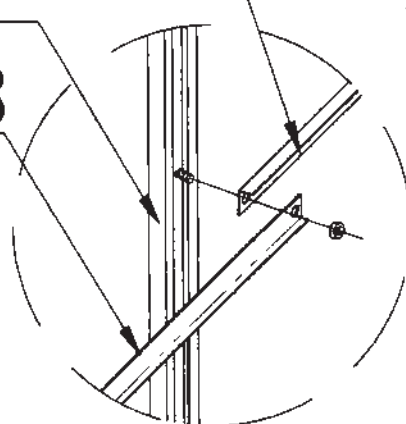
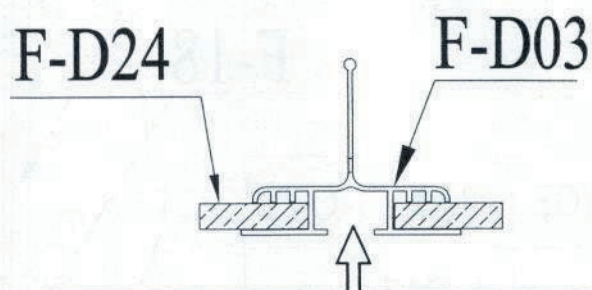
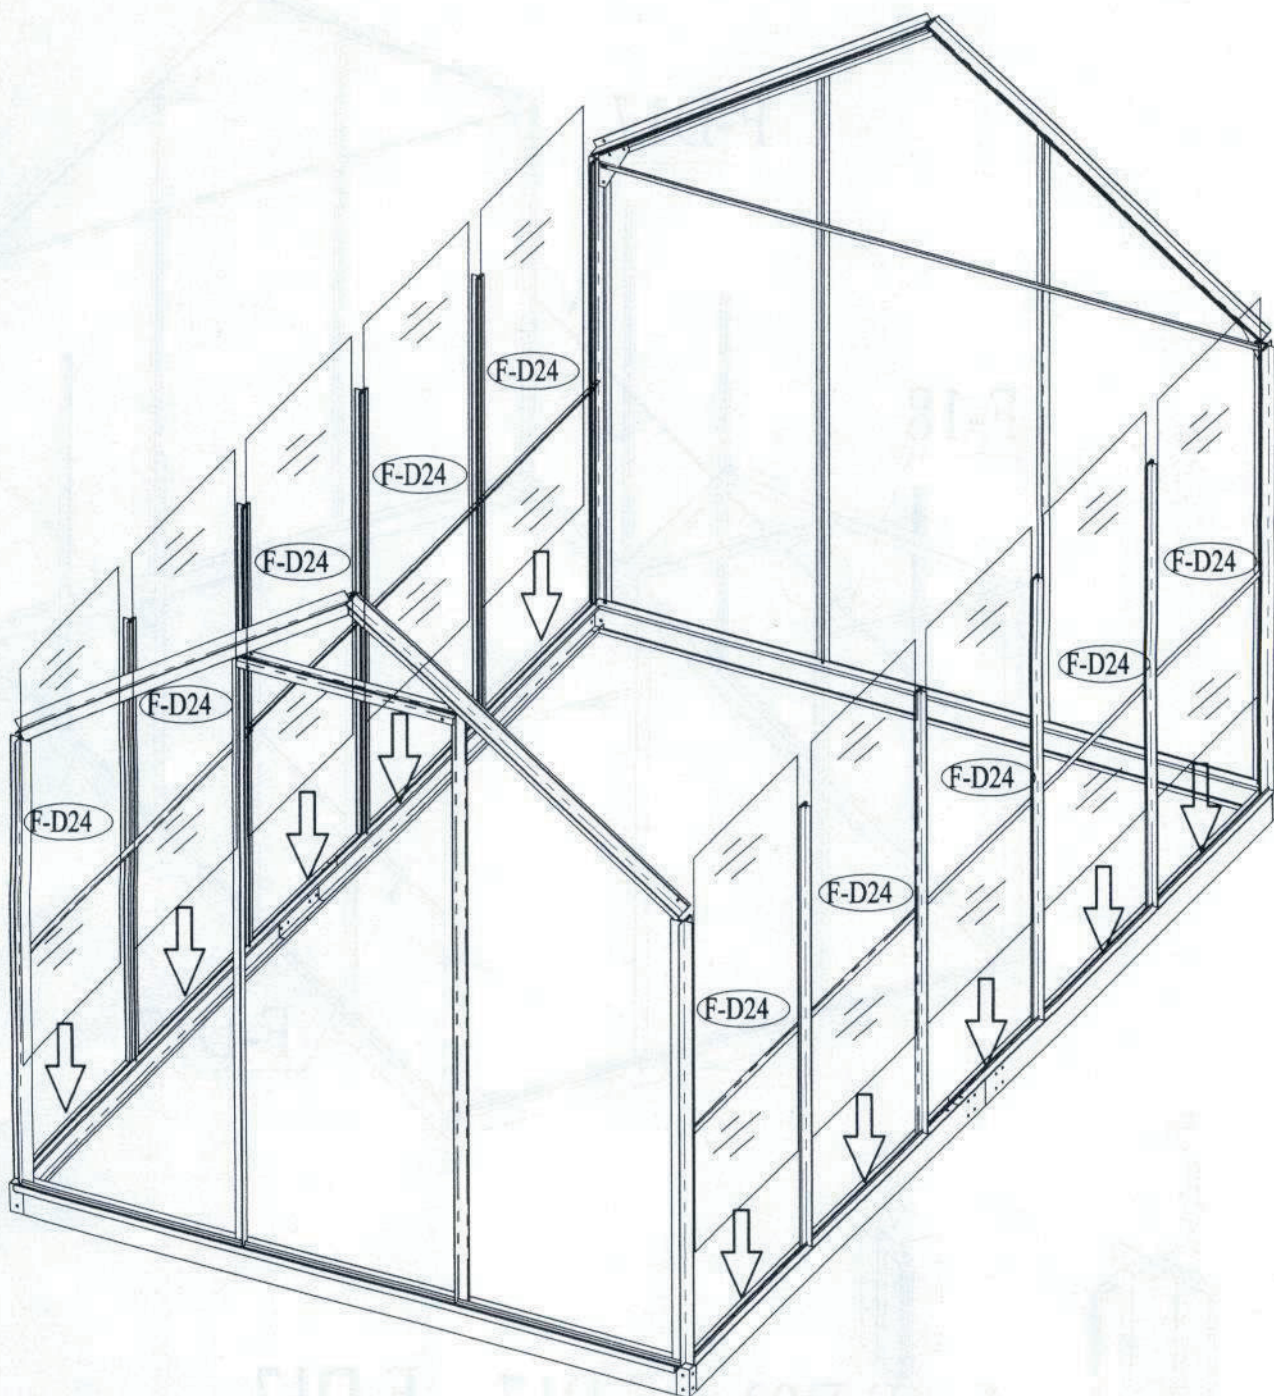


IMAGE	NO.	QTY
	F-D17	2
	F-18	2
	F-D14	12



Sliding polycarbonate F-D24 in the channel of profile F-D03.

IMAGE	NO.	QTY
	F-D24	10

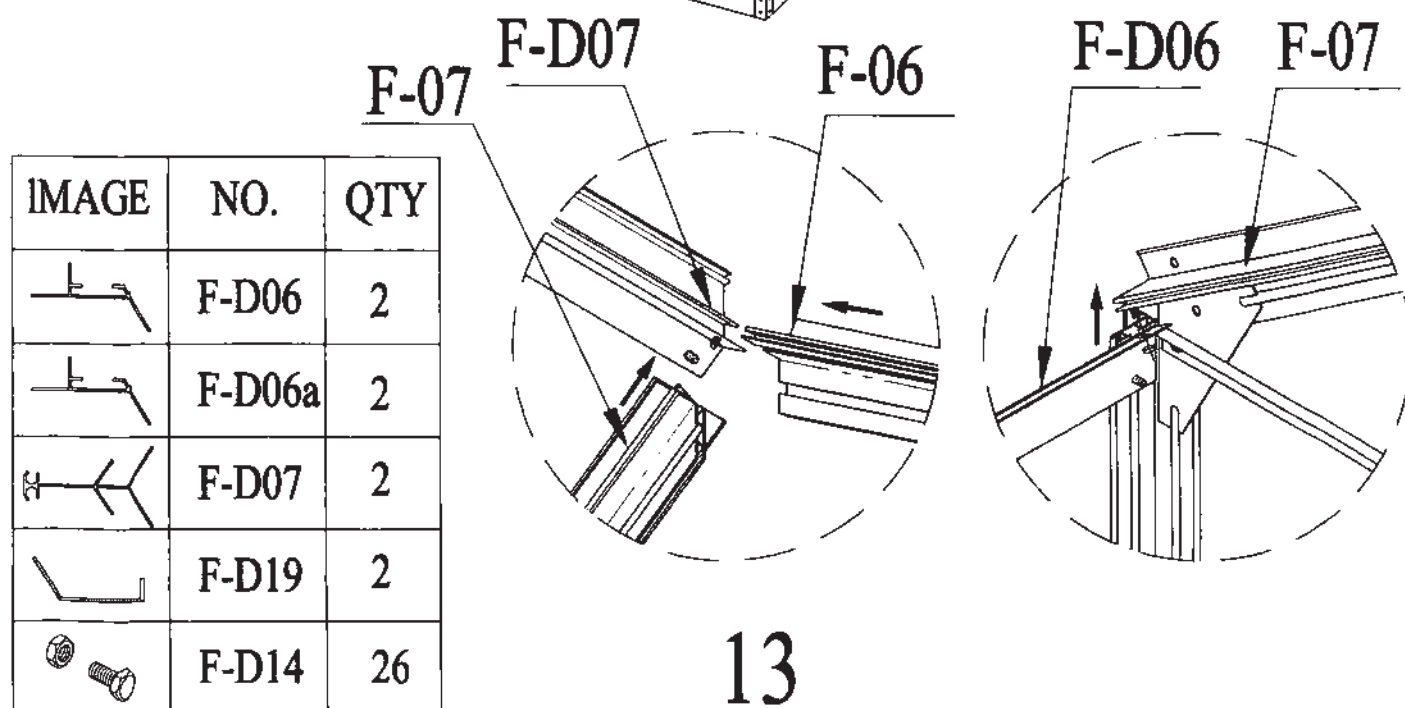
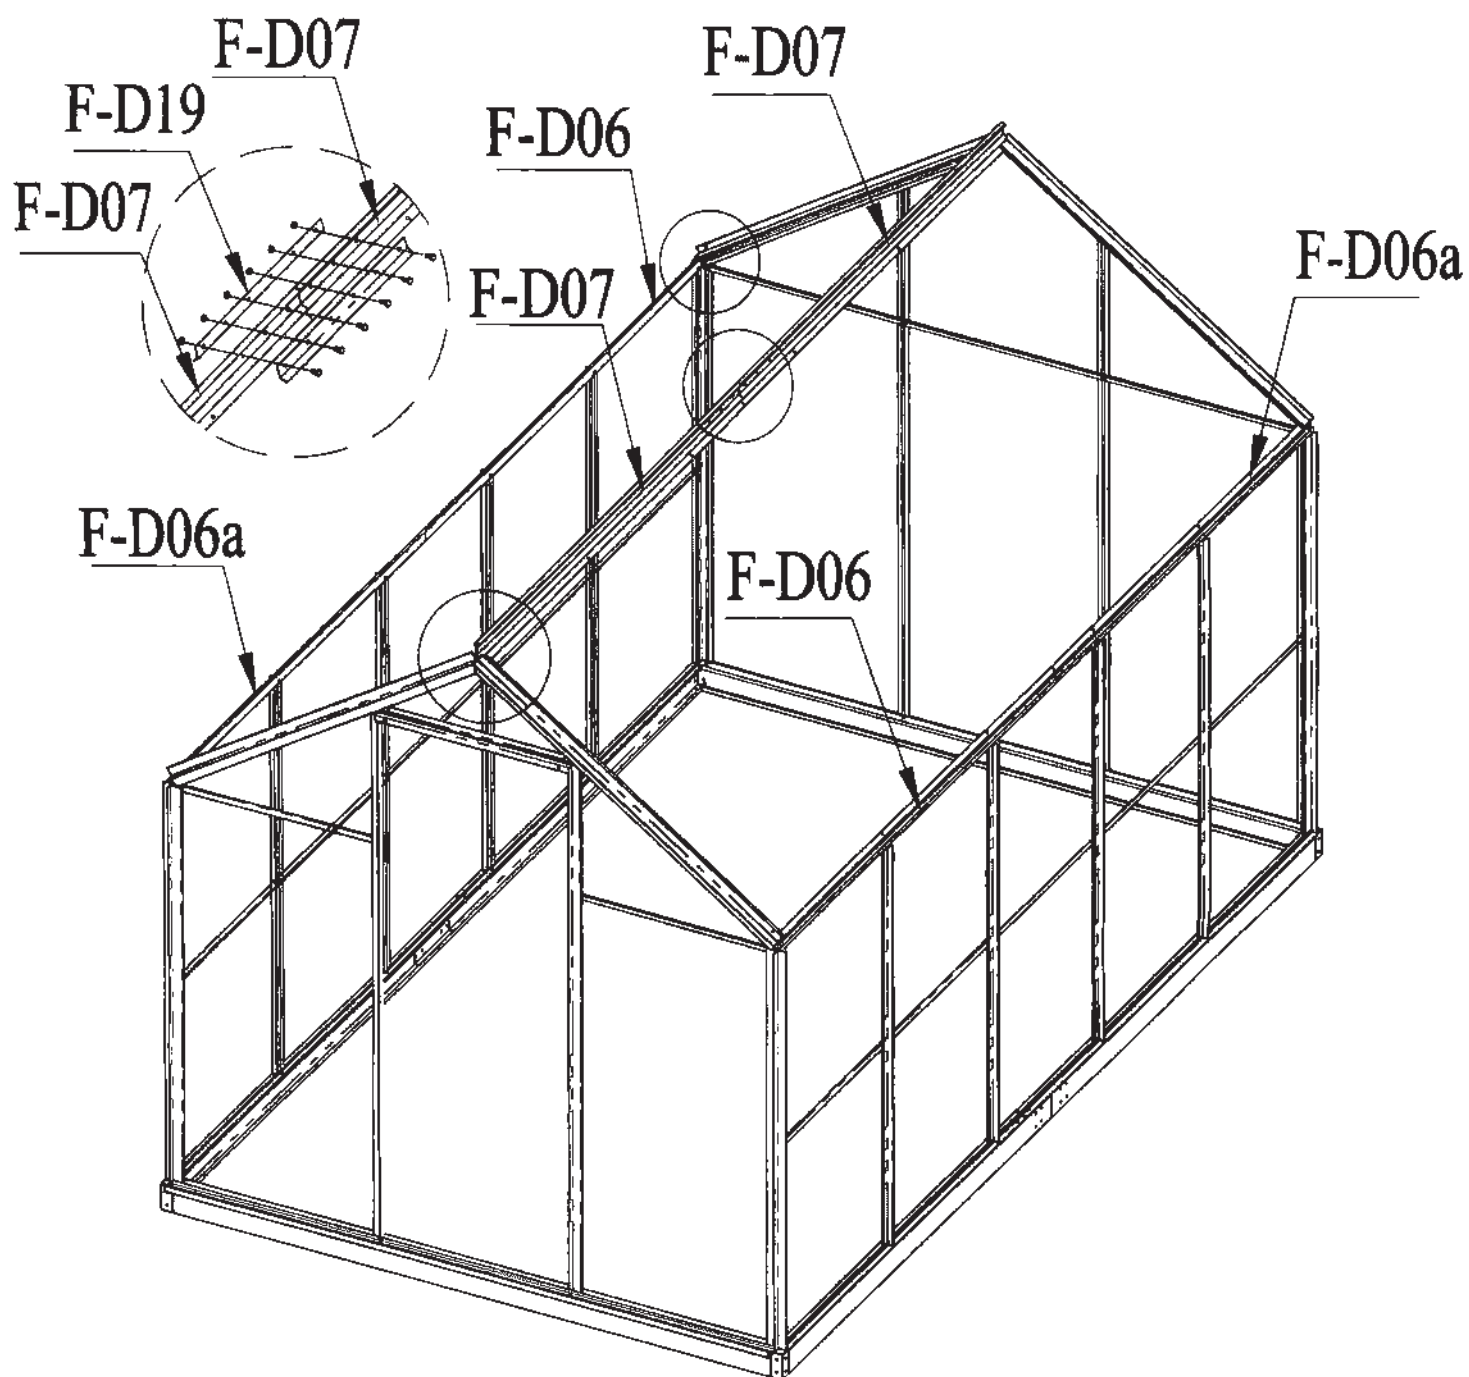





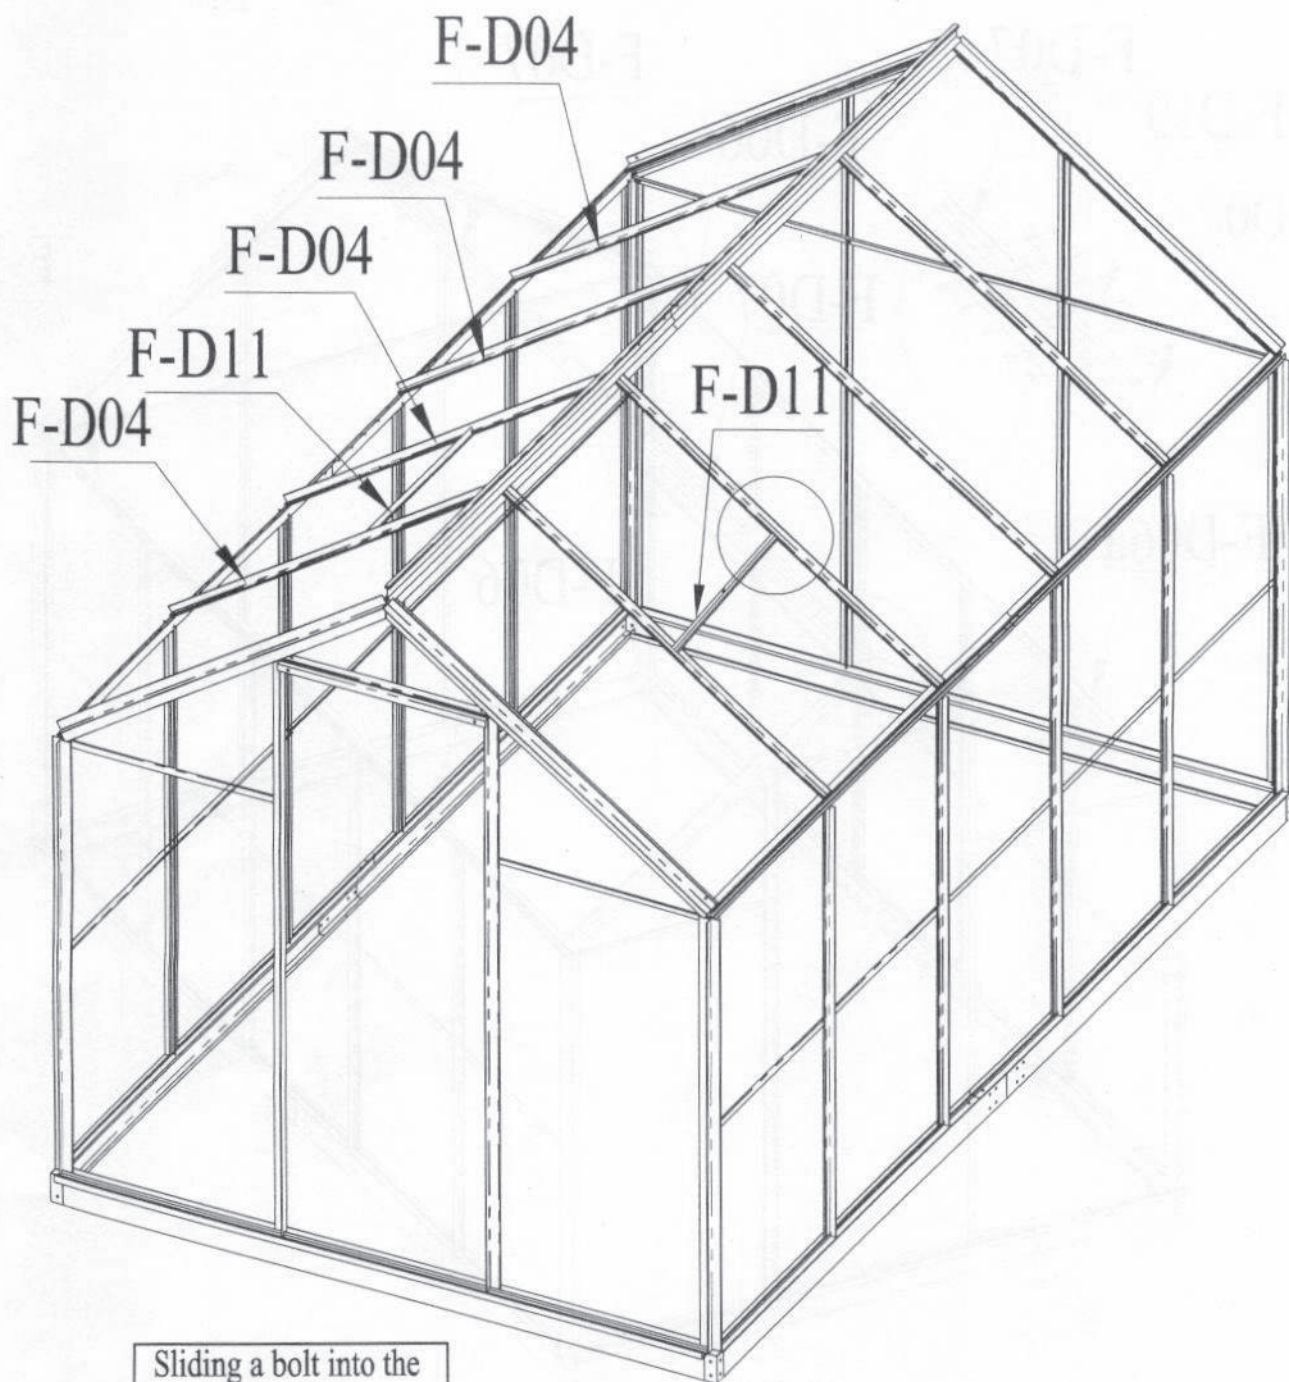


IMAGE	NO.	QTY
	F-D06	2
	F-D06a	2
	F-D07	2
	F-D19	2
	F-D14	26



Sliding a bolt into the groove of F-D04

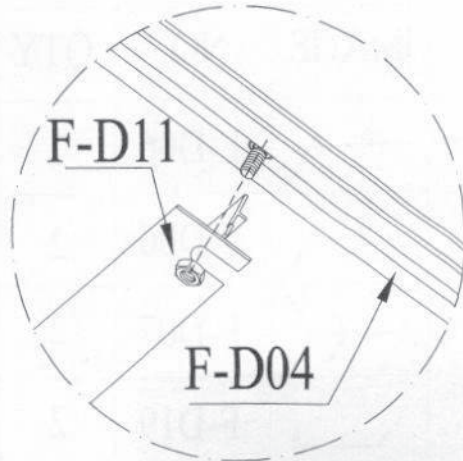
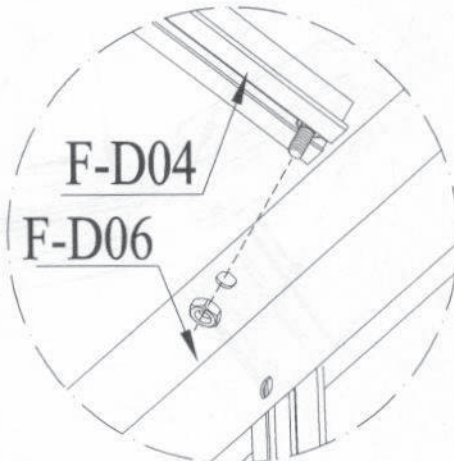
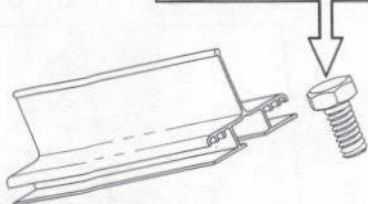



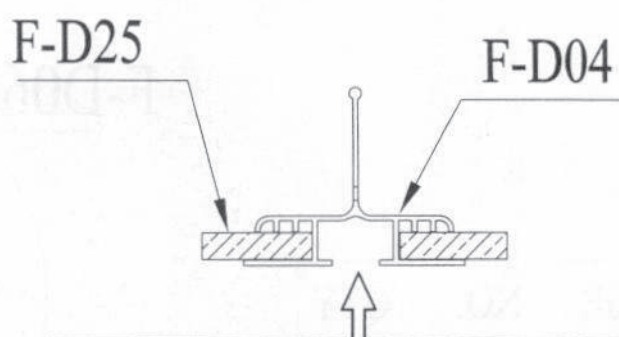
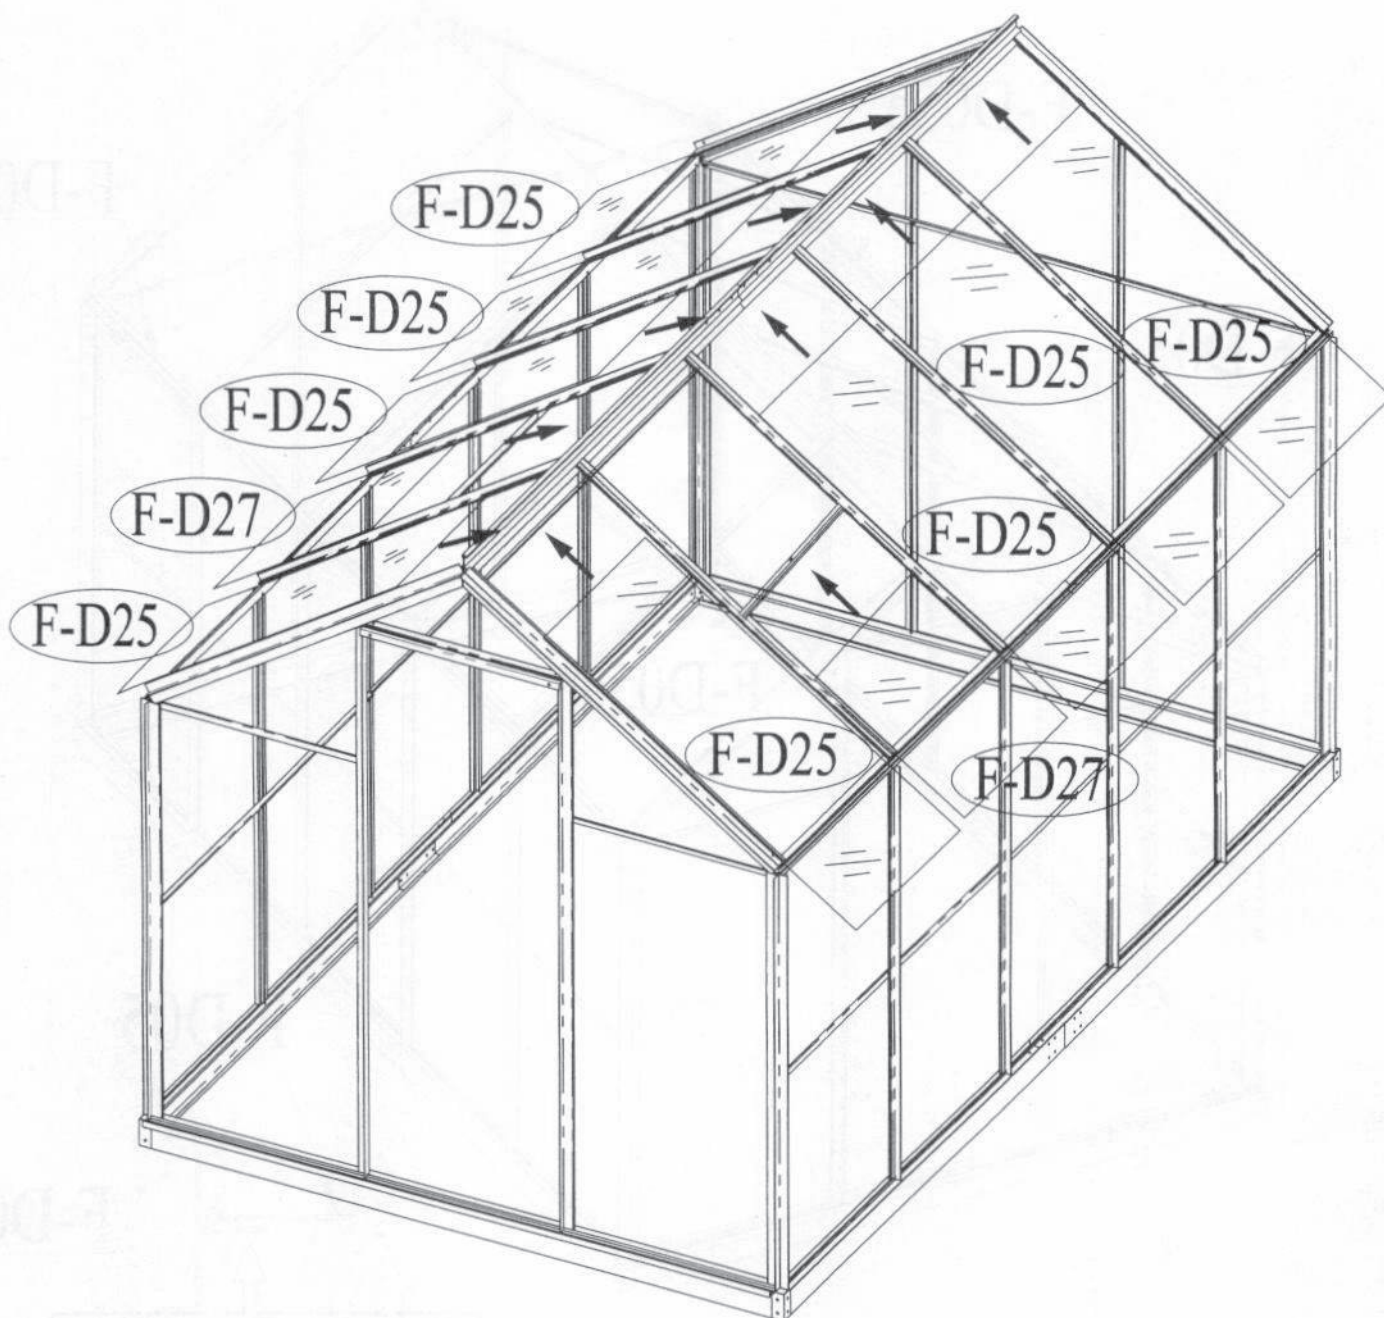


IMAGE	NO.	QTY
	F-D04	8
	F-D11	2
	F-D14	20



Sliding polycarbonate F-D25 in the channel of profile F-D04

IMAGE	NO.	QTY
	F-D27	2
	F-D25	8

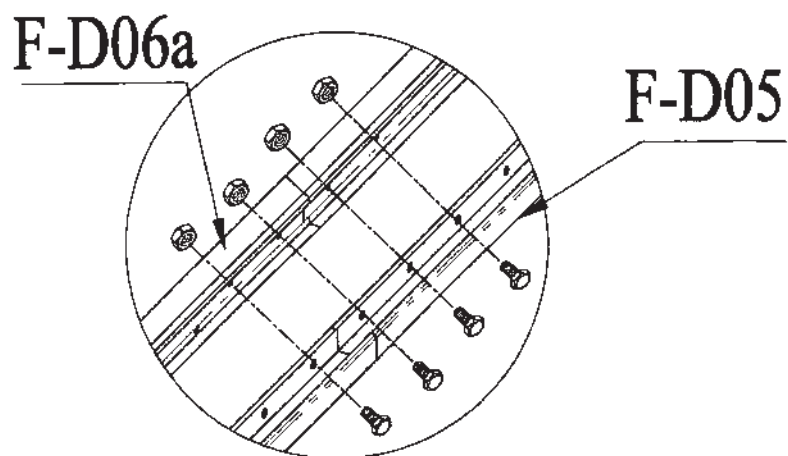
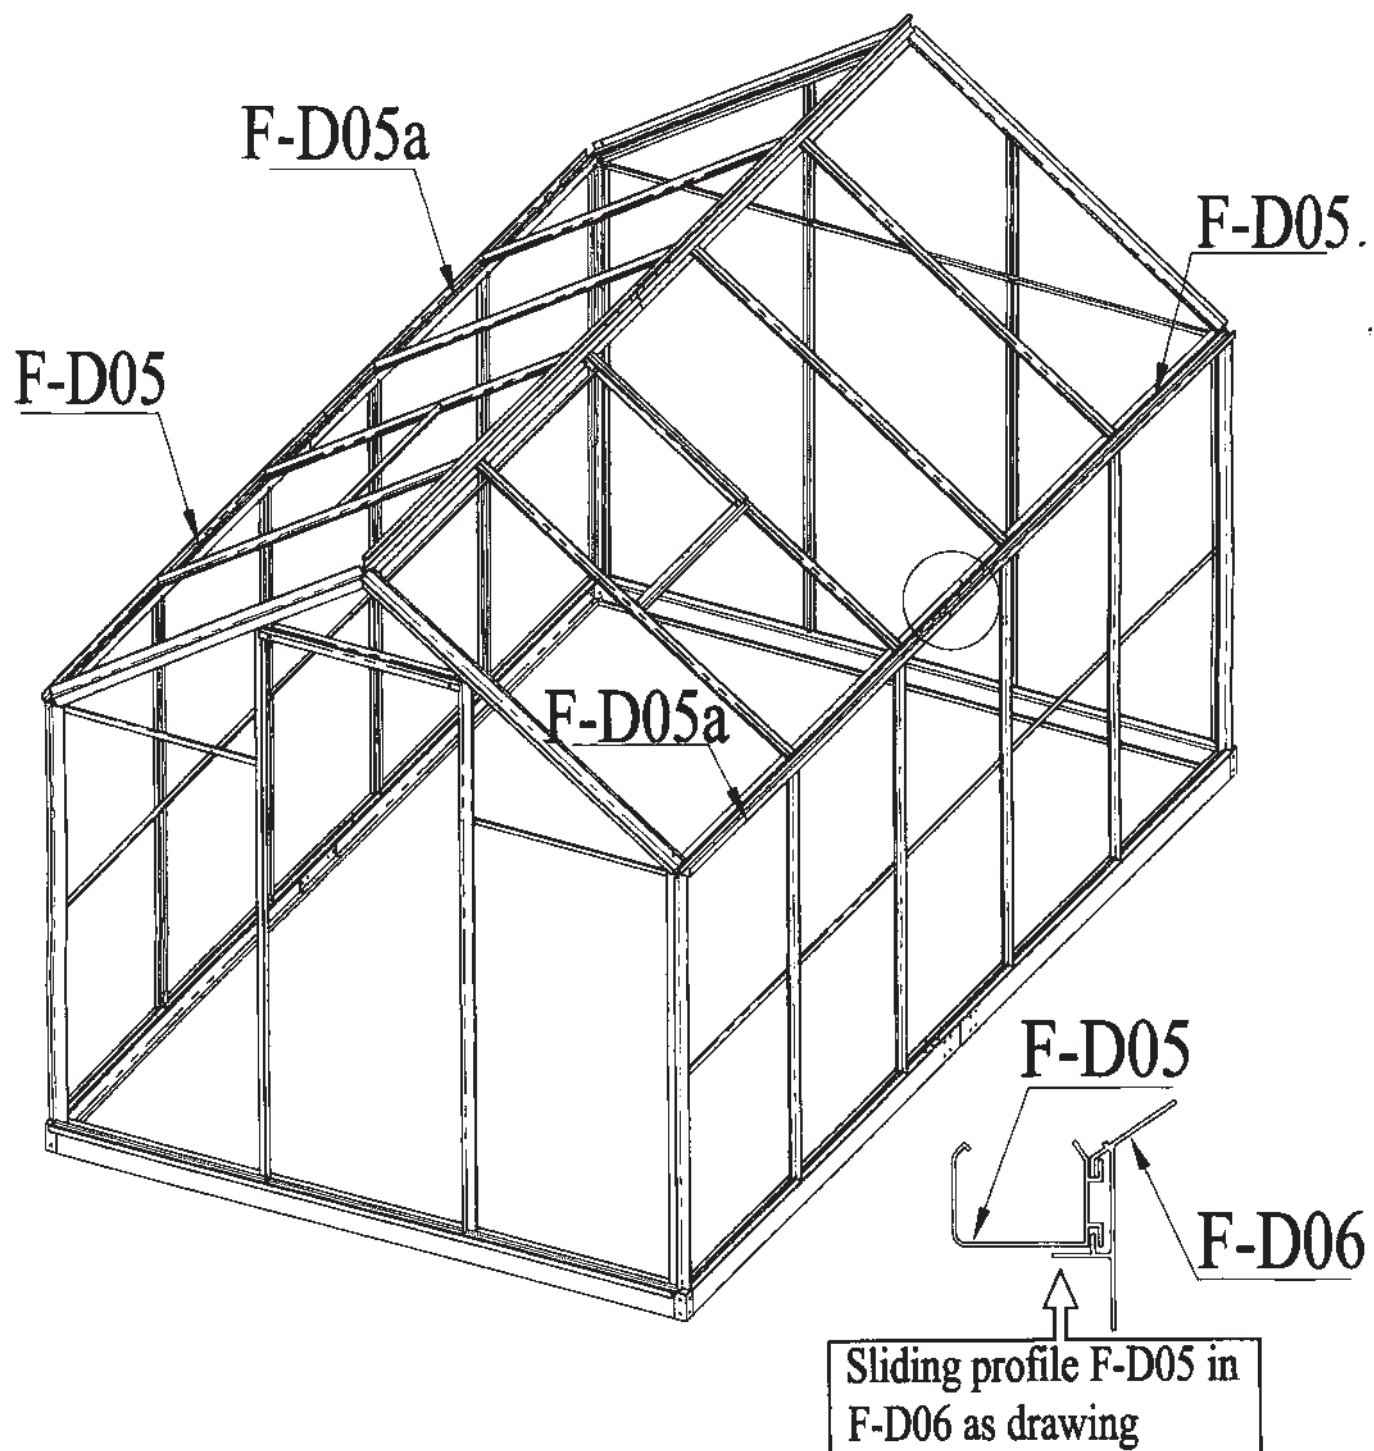





IMAGE	NO.	QTY
	F-D05	2
	F-D05a	2
	F-D14	12

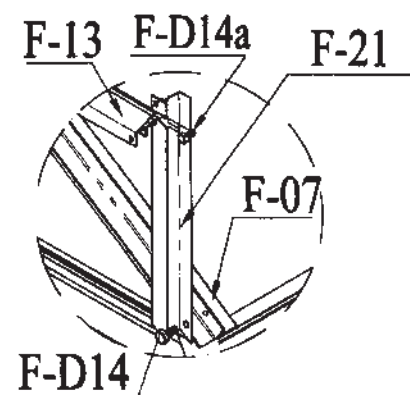
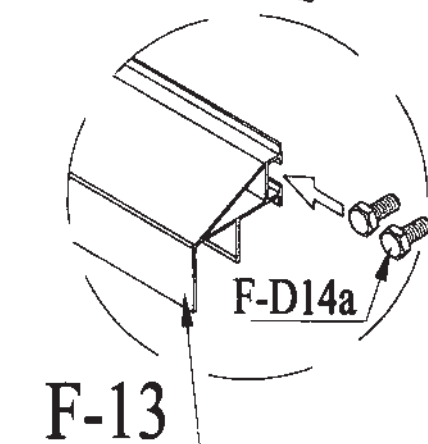
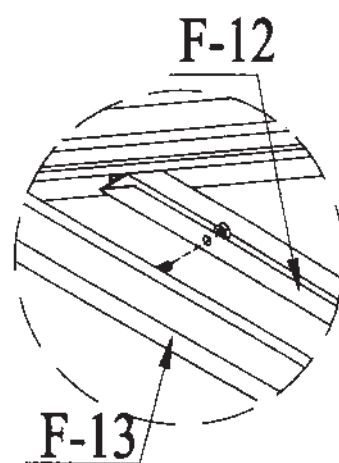
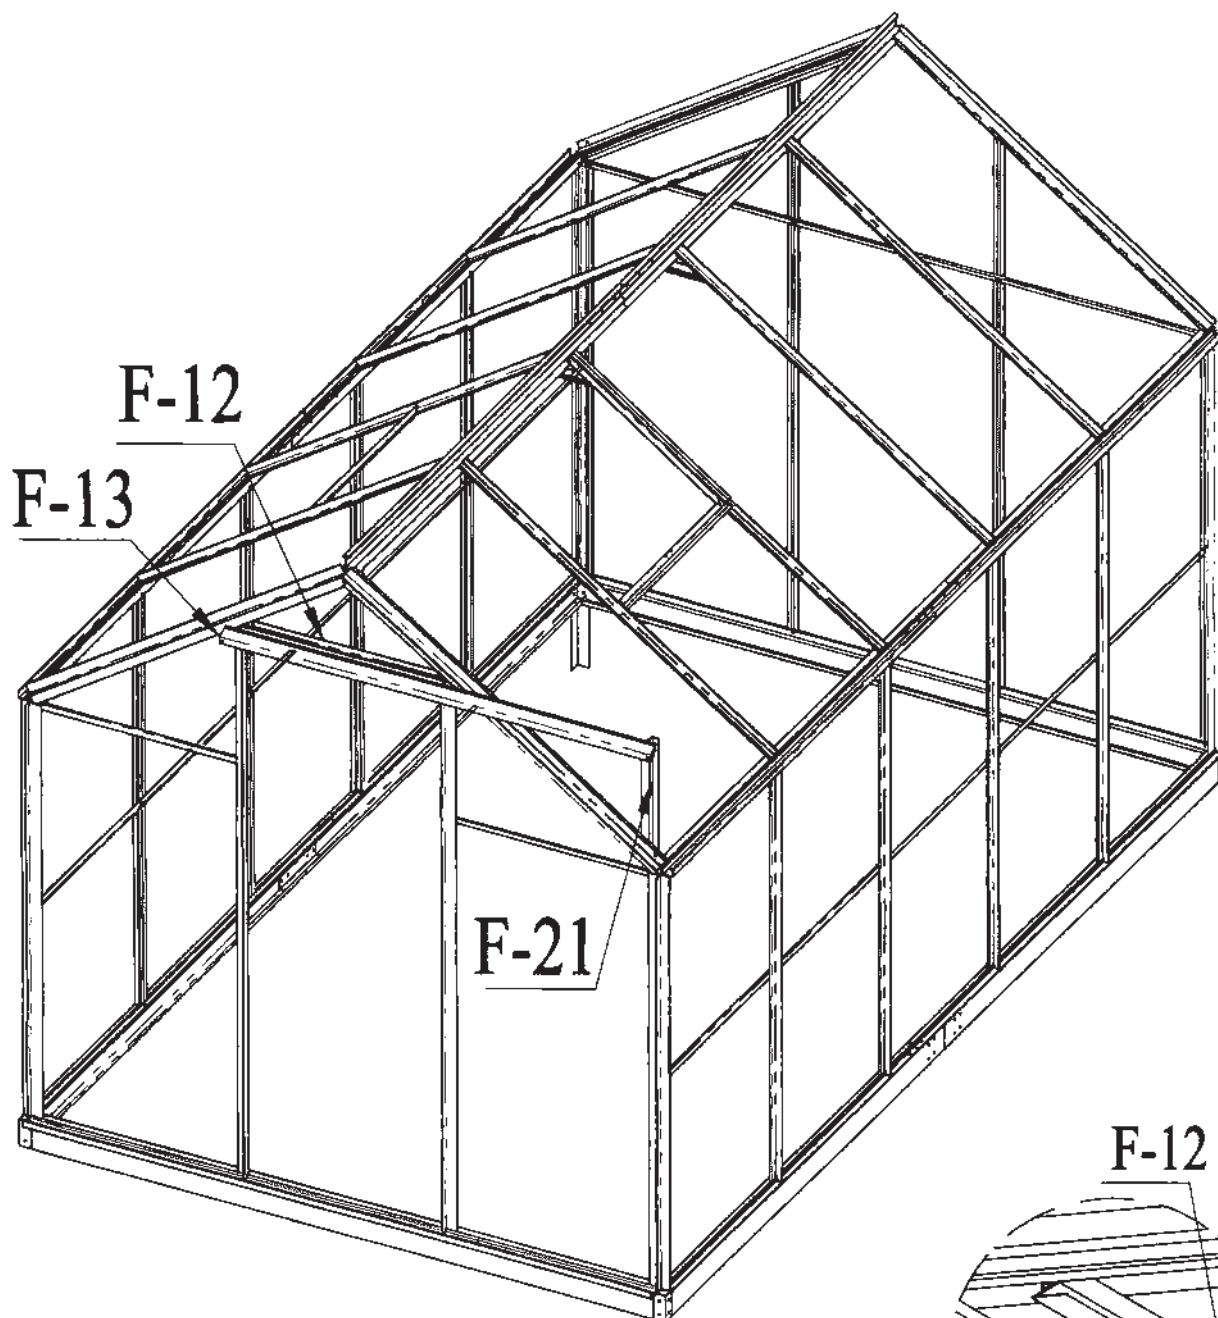







IMAGE	NO.	QTY
	F-D17	4
	F-13	1
	F-21	1
	F-D14	1
	F-D14a	3

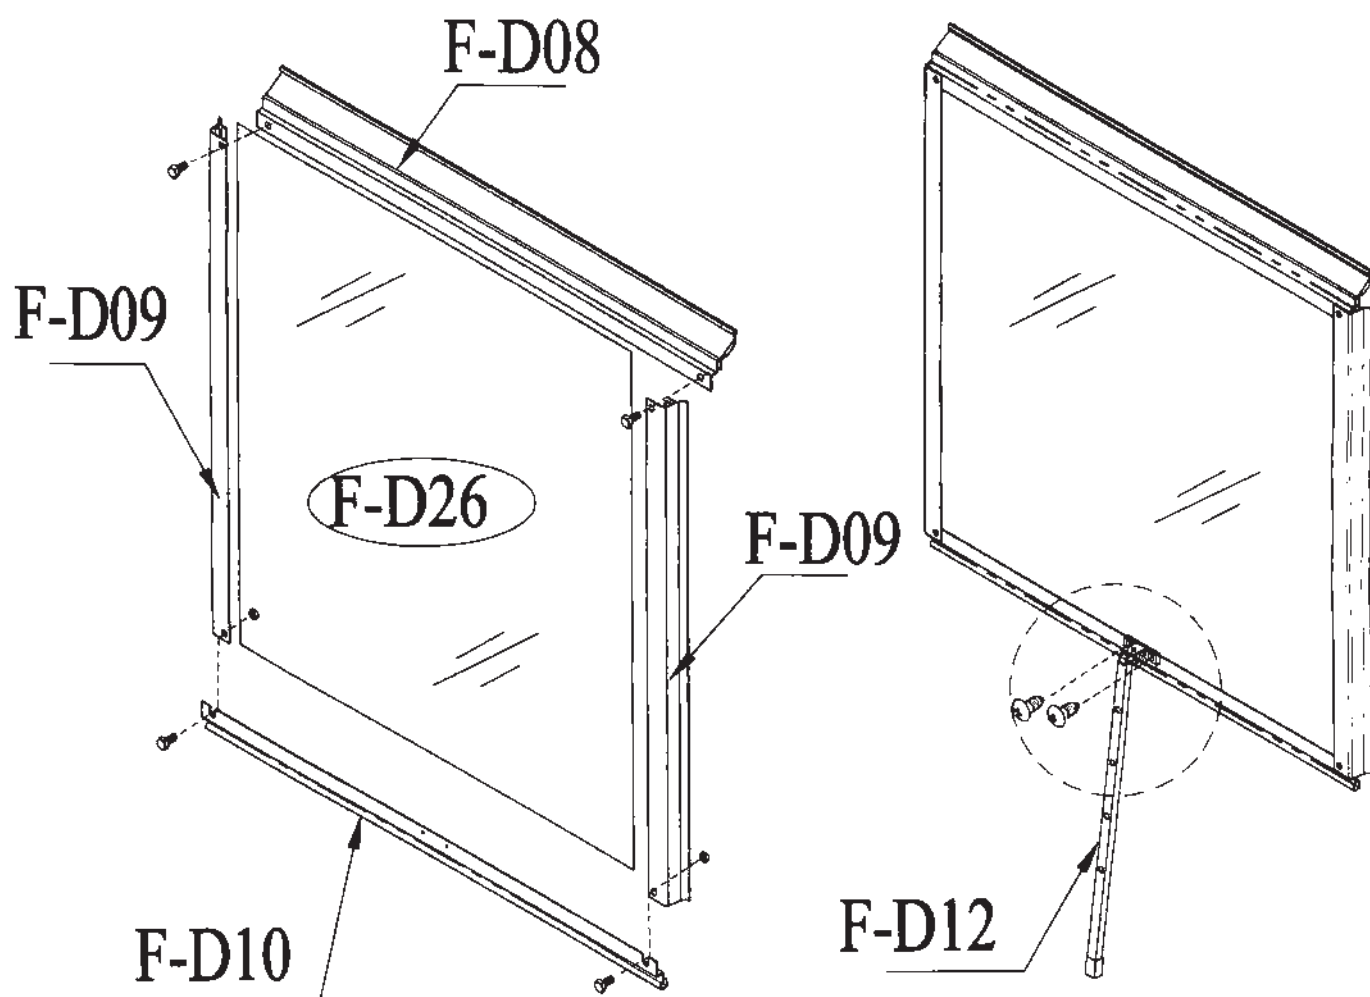







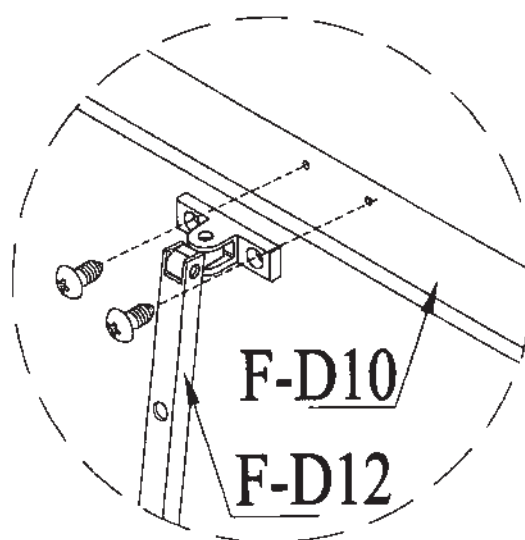
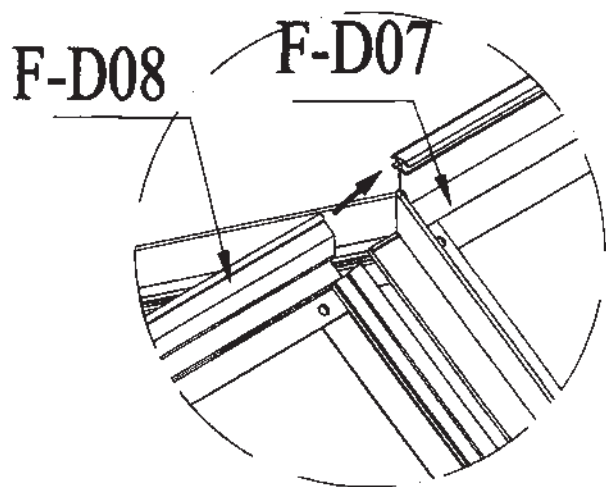
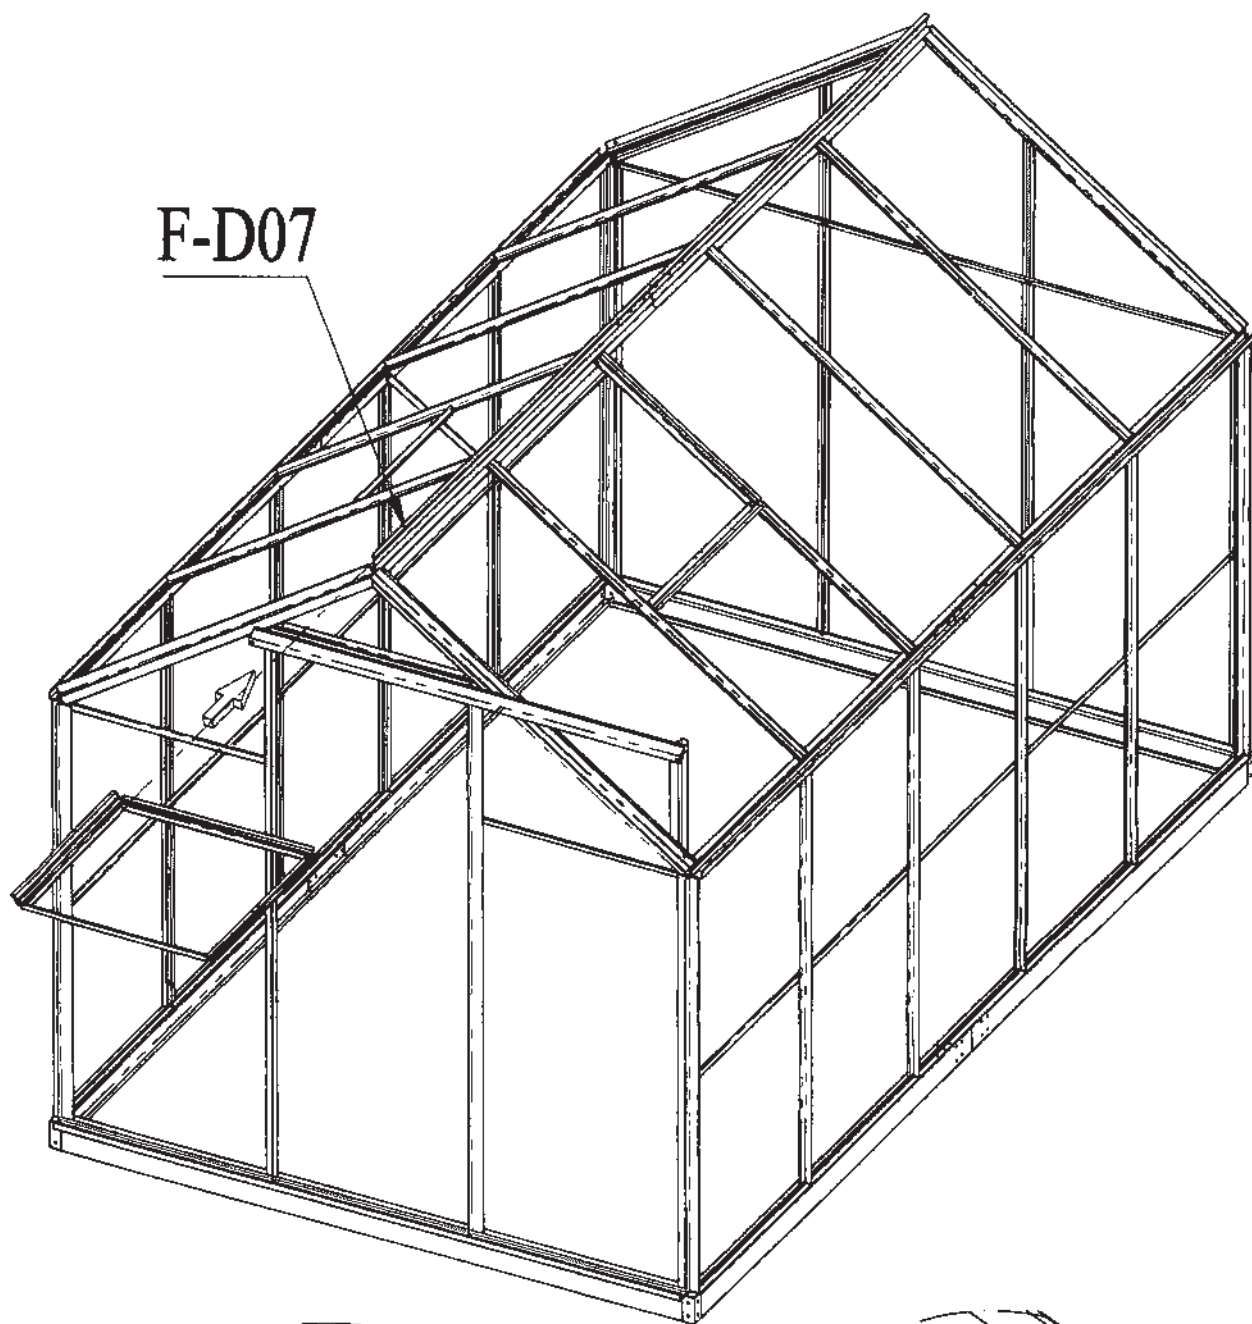
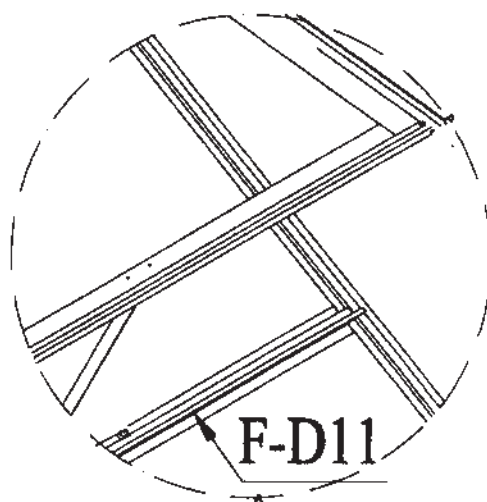


IMAGE	NO.	QTY
	F-D08	2
	F-D09	4
	F-D10	2
	F-D12	2
	F-D26	2
	F-D16	4
	F-D14	8





Slide F-D08 in to the track of F-D07.



Adjust F-D11 into the correct position ,
then tighten with the bolt and nut.

Door

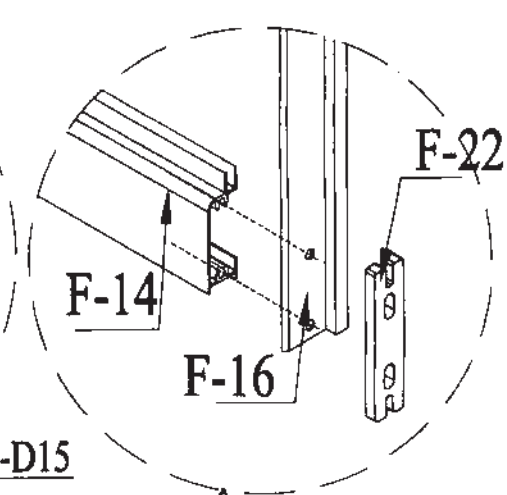
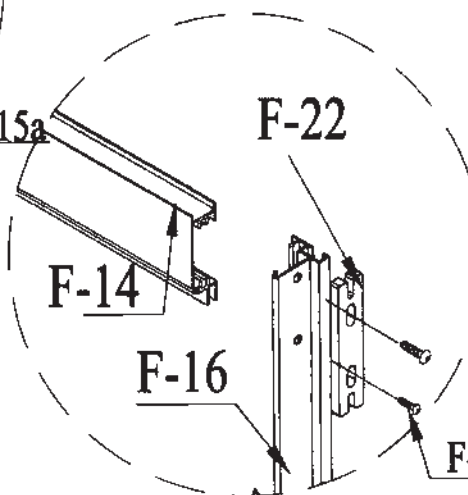
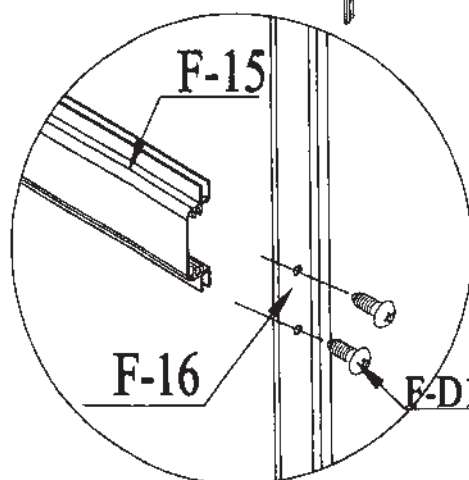
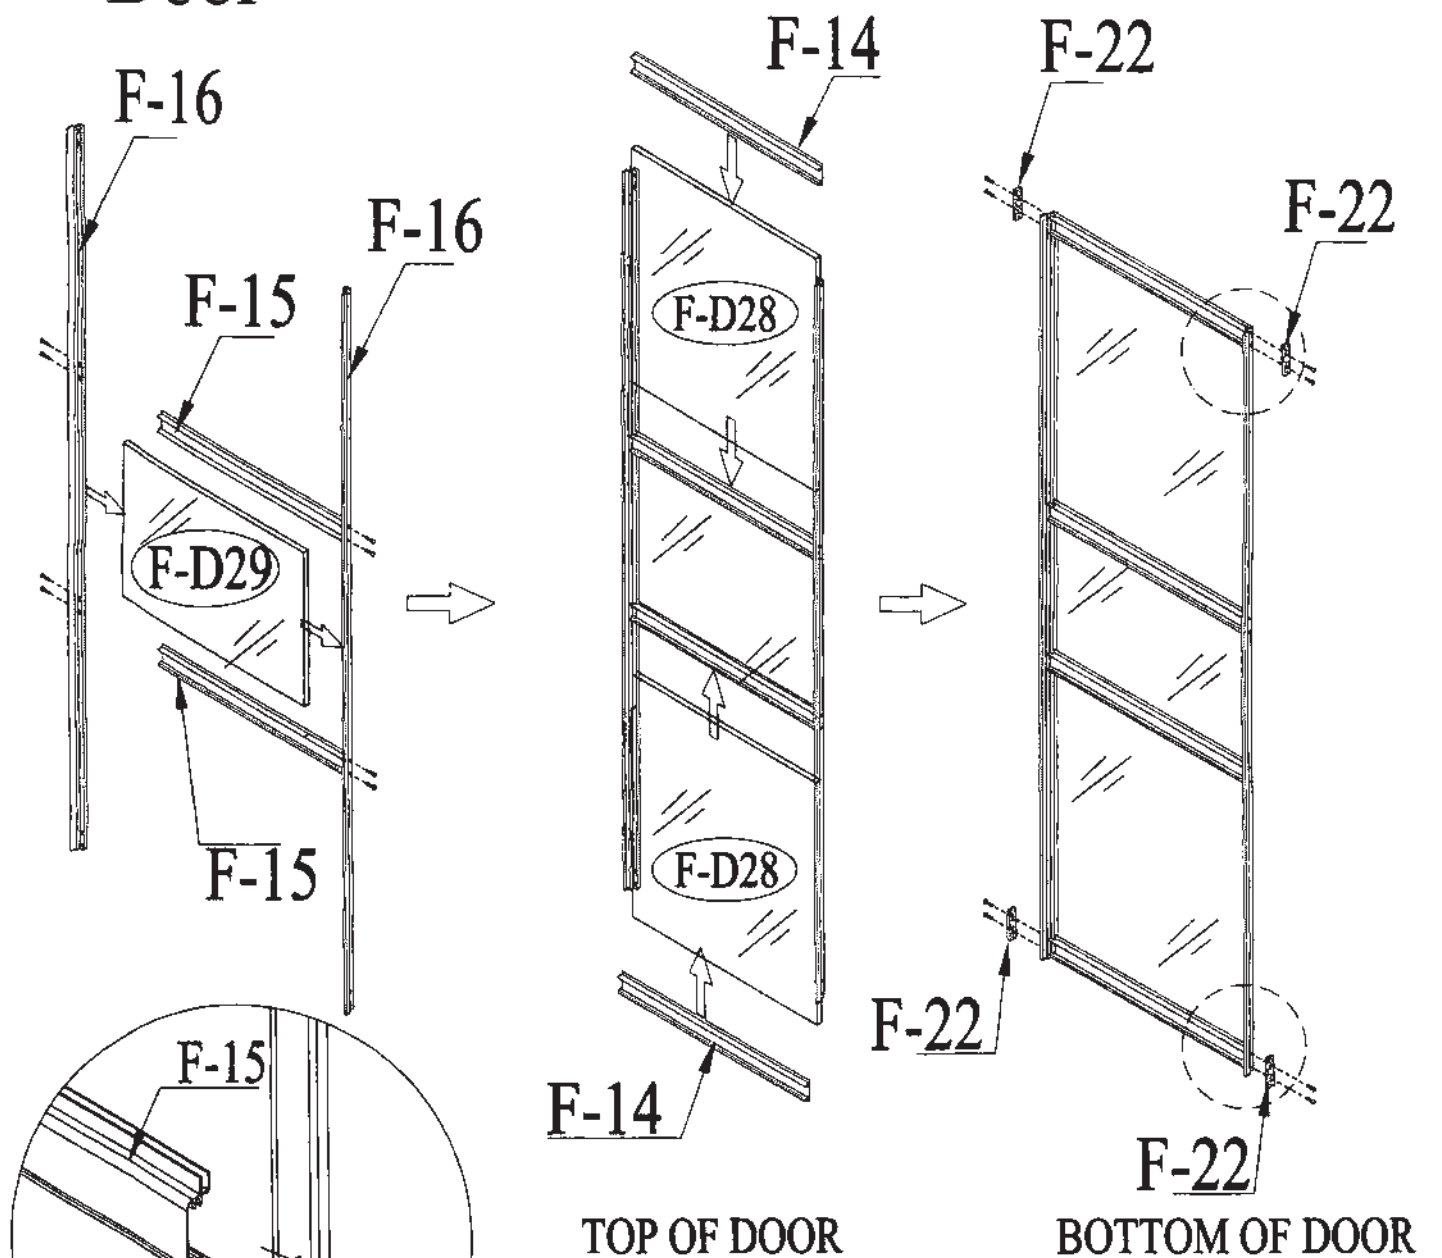


IMAGE	NO.	QTY
	F-16	2
	F-14	2
	F-15	2
	F-22	4
	F-D15	8
	F-D15a	8

Please install plastic piece F-22 in the direction of the image.

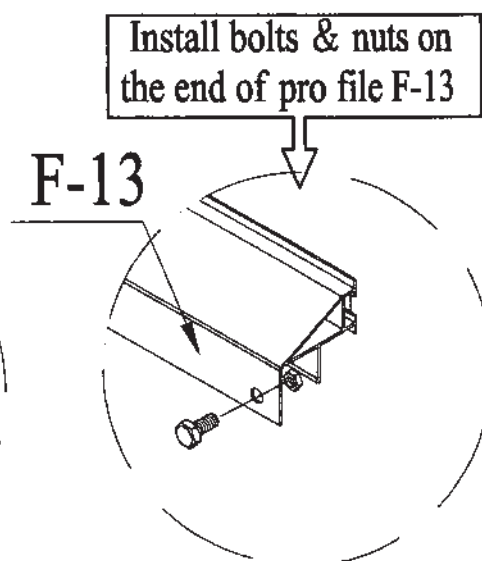
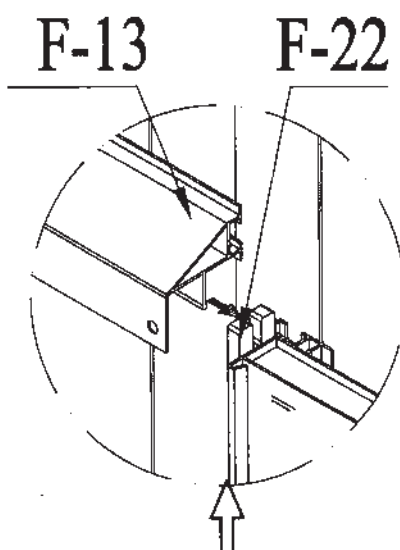
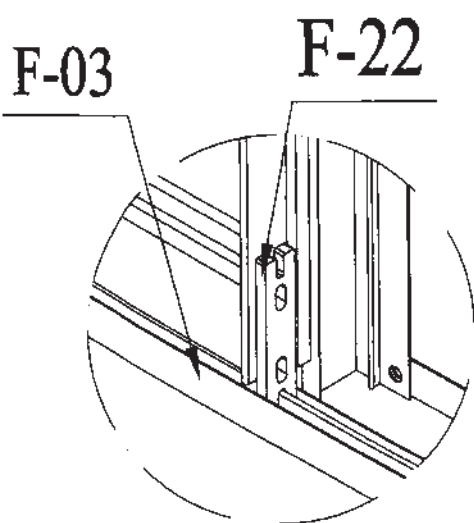
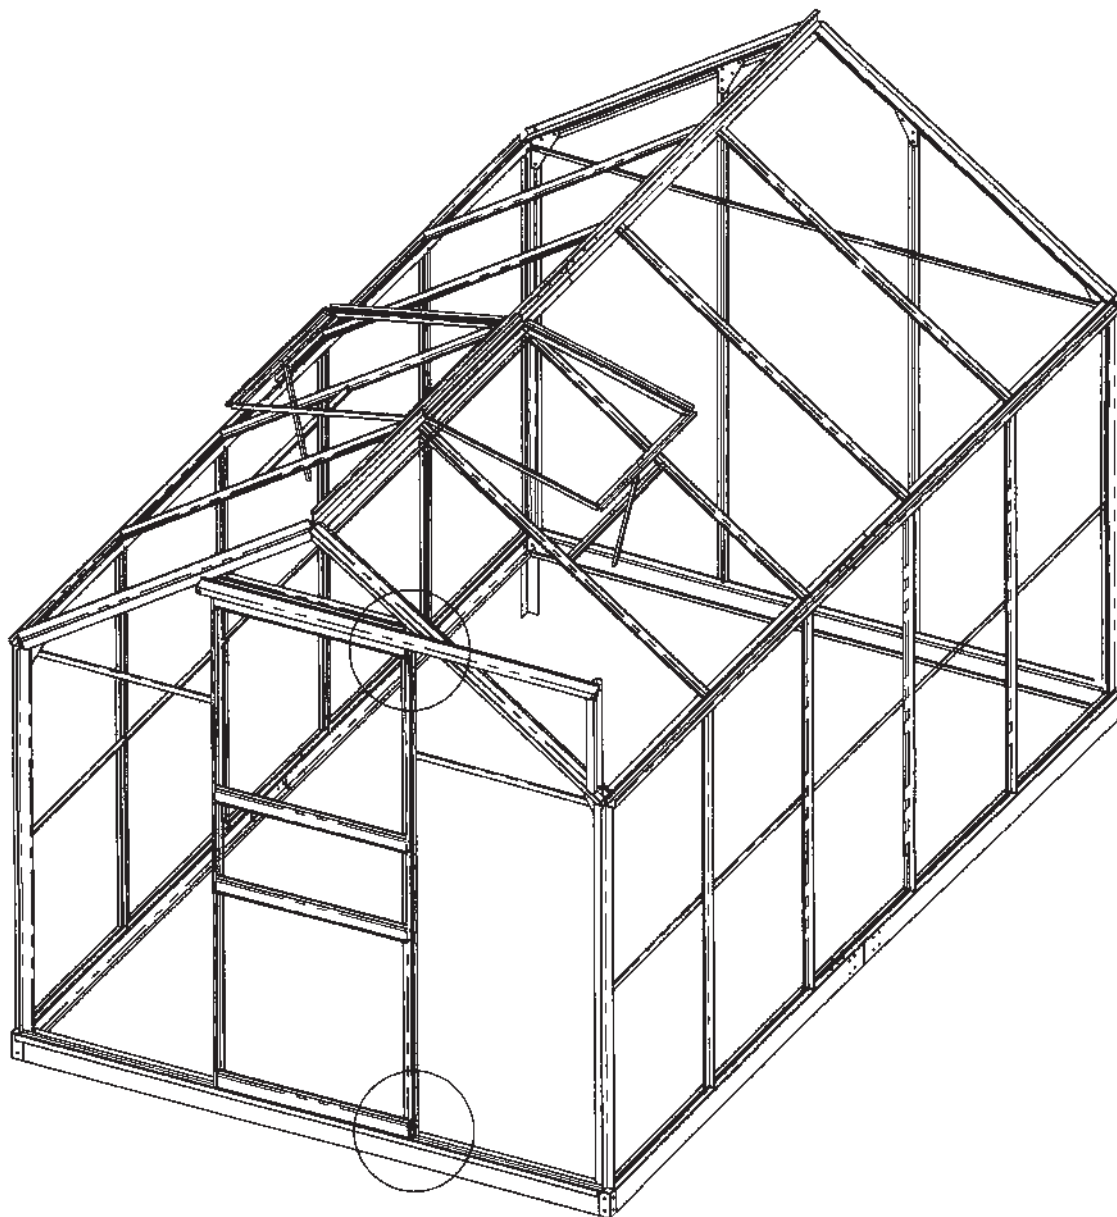

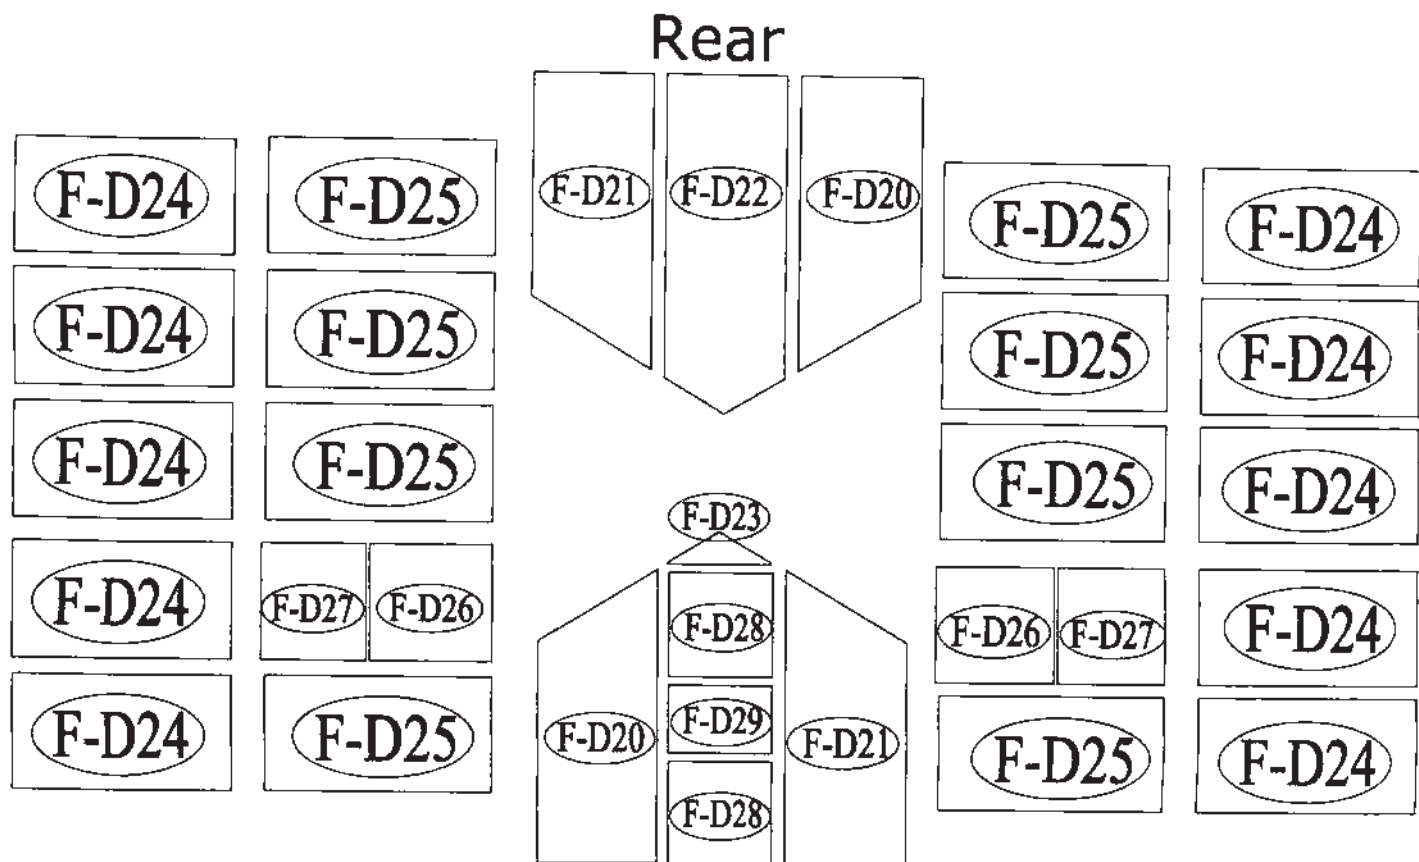


IMAGE	NO.	QTY
	F-D14	2

Plastic parts F-22 is adjustable to up or down



Notes:

1. Remove approximately 2 inches of film from all sheet edges before installing. remove all film immediately after the constructions completed.
2. The UV-protected side of the sheet is covered with opal white film and must face towards the sun.

